


# FPS Series

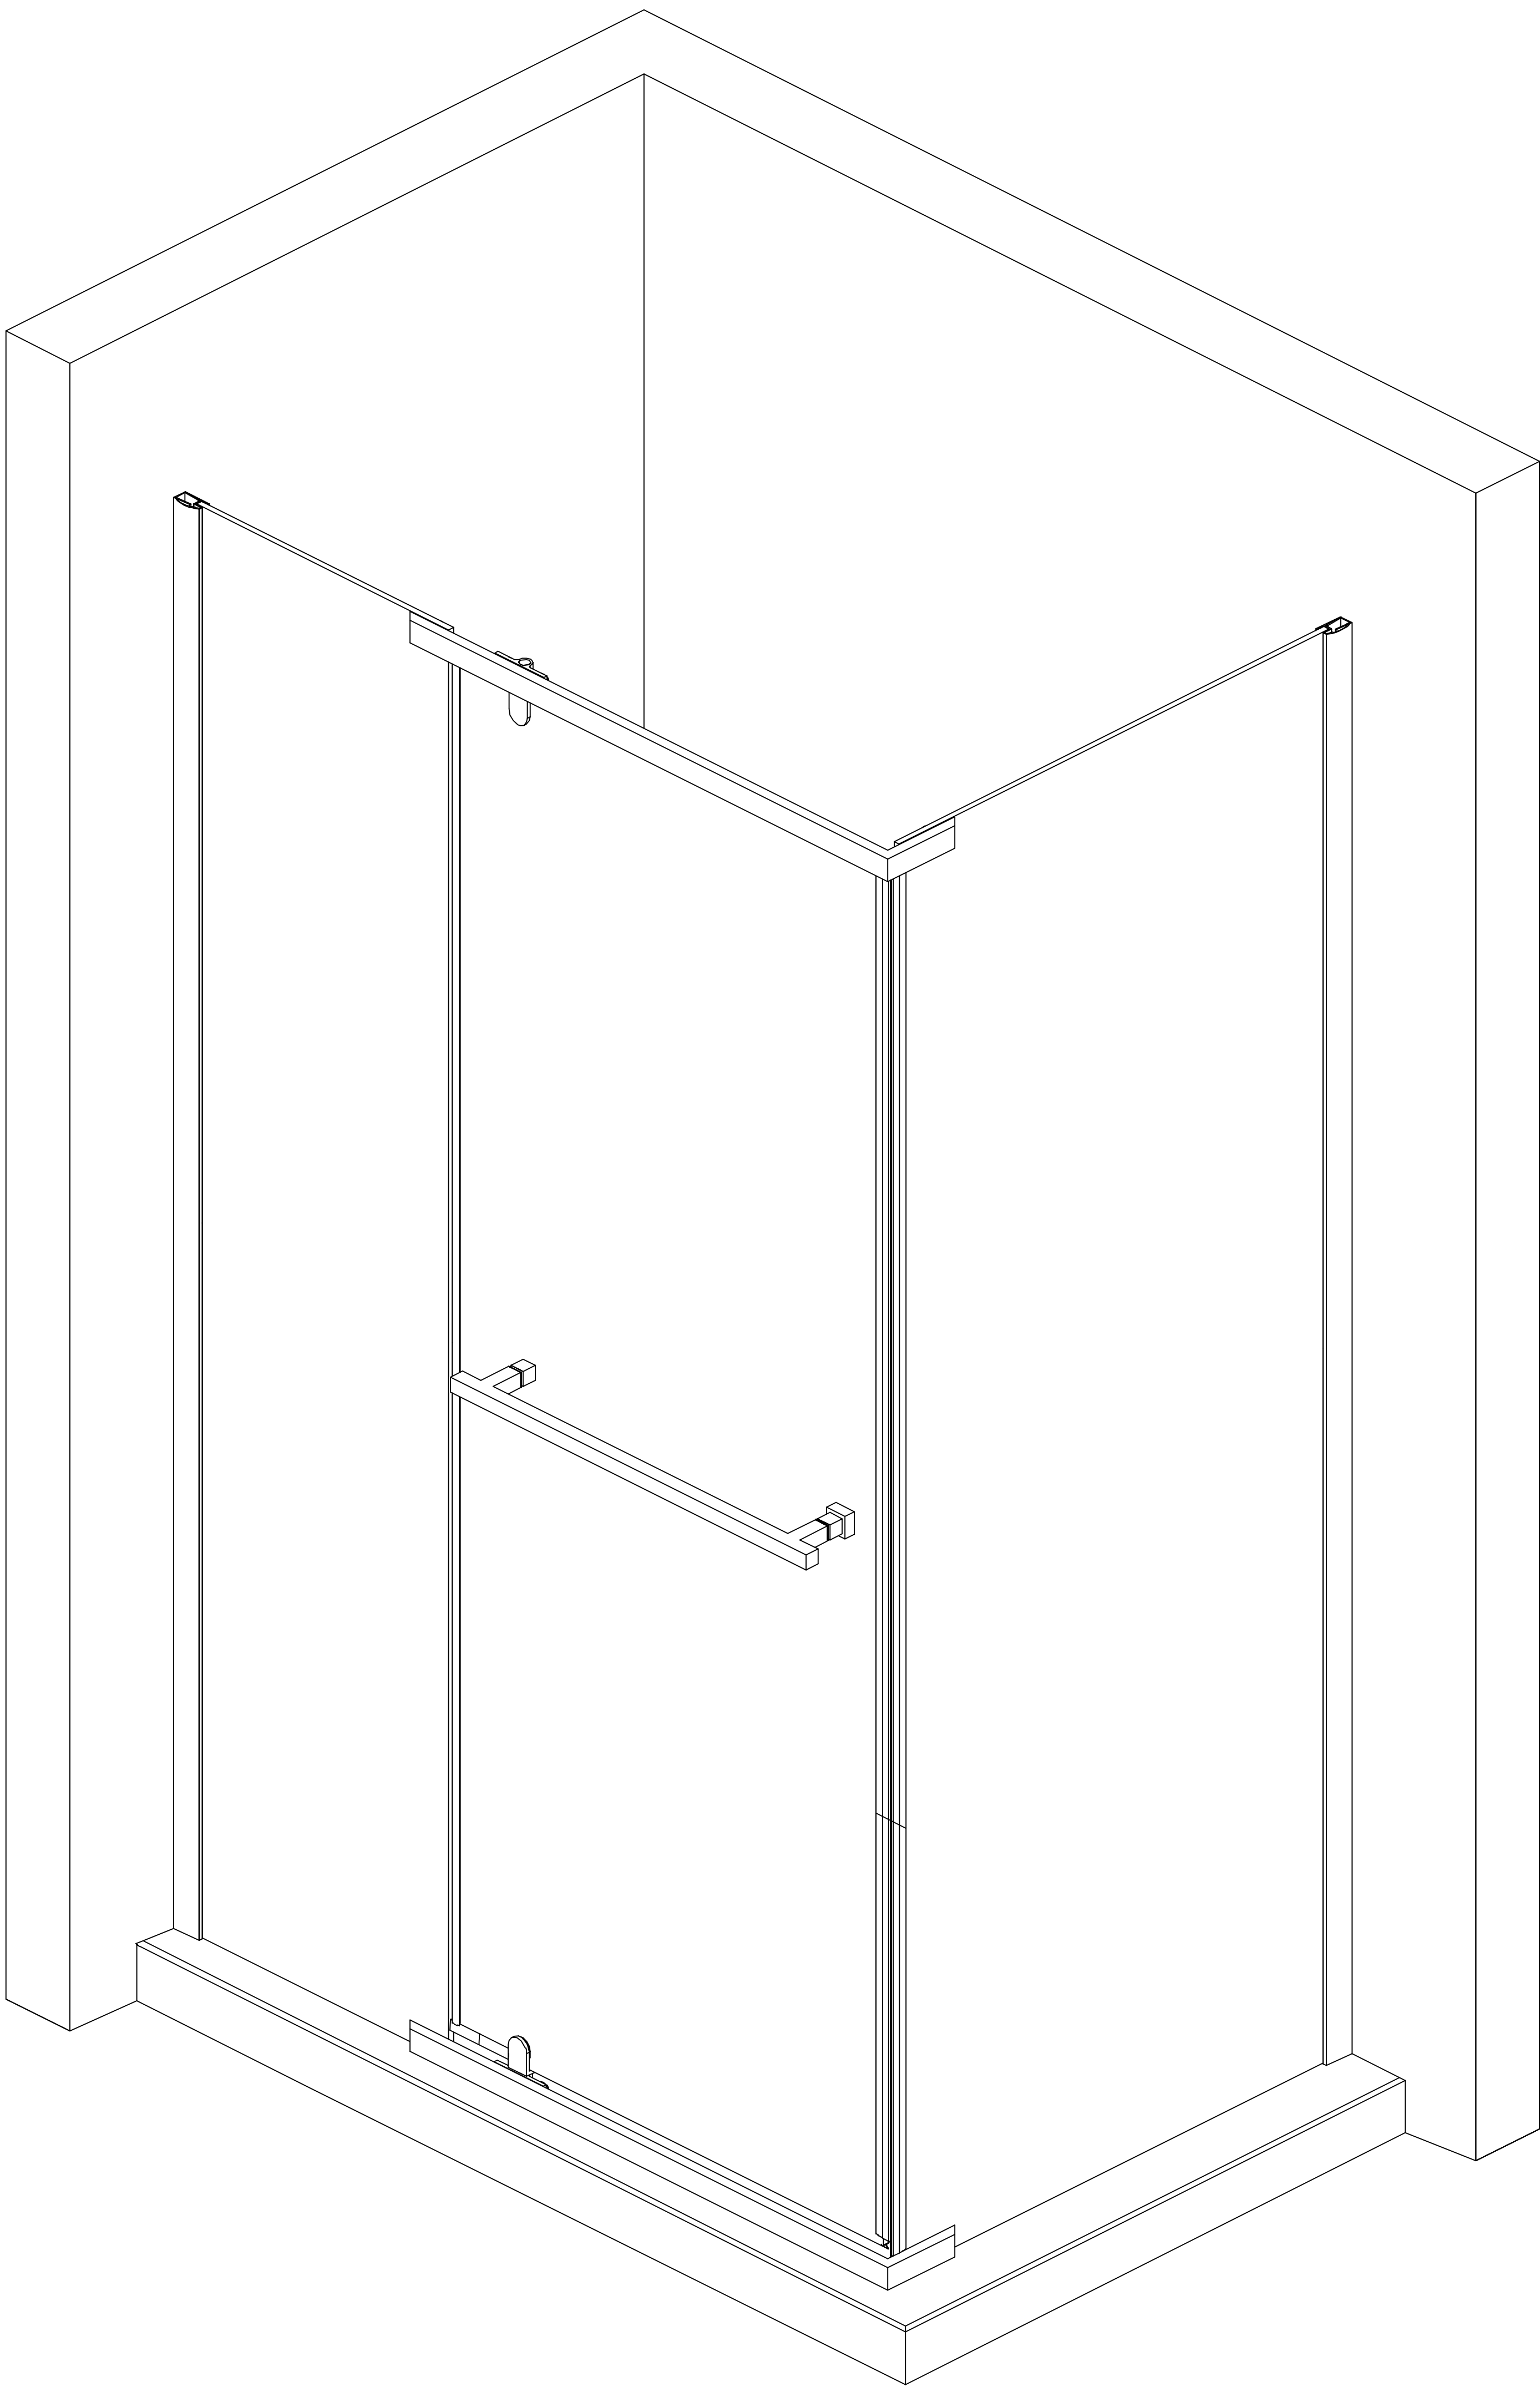

◆ **General information**

Please inspect the product immediately upon receipt for transit damage, missing packs/parts or manufacturing fault. Damage reported later cannot be accepted. Please handle the product with care avoiding knocks and shock loading to all sides and edges of the glass.











**Note: Safety glass can not be re-worked.**

- Please read these instructions carefully before start of installation.
- Special care should be taken when drilling walls to avoid hidden pipes or electrical cables.
- Note: this product is heavy and required two persons install.


**Aftercare instructions**

- After use, your shower should be cleaned with soap and water. This is particularly important in hard water districts where insoluble lime salts may be deposited and allowed to build up.
- Cleaners of gritty or abrasive nature should not be used. Care should be taken to avoid contact with strong chemicals such as organic solvents and strippers.
- Glass cleaners can be used but with caution, if in doubt contact the manufacturer of the cleaner in question.
- Please keep these instructions for aftercare and customer service details.

**TOOLS REQUIRED**

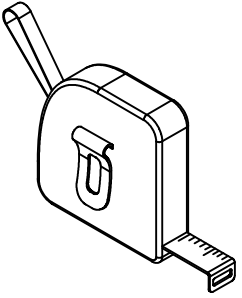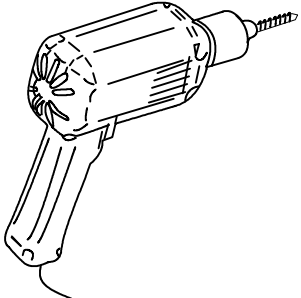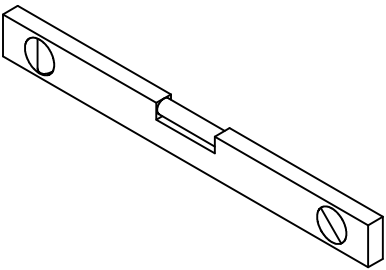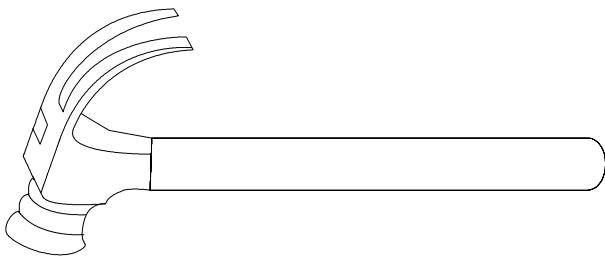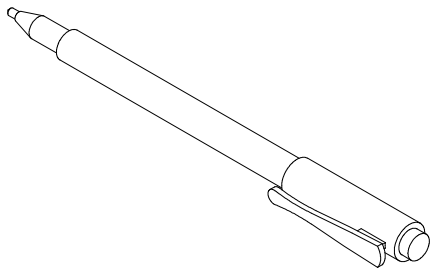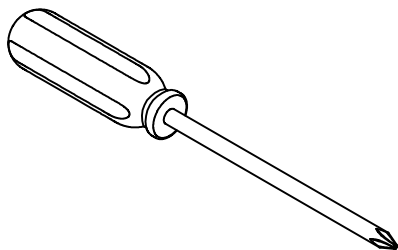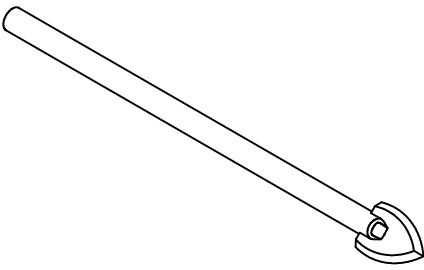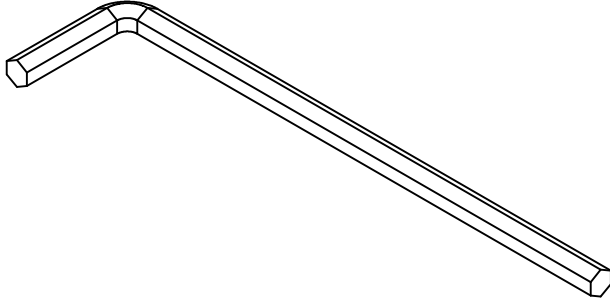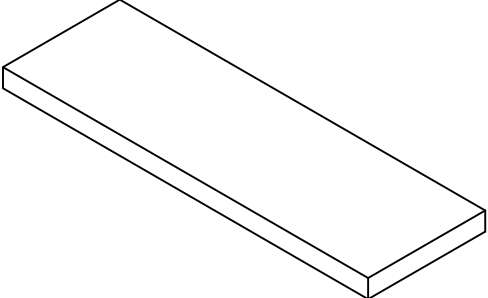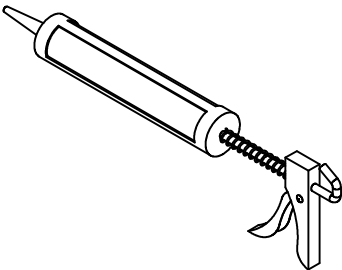DESCRIPTION	PART IMAGE	DESCRIPTION	PART IMAGE
Tape measure		Drill	
Spirit level		Hammer	
Pencil		Cross head Screwdriver	
Ø6/3.2mm Drill bit		Inner hexagon Spanner	
20mm Thick board		Silicone Sealant	





# ASSEMBLY INSTRUCTIONS-DRAWING

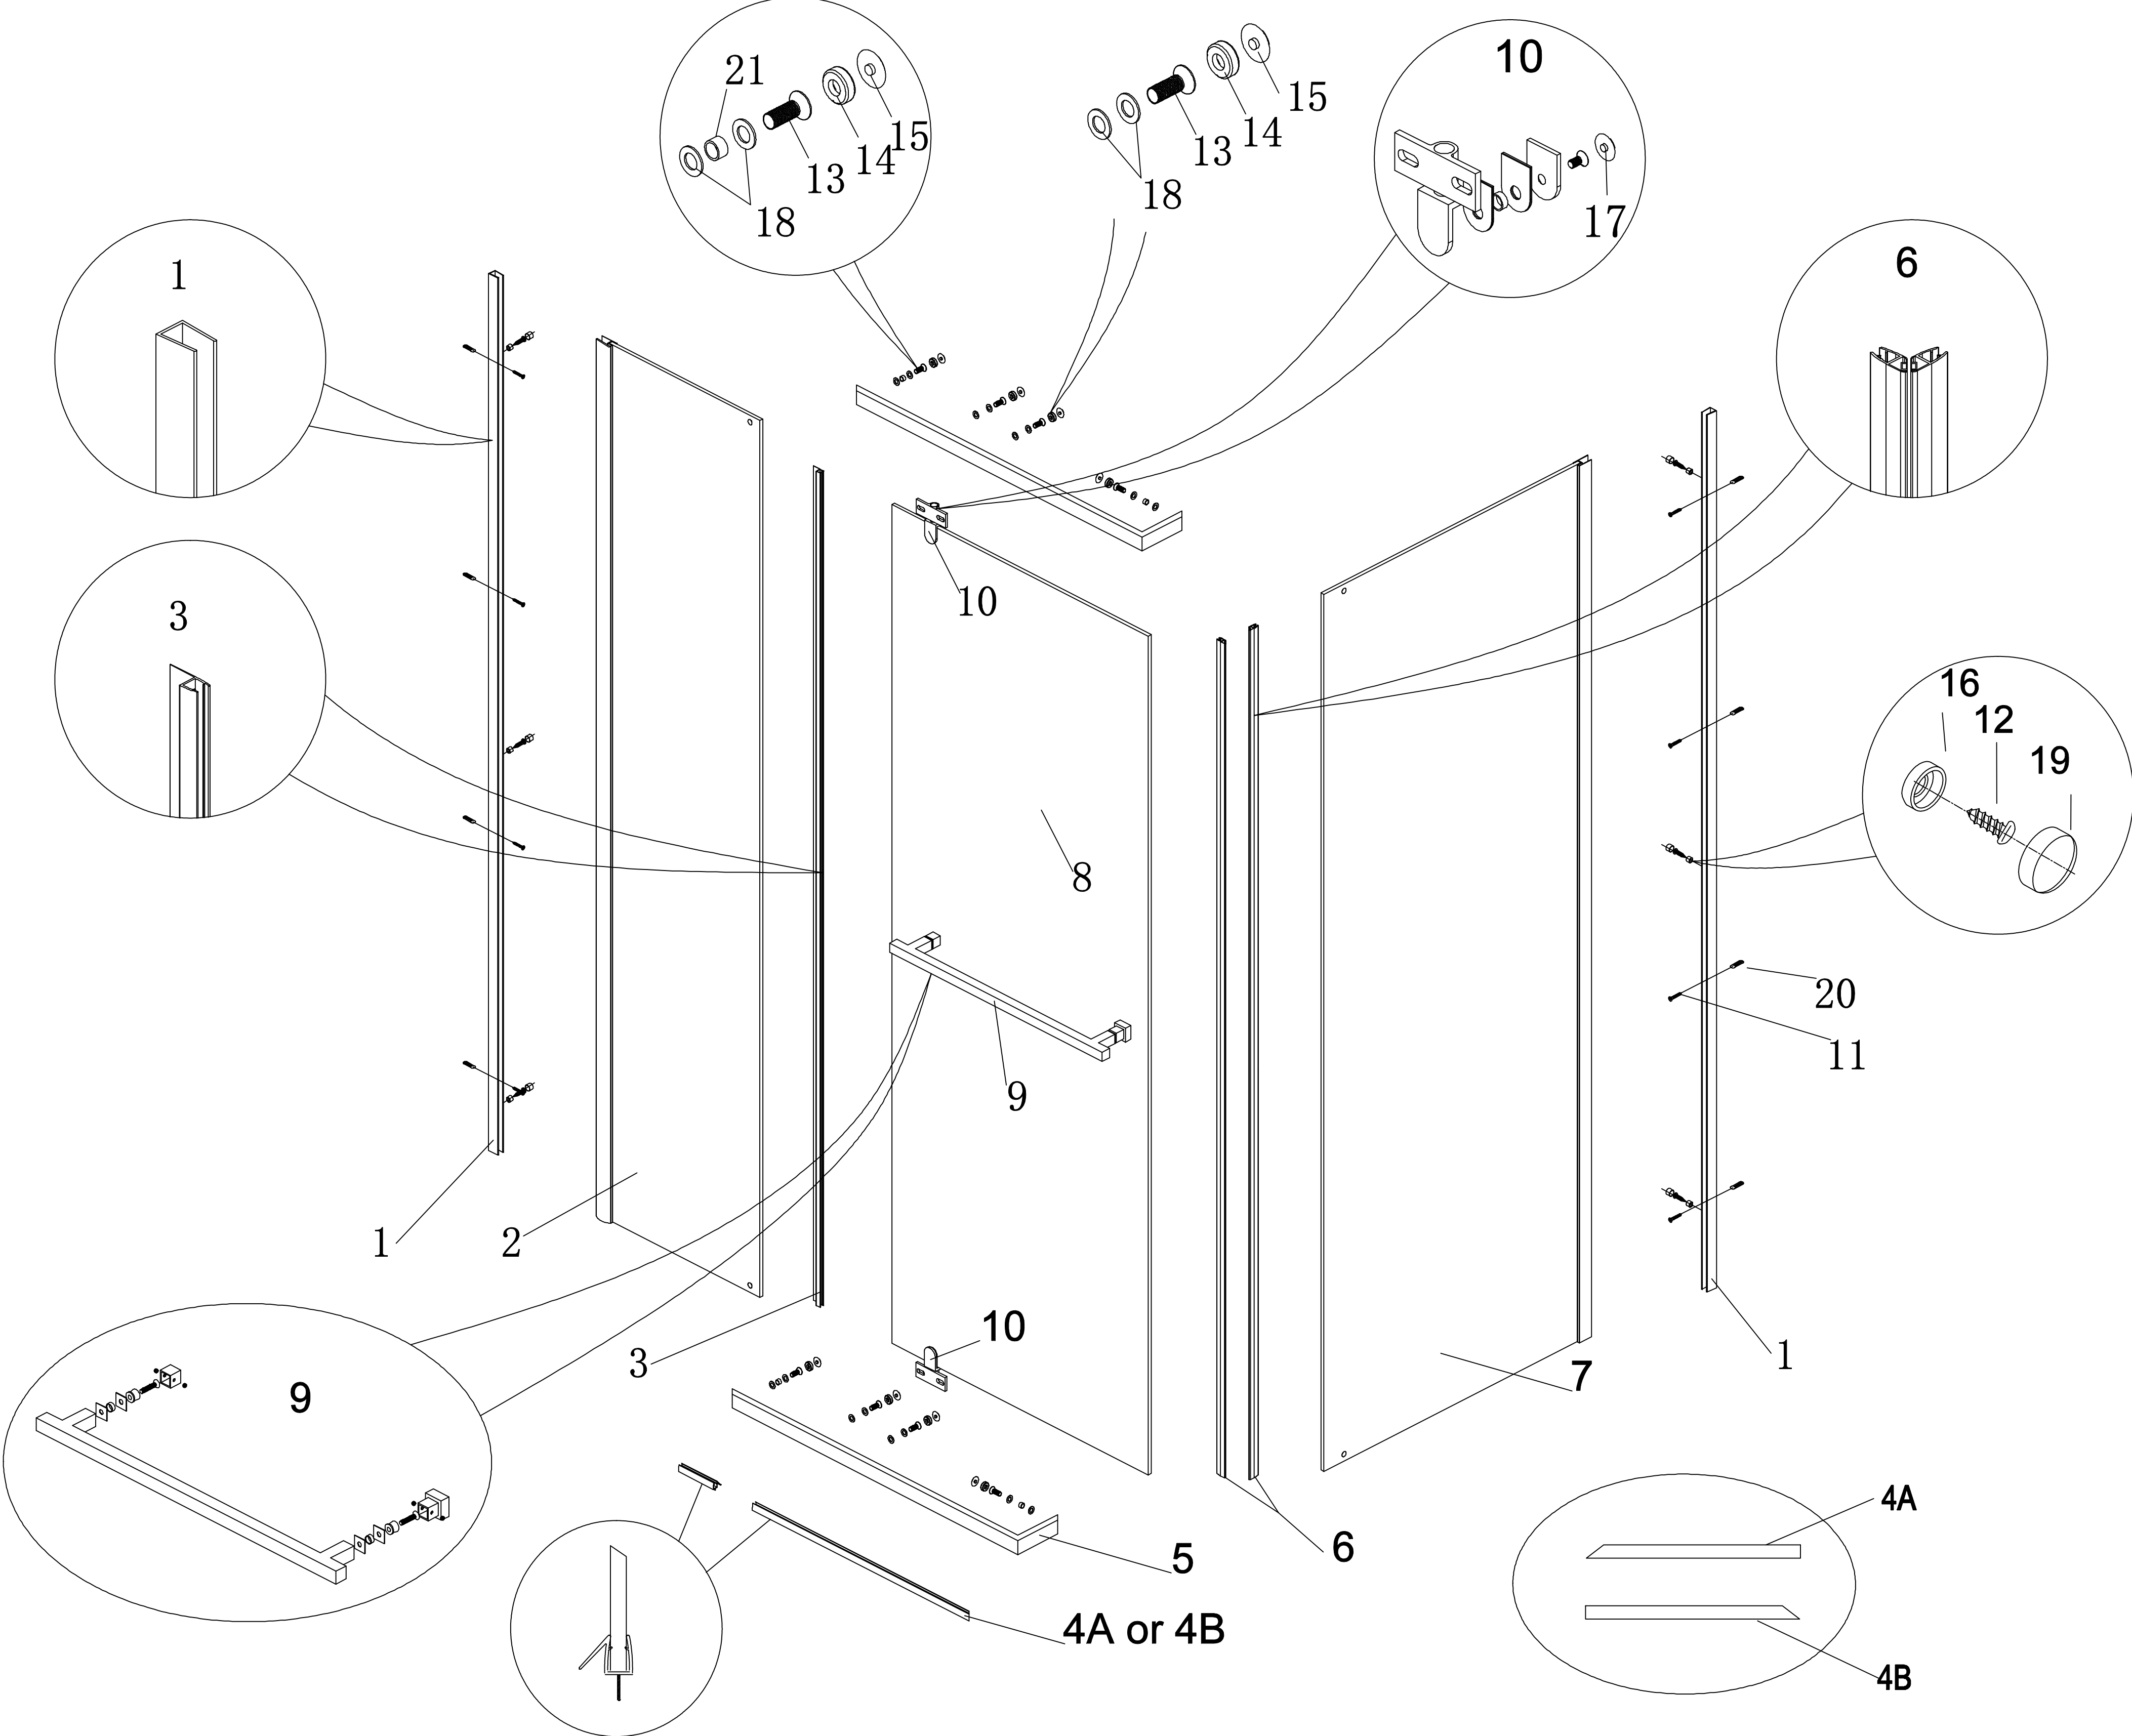


NO.	Description	QTY	Diagram
1	Wall channel	2	
2	Sationary panel Left	1	
3	Bottom drip seal	1	
4A	Bottom drip seal-Left	1	
4B	Bottom drip seal-Right	1	
5	Door pull bar	2	
6	Magnetic door seal strip	2	
7	Side glass door panel	1	
8	Glass door panel	1	
9	Door handle	1	
10	Glass clamp	2	

NO.	Description	QTY	Diagram
11	ST4x30 truss head screw	8	
12	ST4.2x10 self-drilling screw	6	
13	M8x18 screw	8	
14	M8 screw washer	8	
15	M8 screw cover	8	
16	Cover A for ST4x10 self-drilling screw	6	
17	Cover for clamp screw	2	
18	M8 Plastic washer	16	
19	Cover B for ST4.2x10 self-drilling screw	6	
20	Expansion sleeve	8	
21	M8x22 plastic sleeve	4	


Step 1

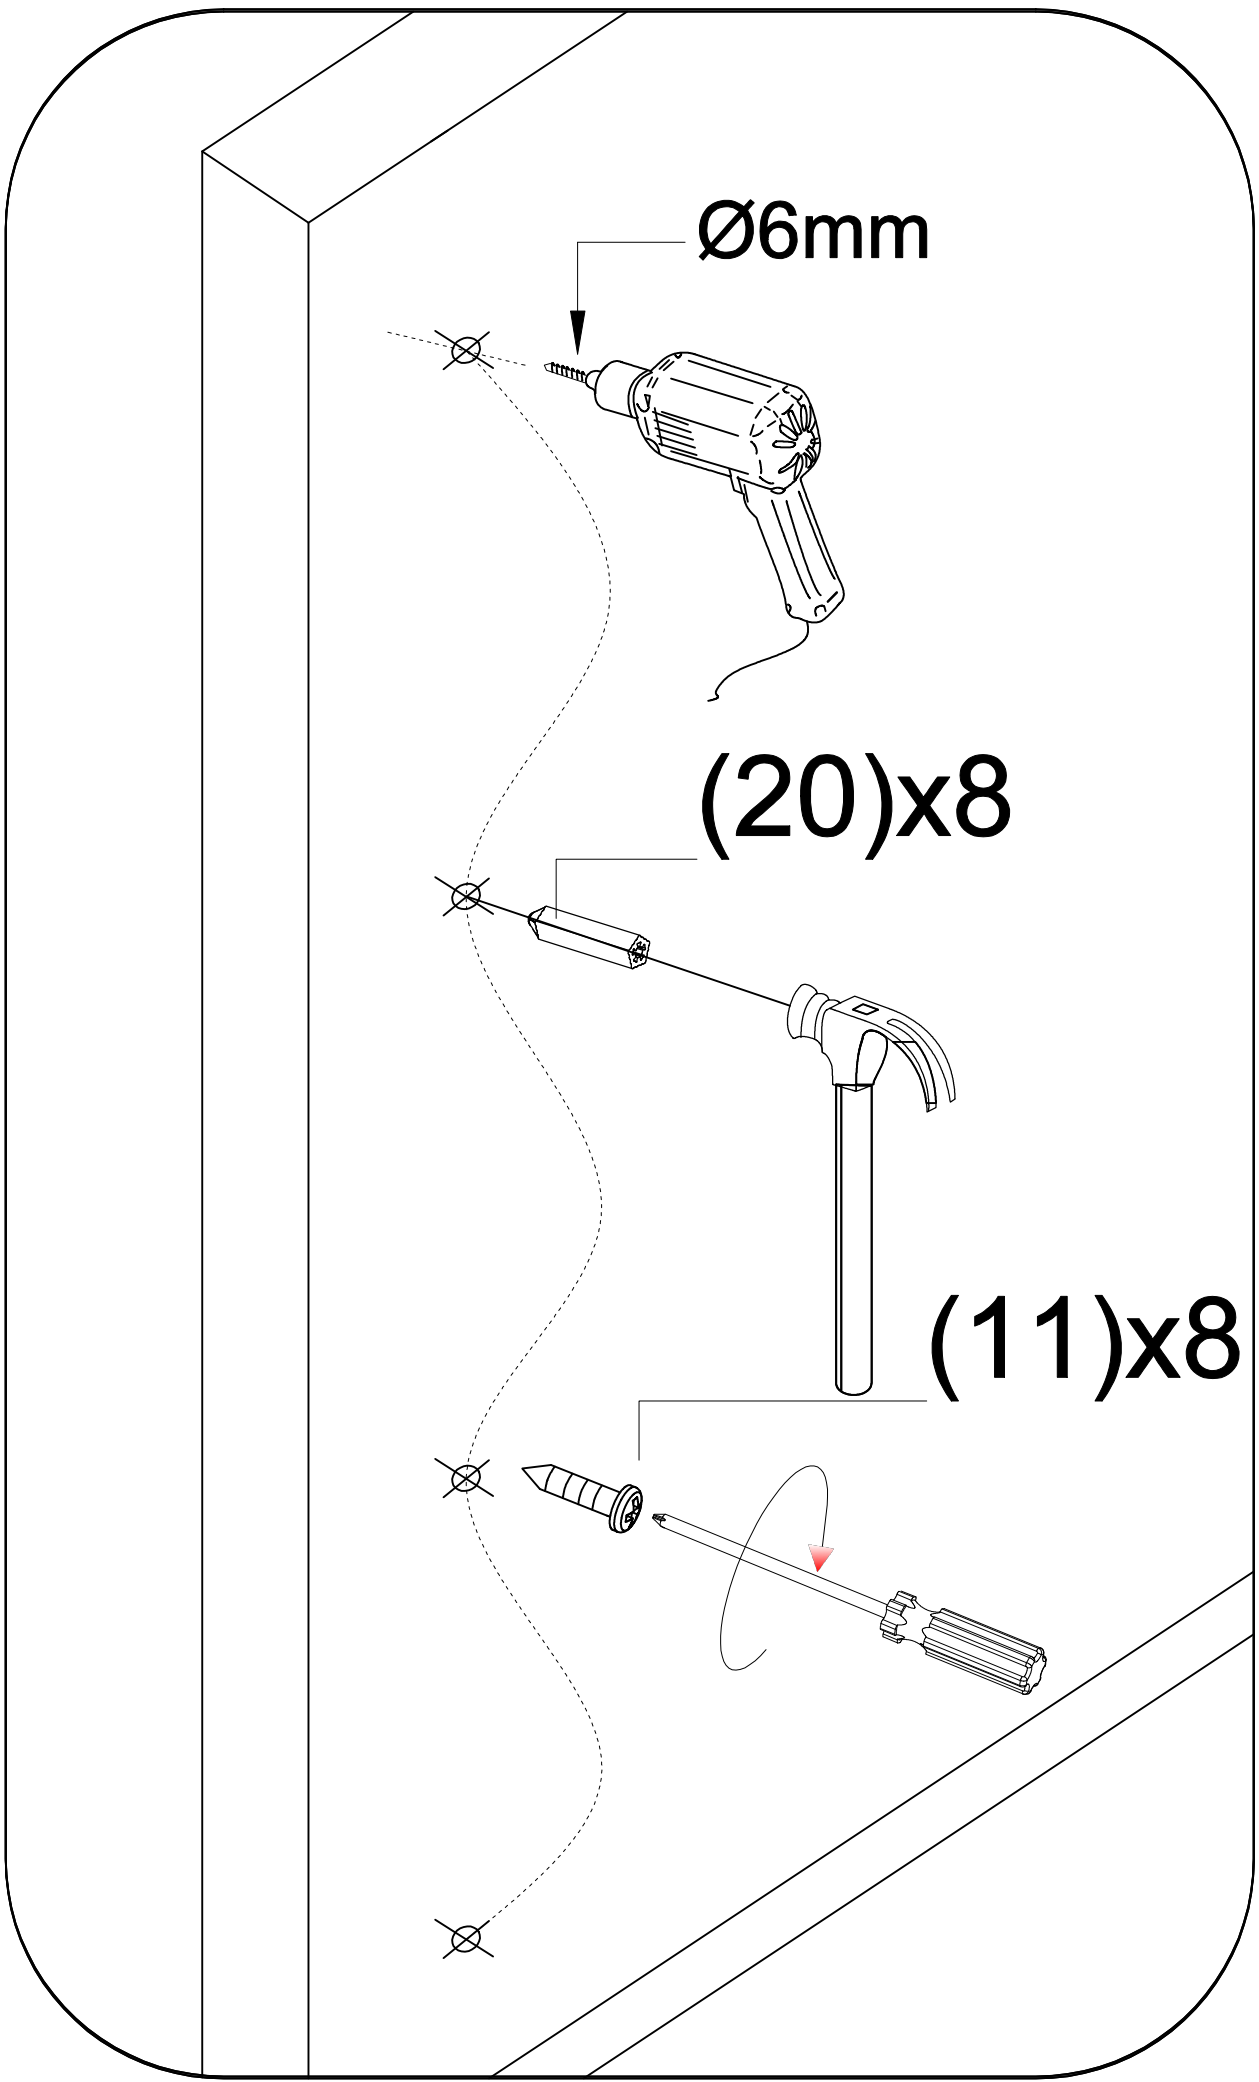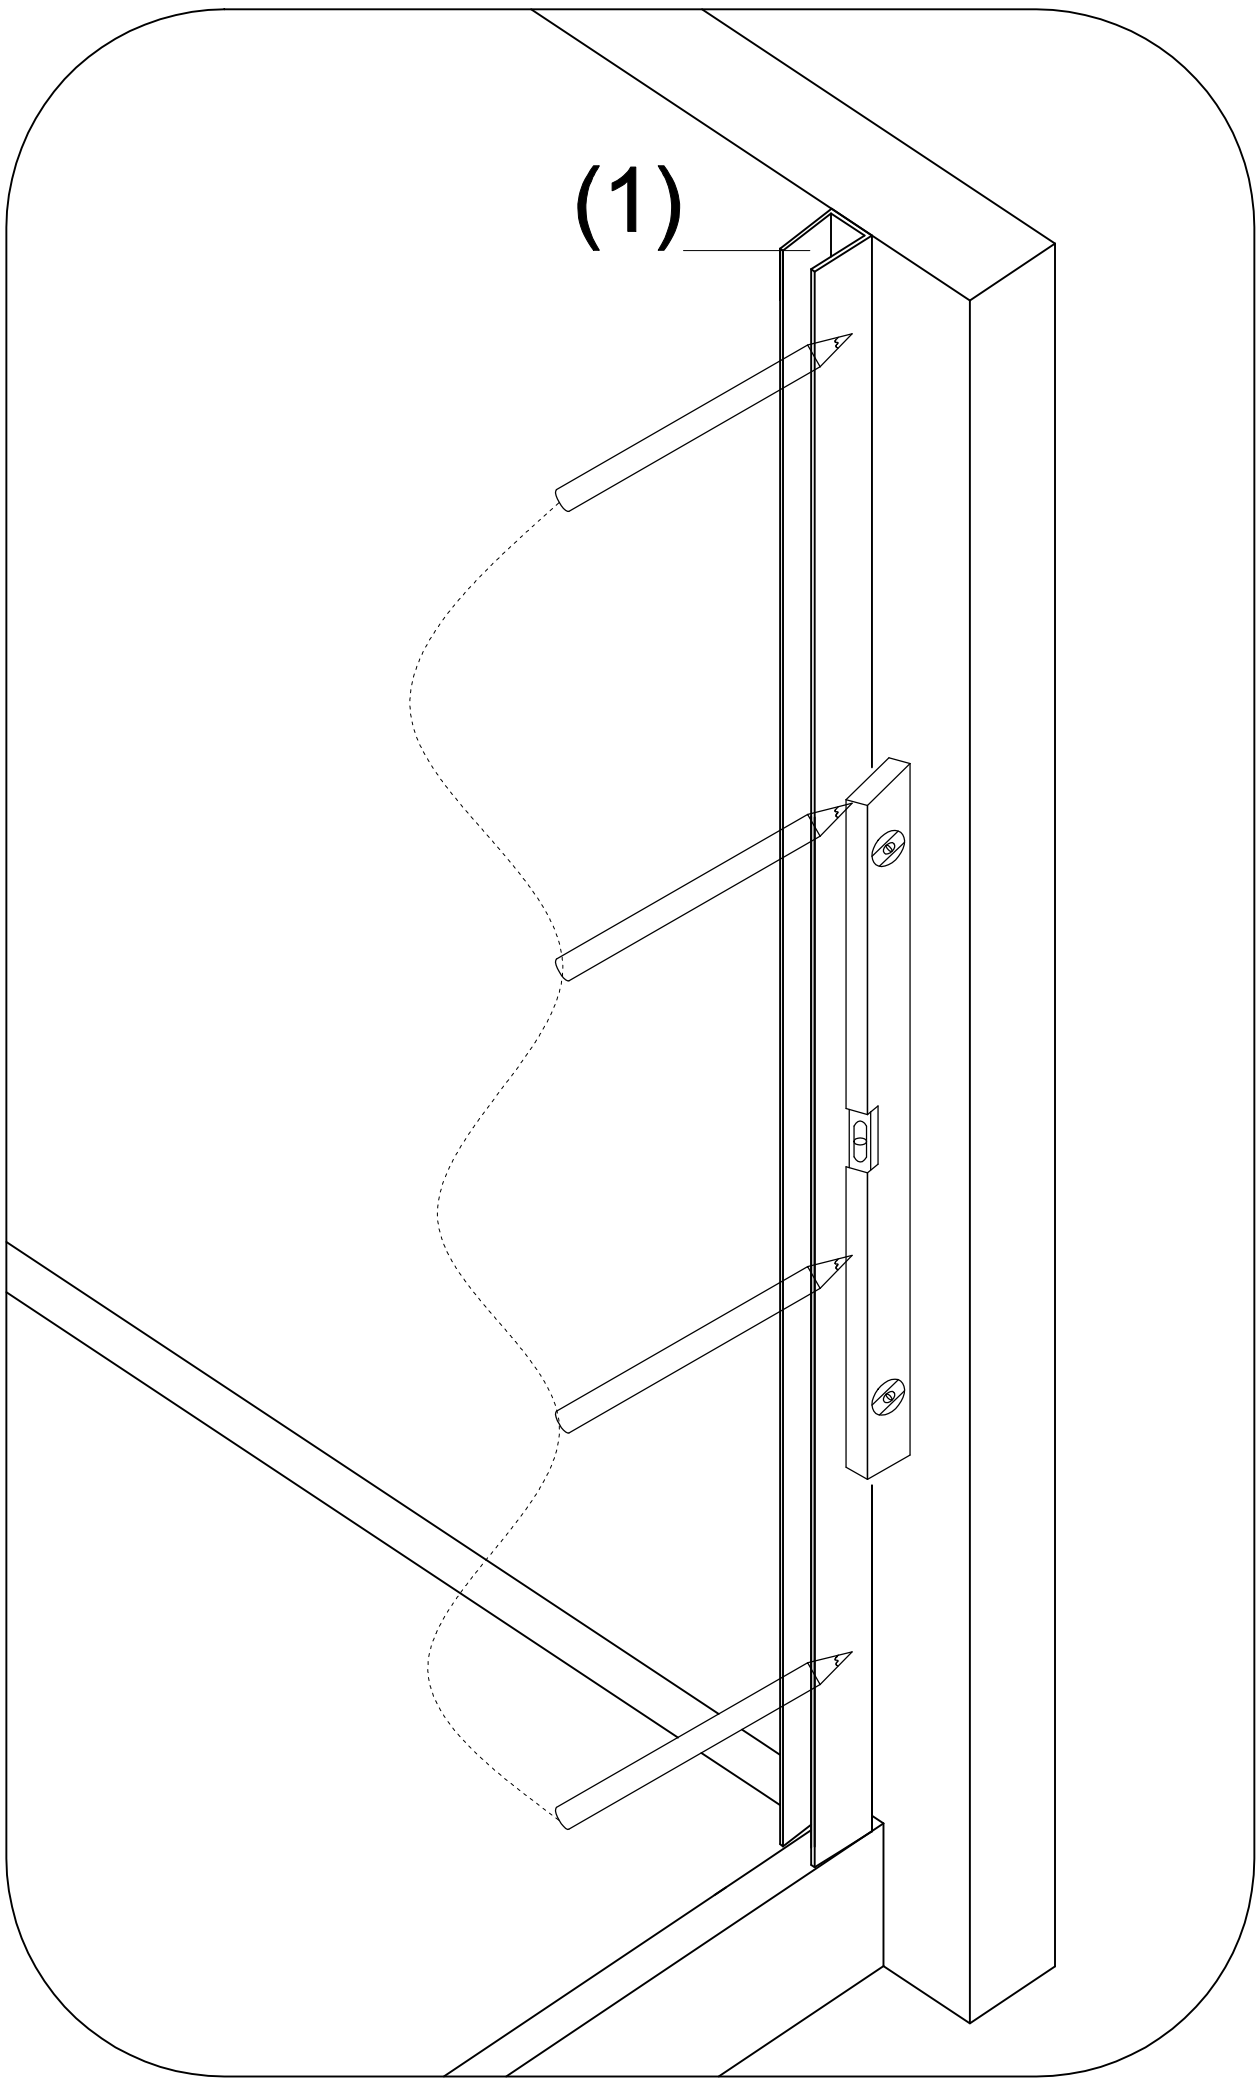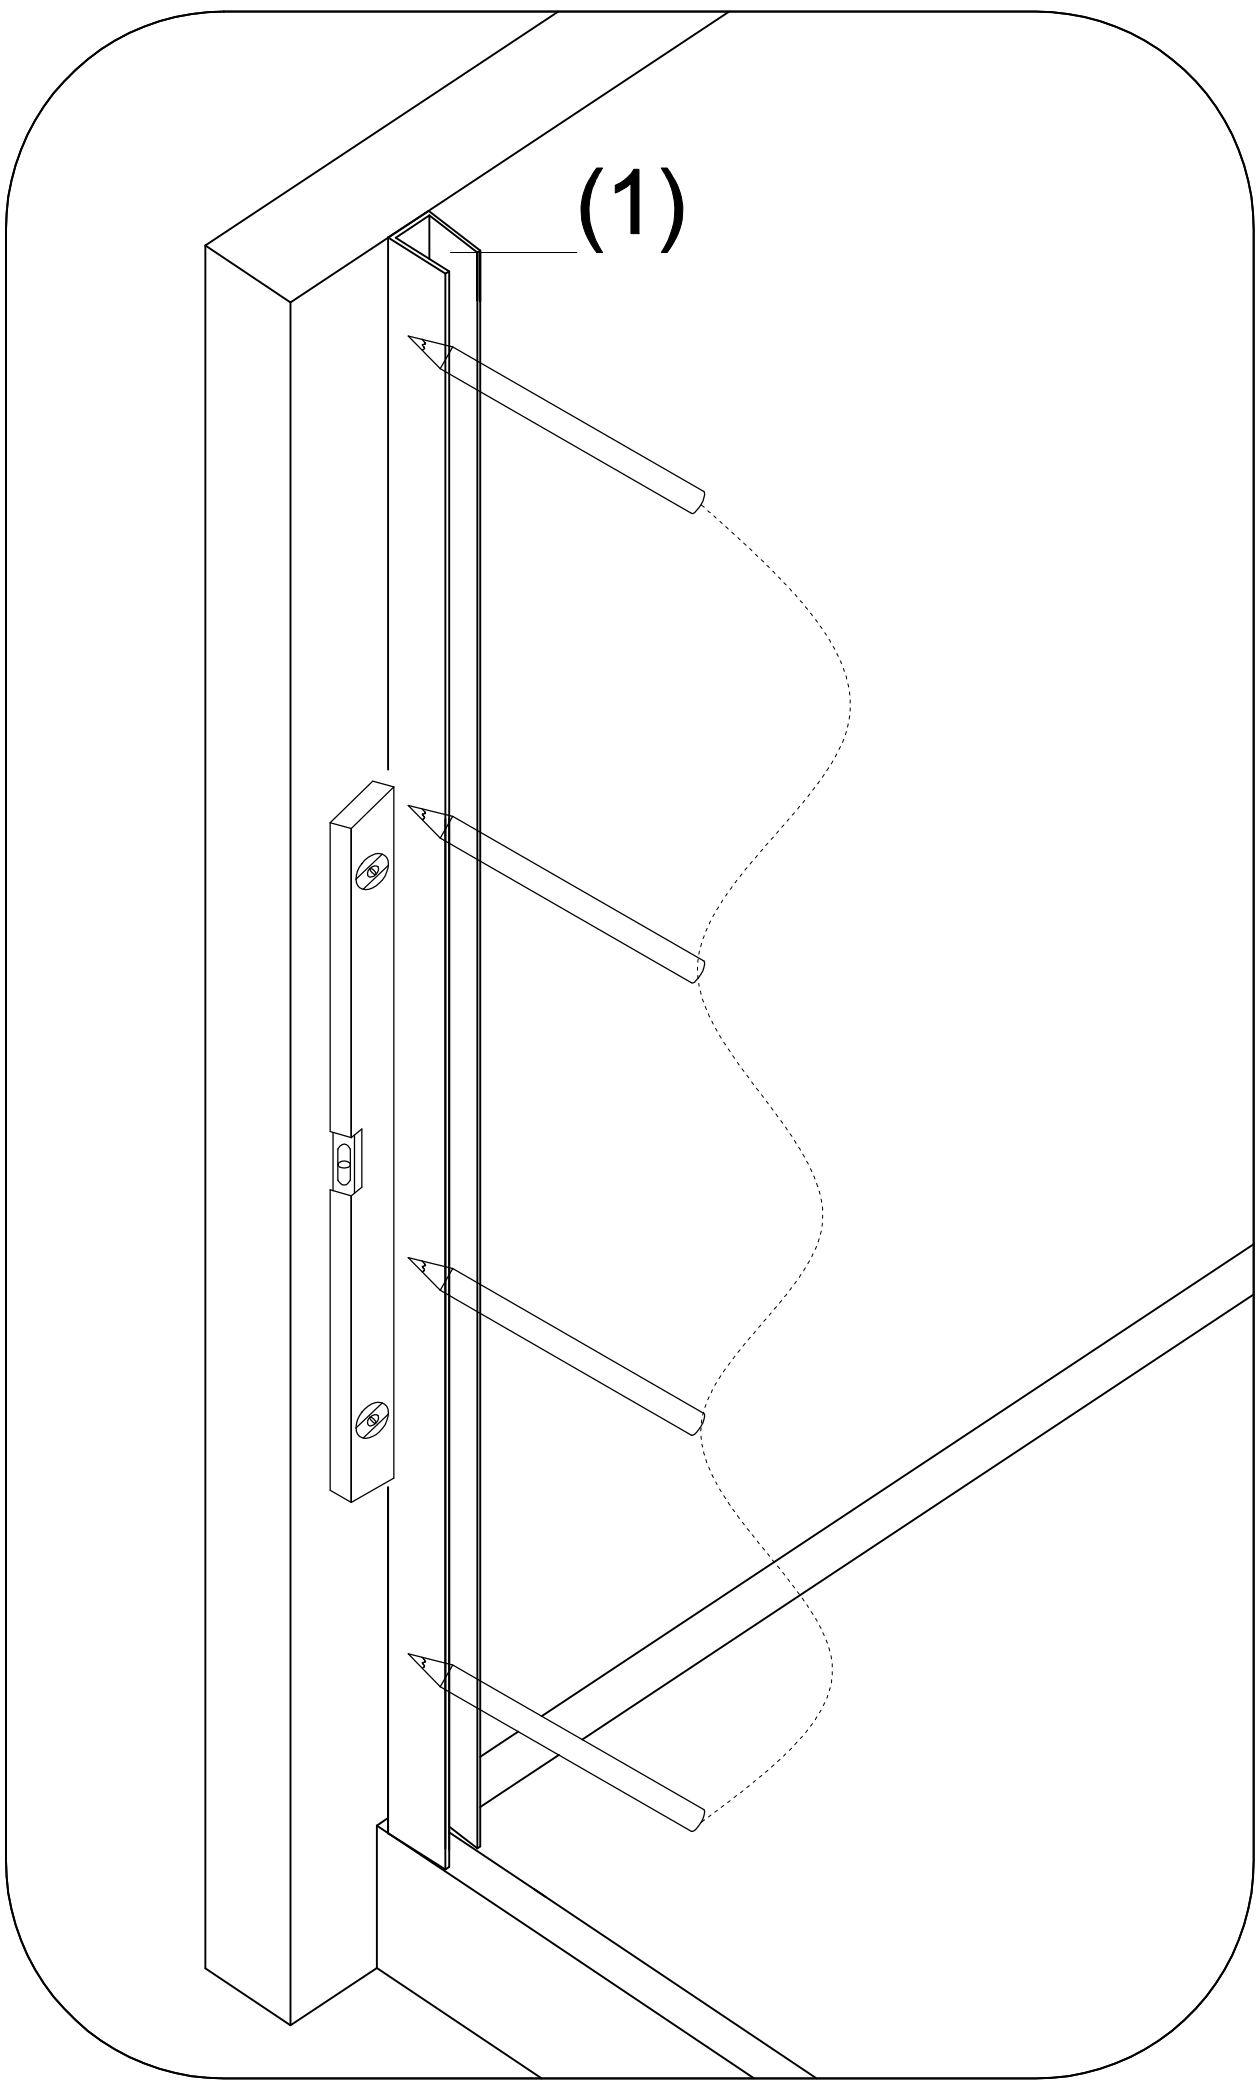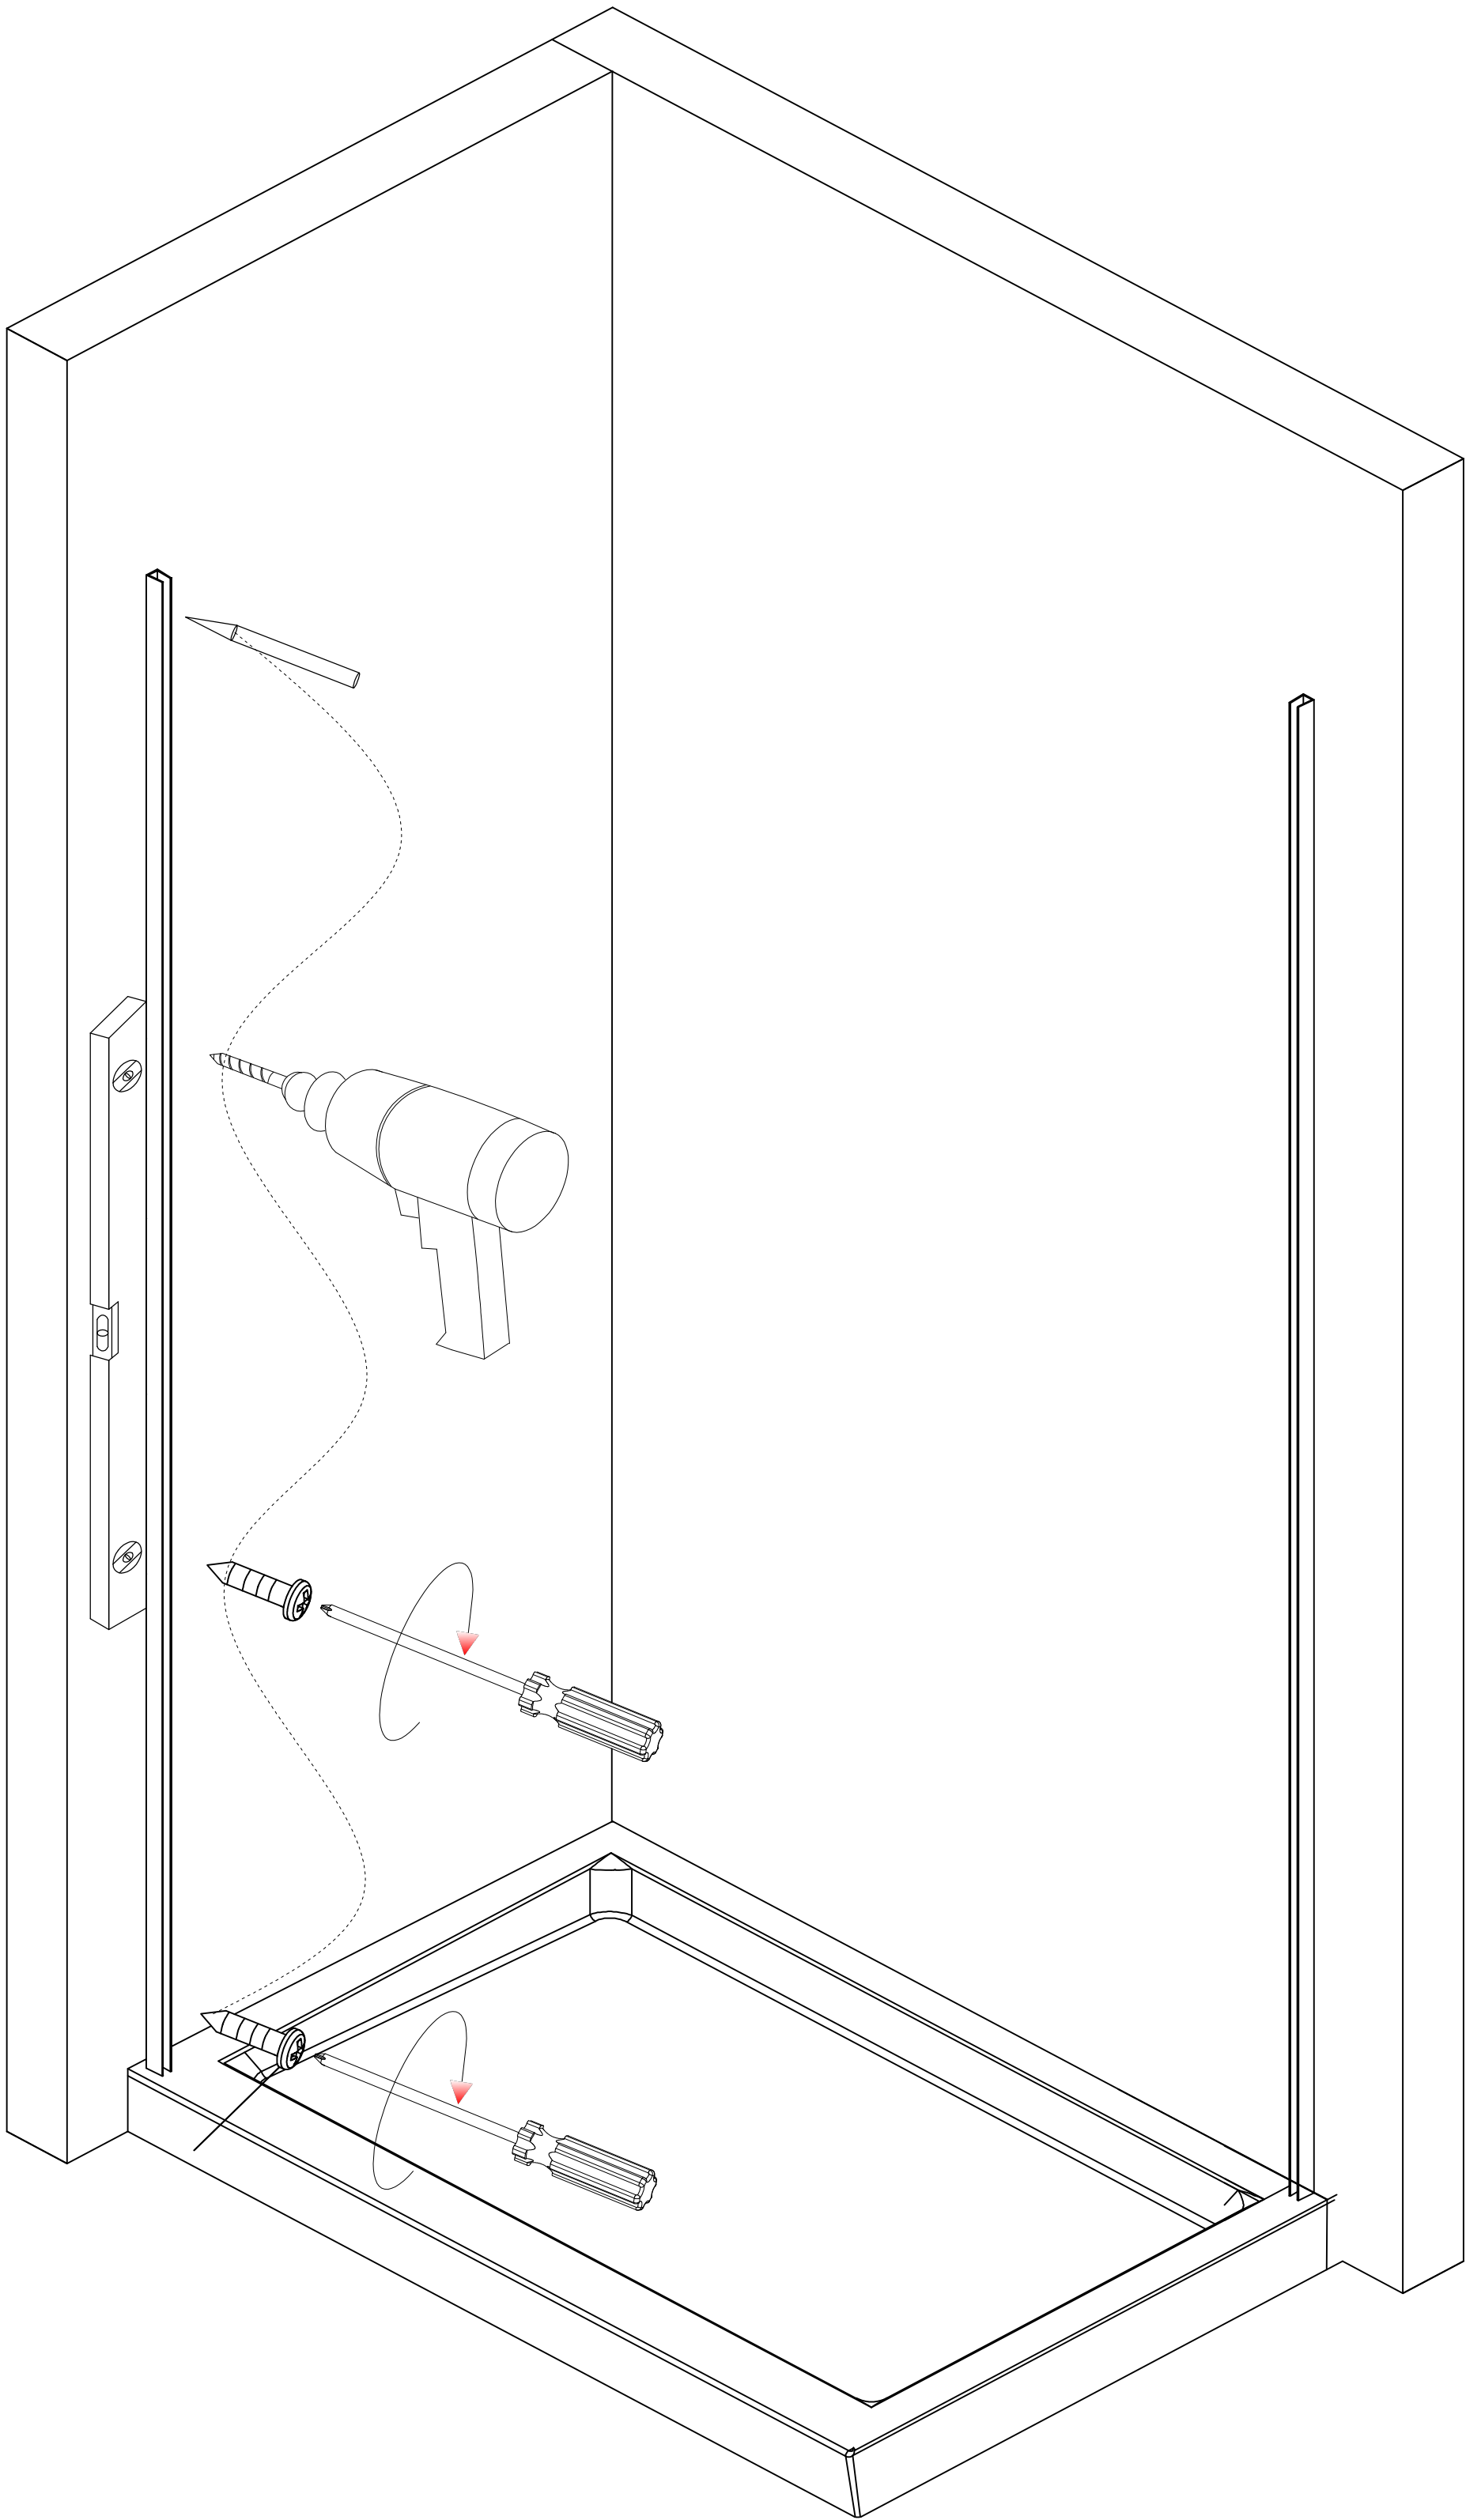


Step 2

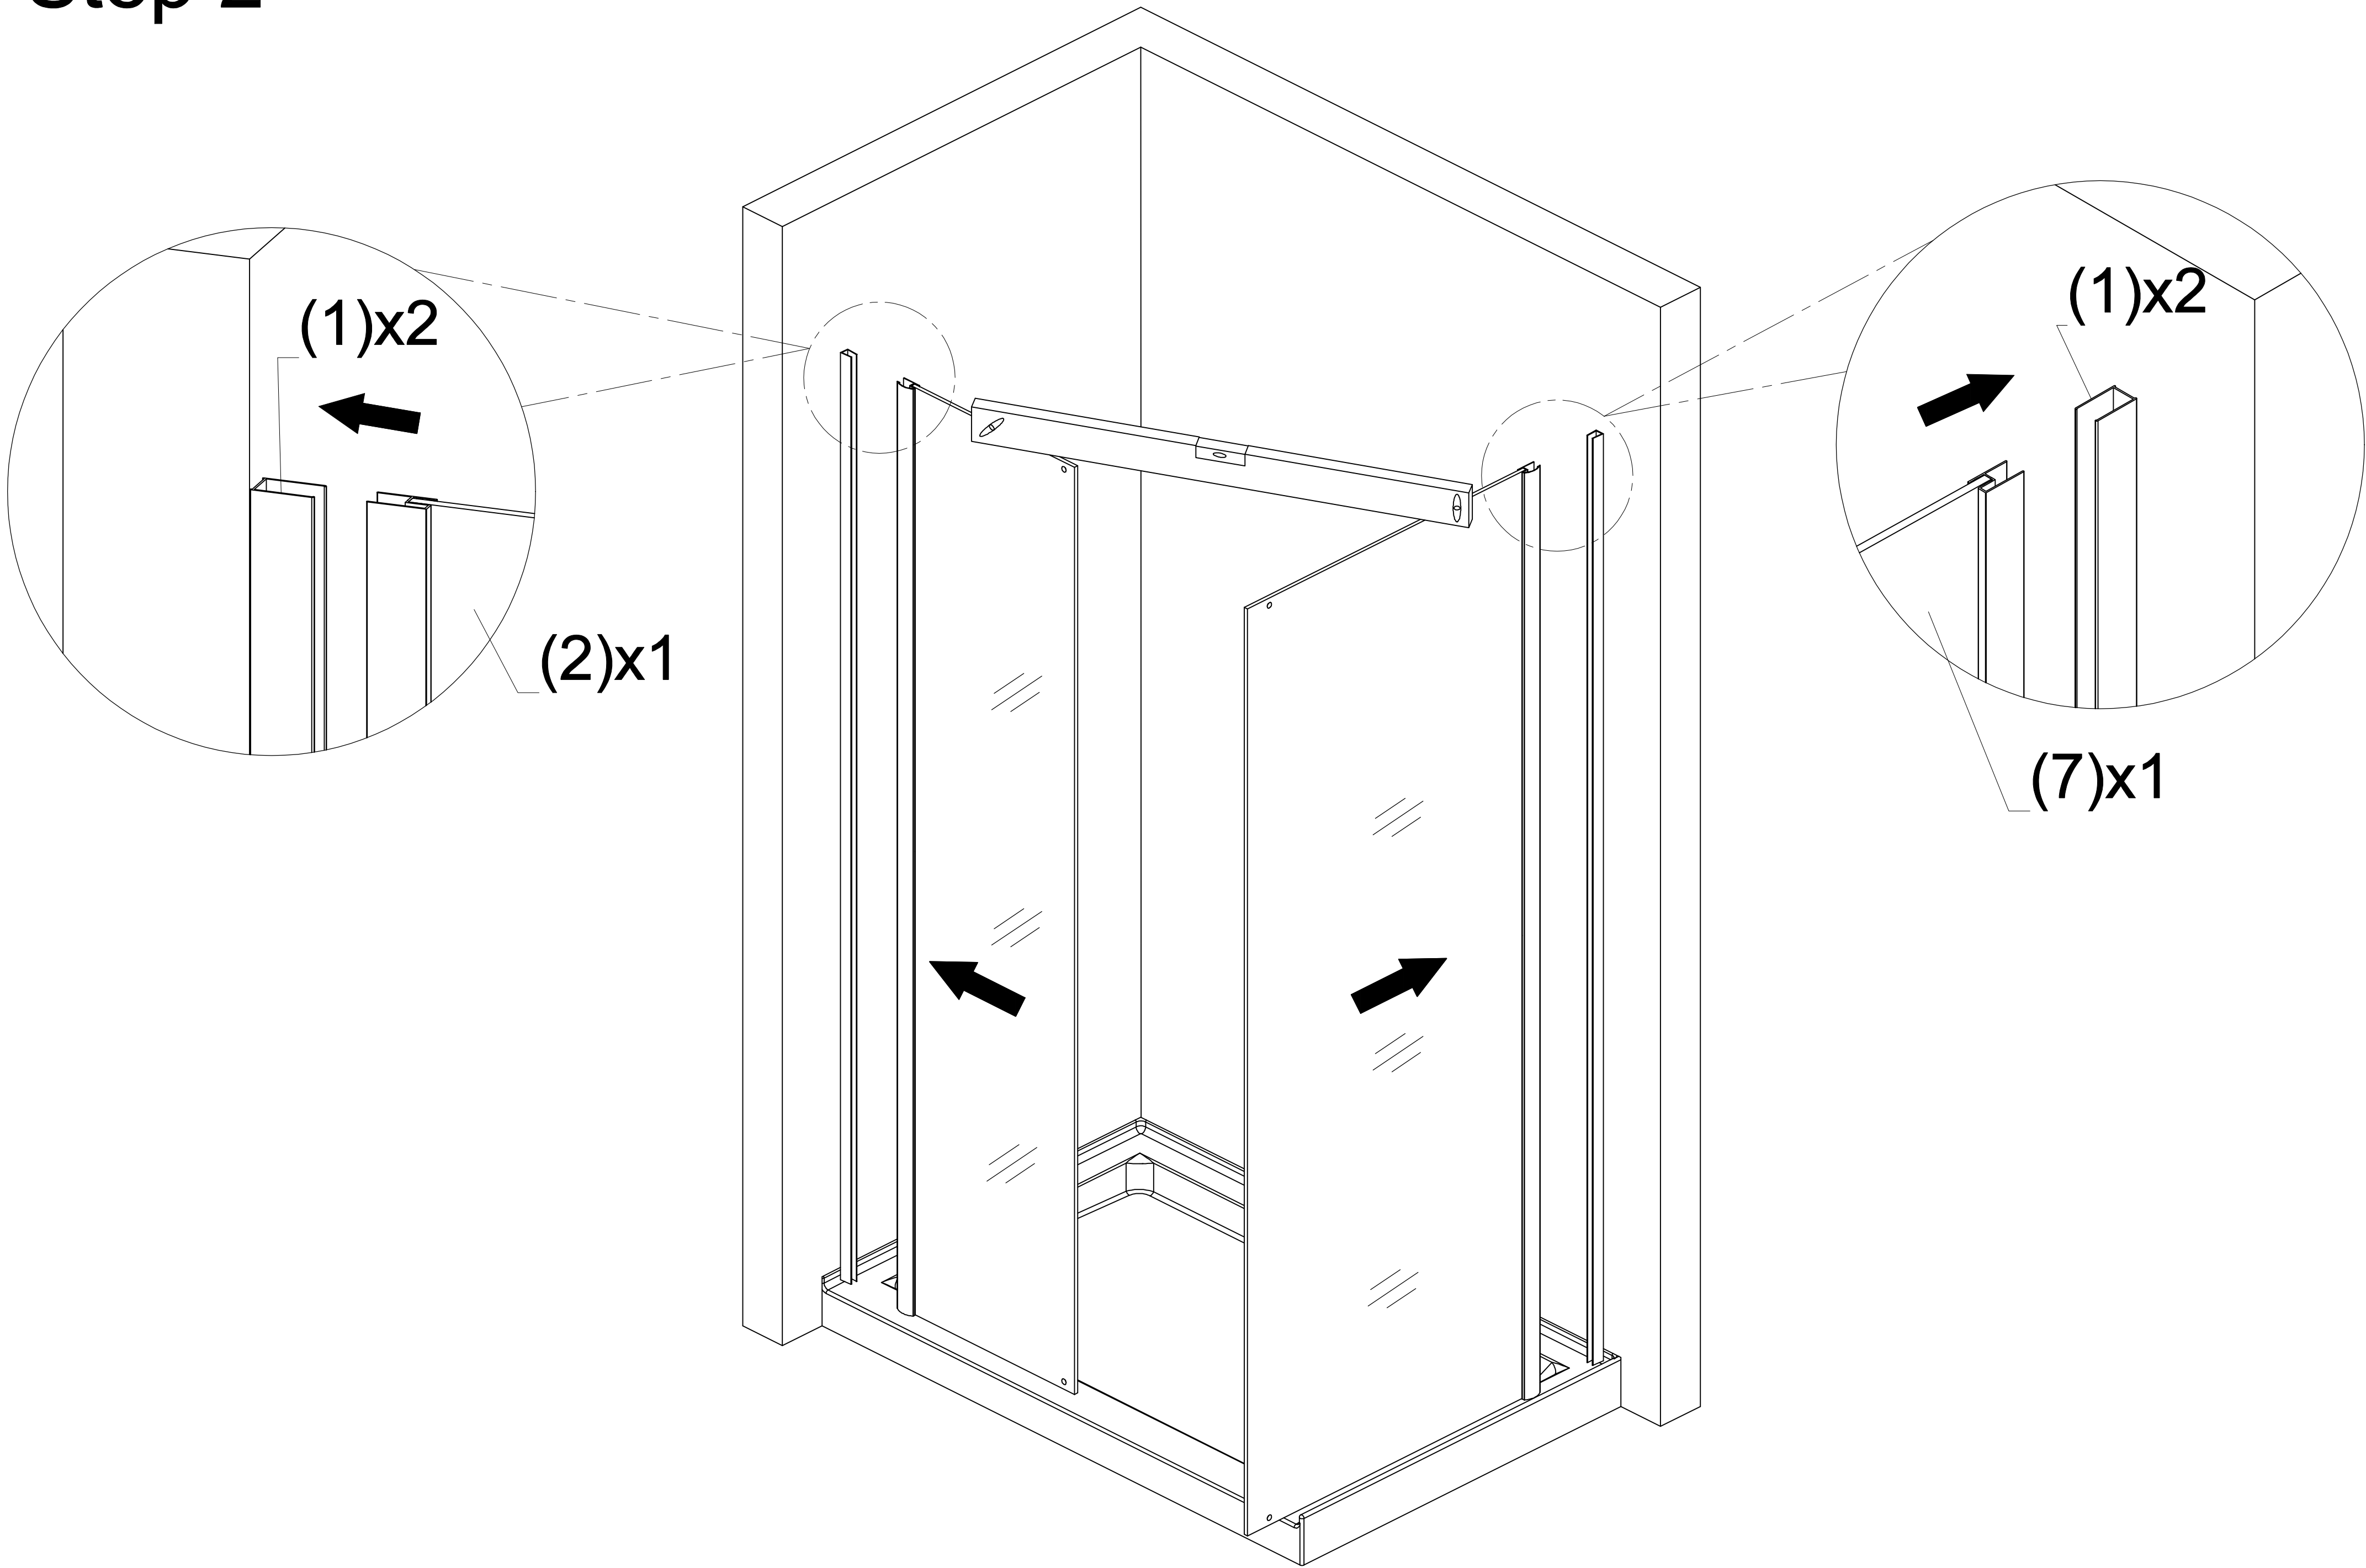

Step 3




Pivot the block mounting holes on the left

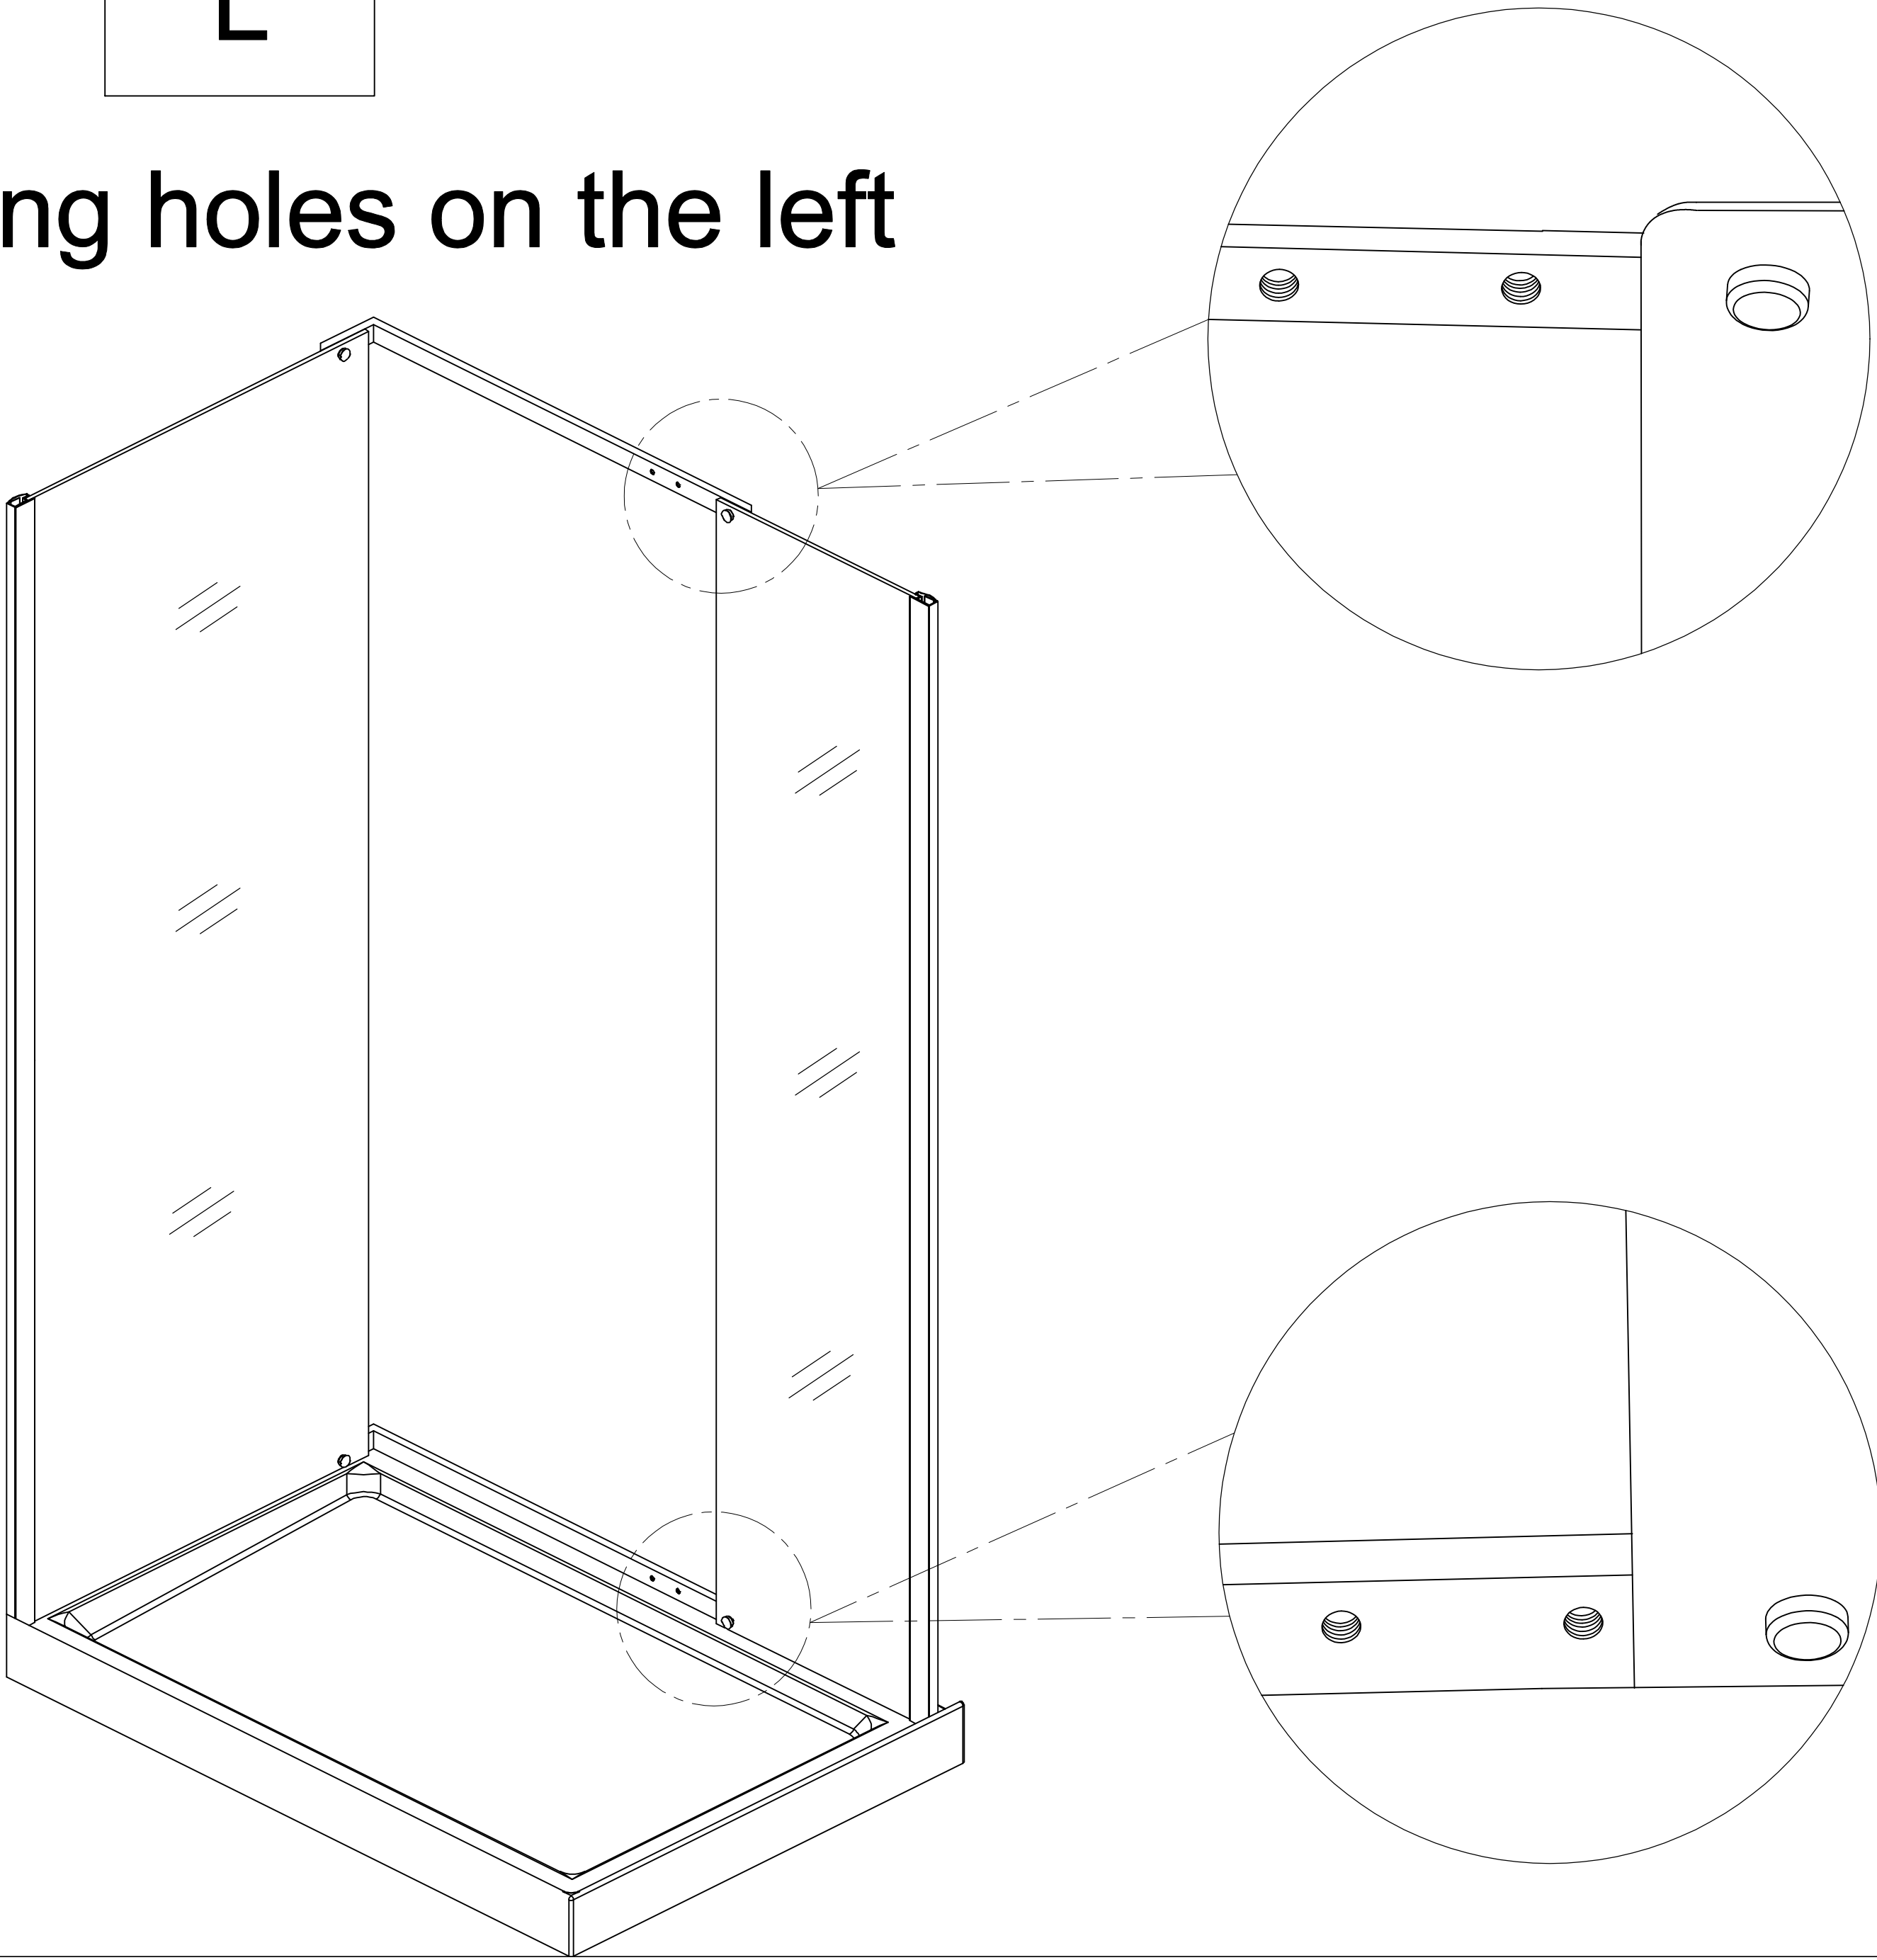


R


Pivot the block mounting holes on the right

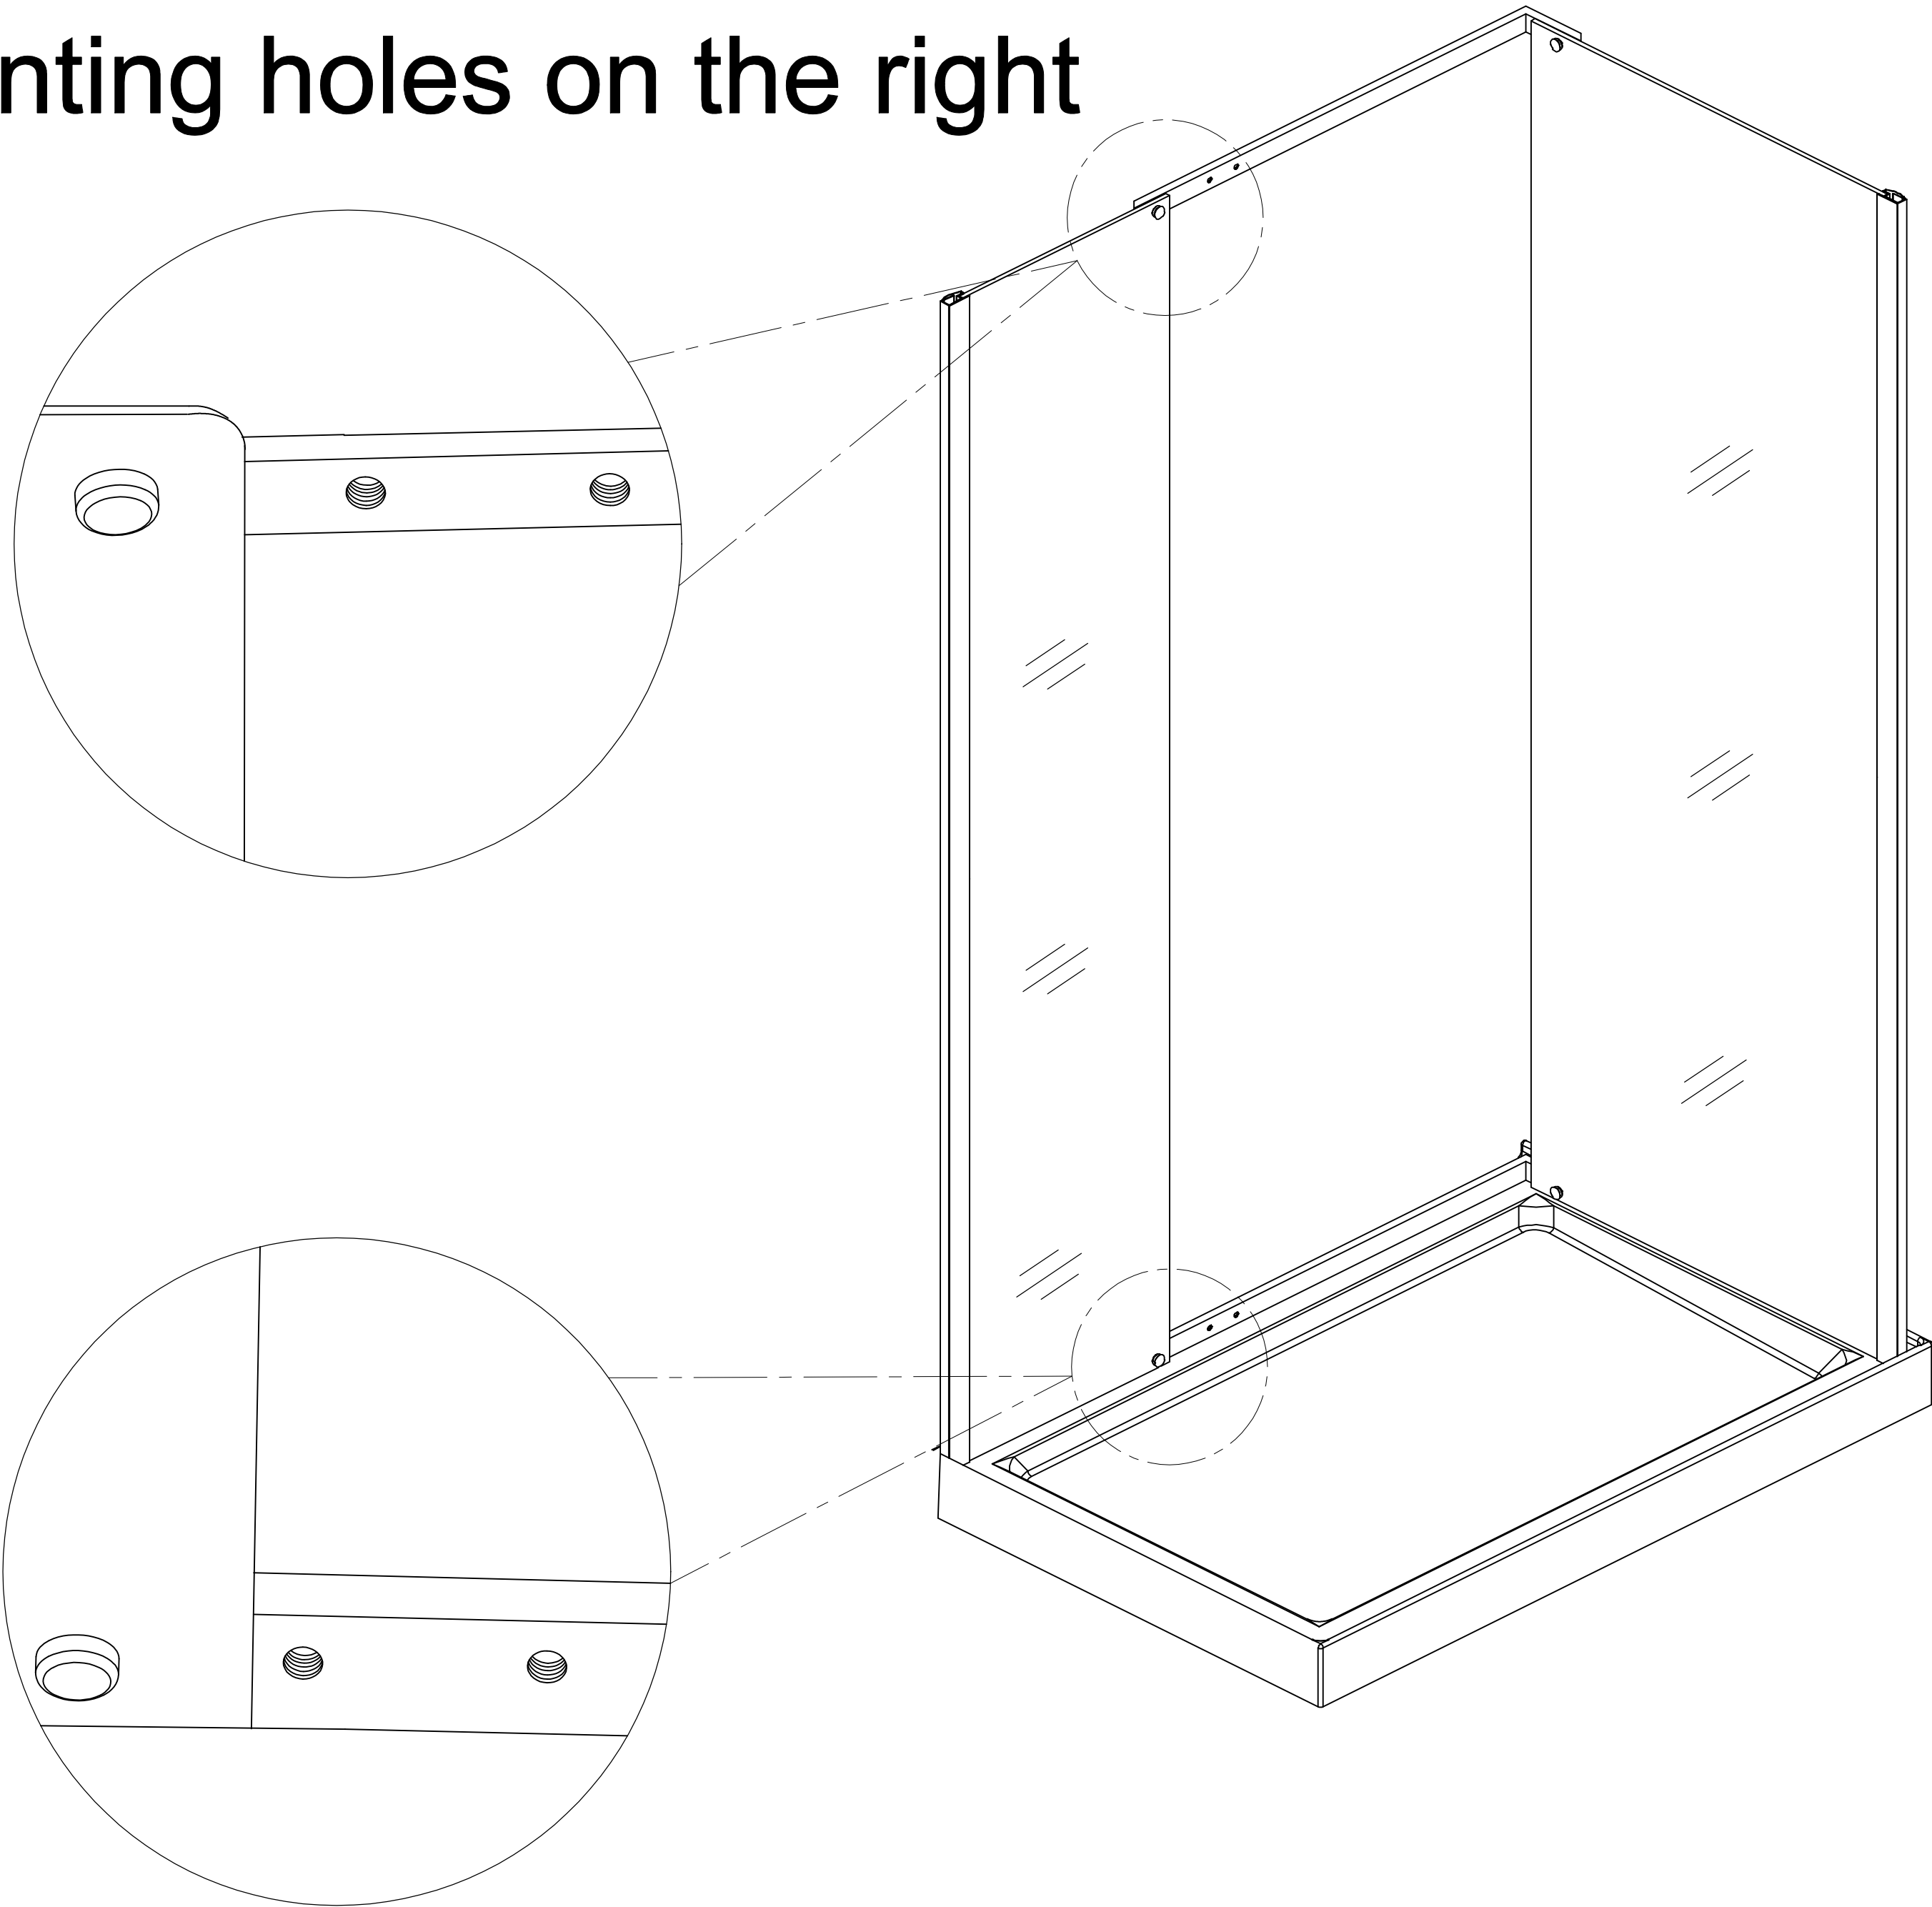


Step 4

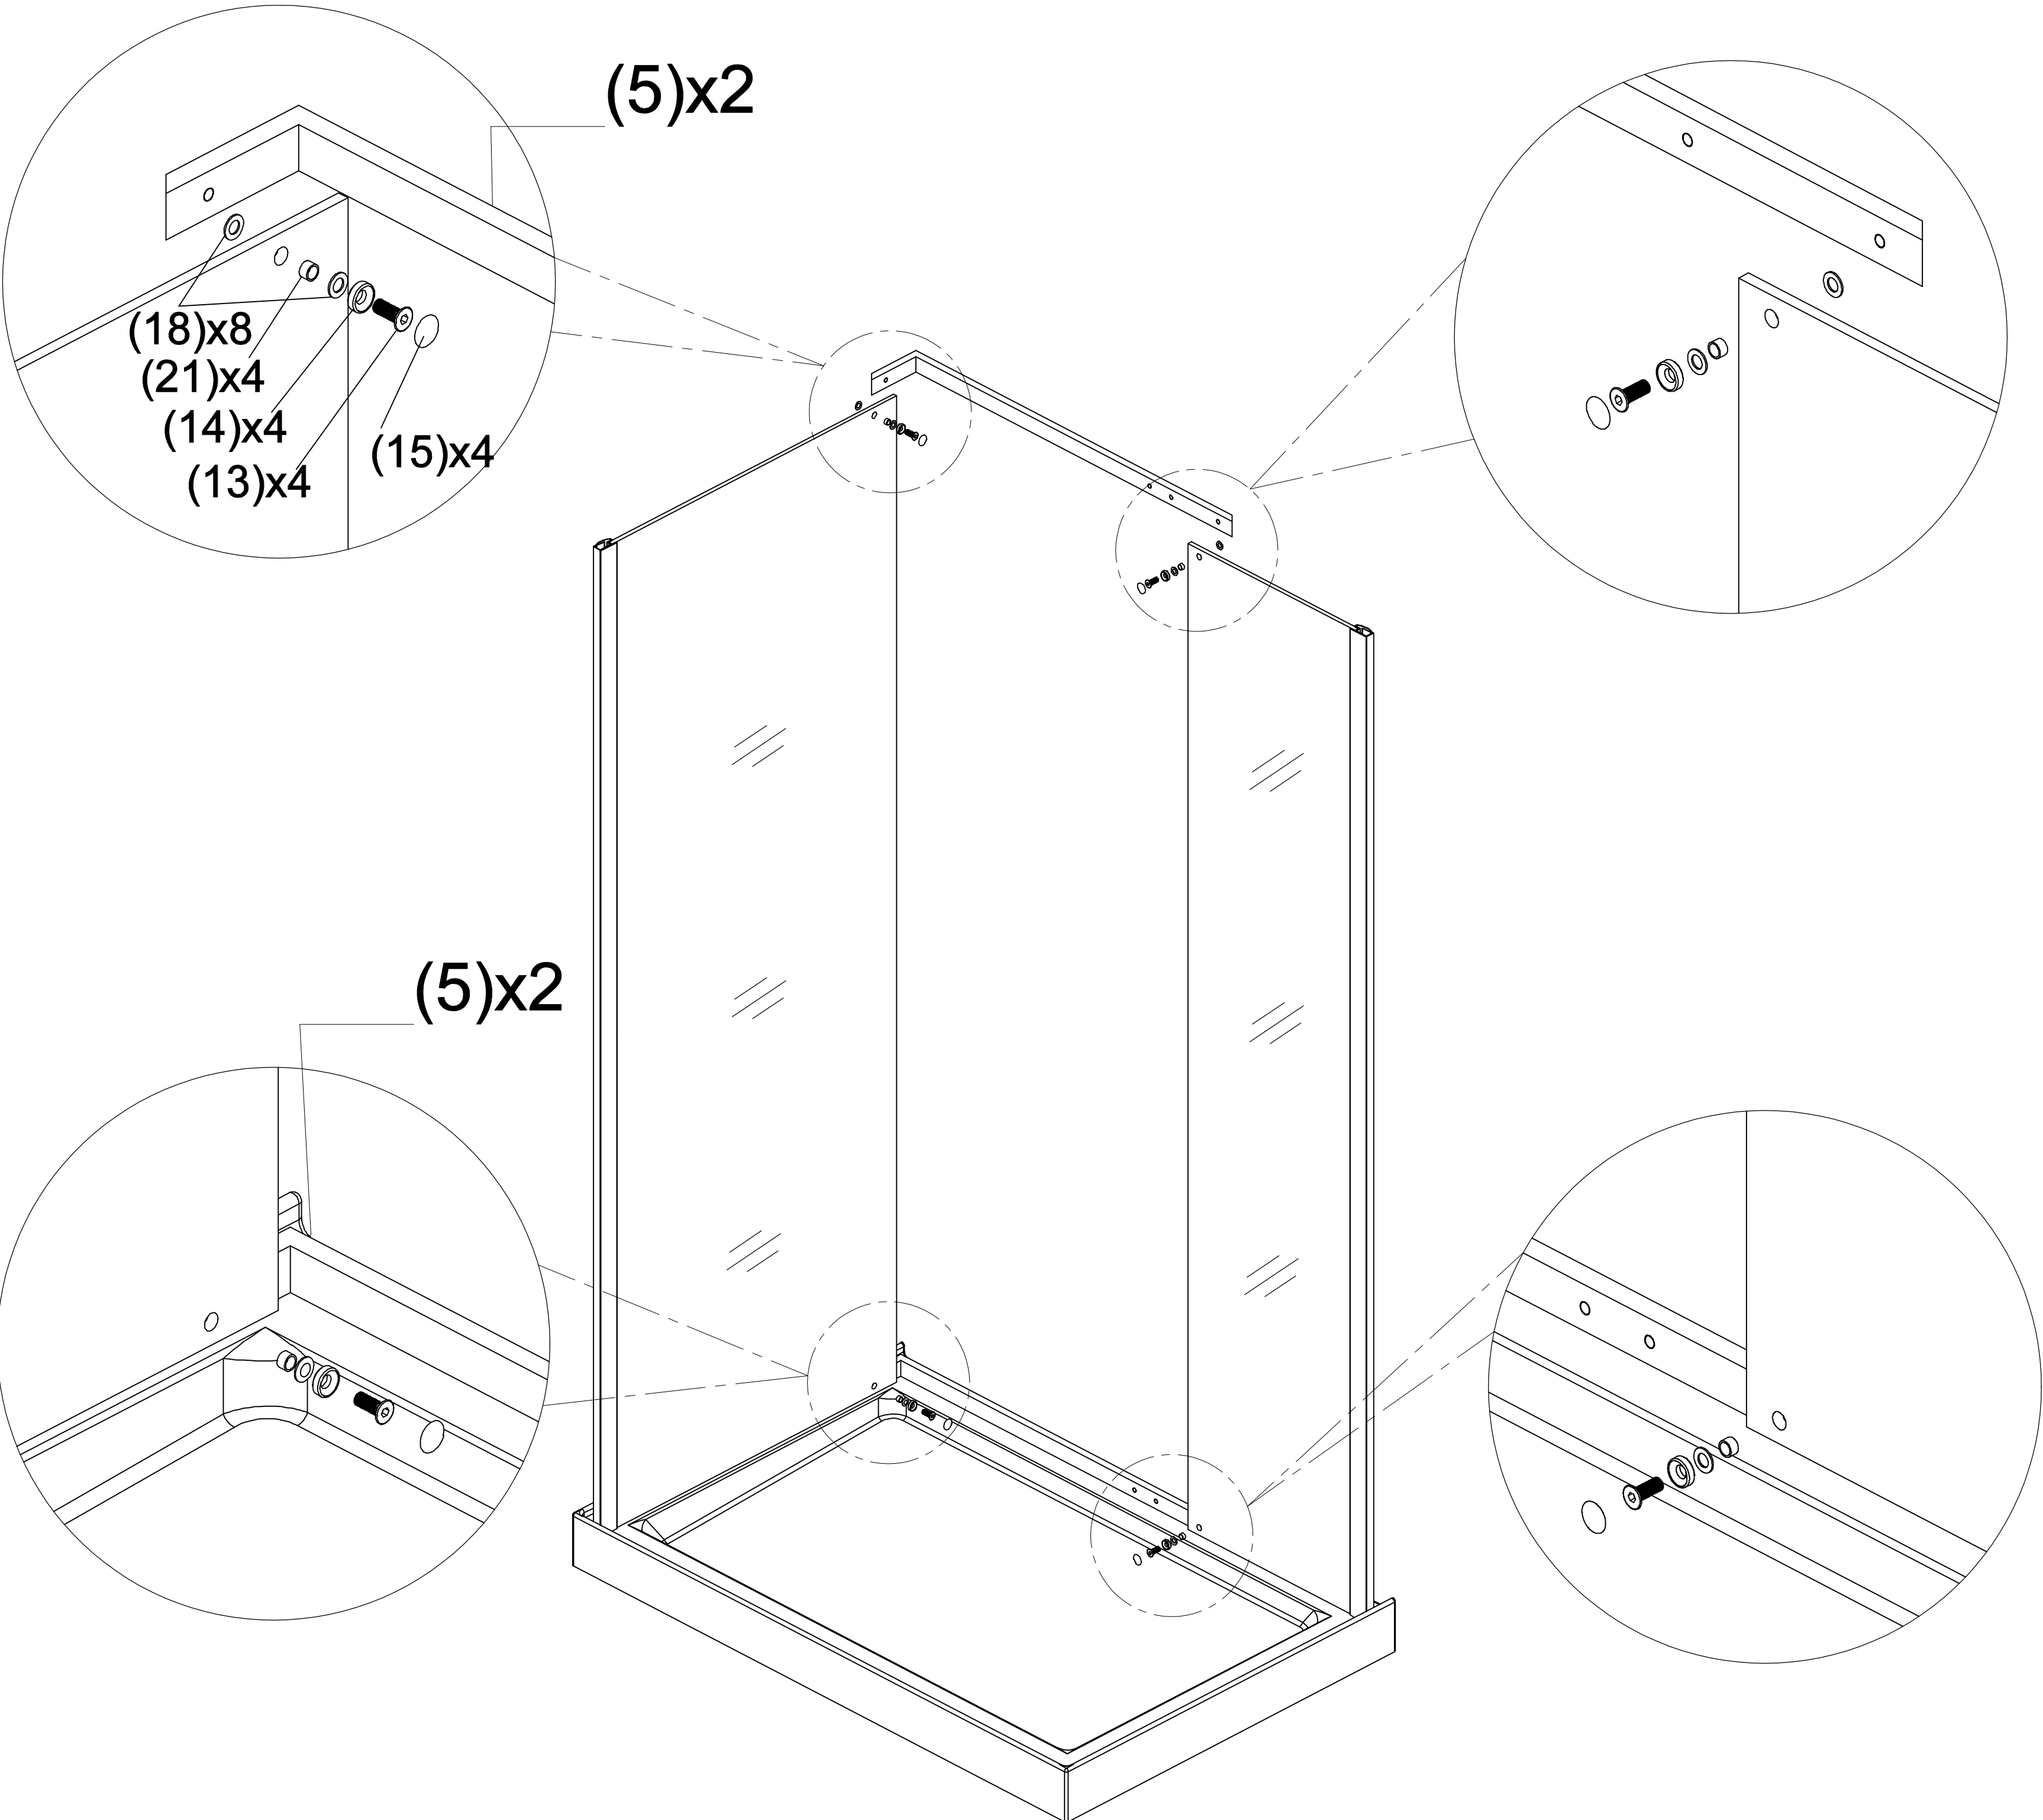


Step5

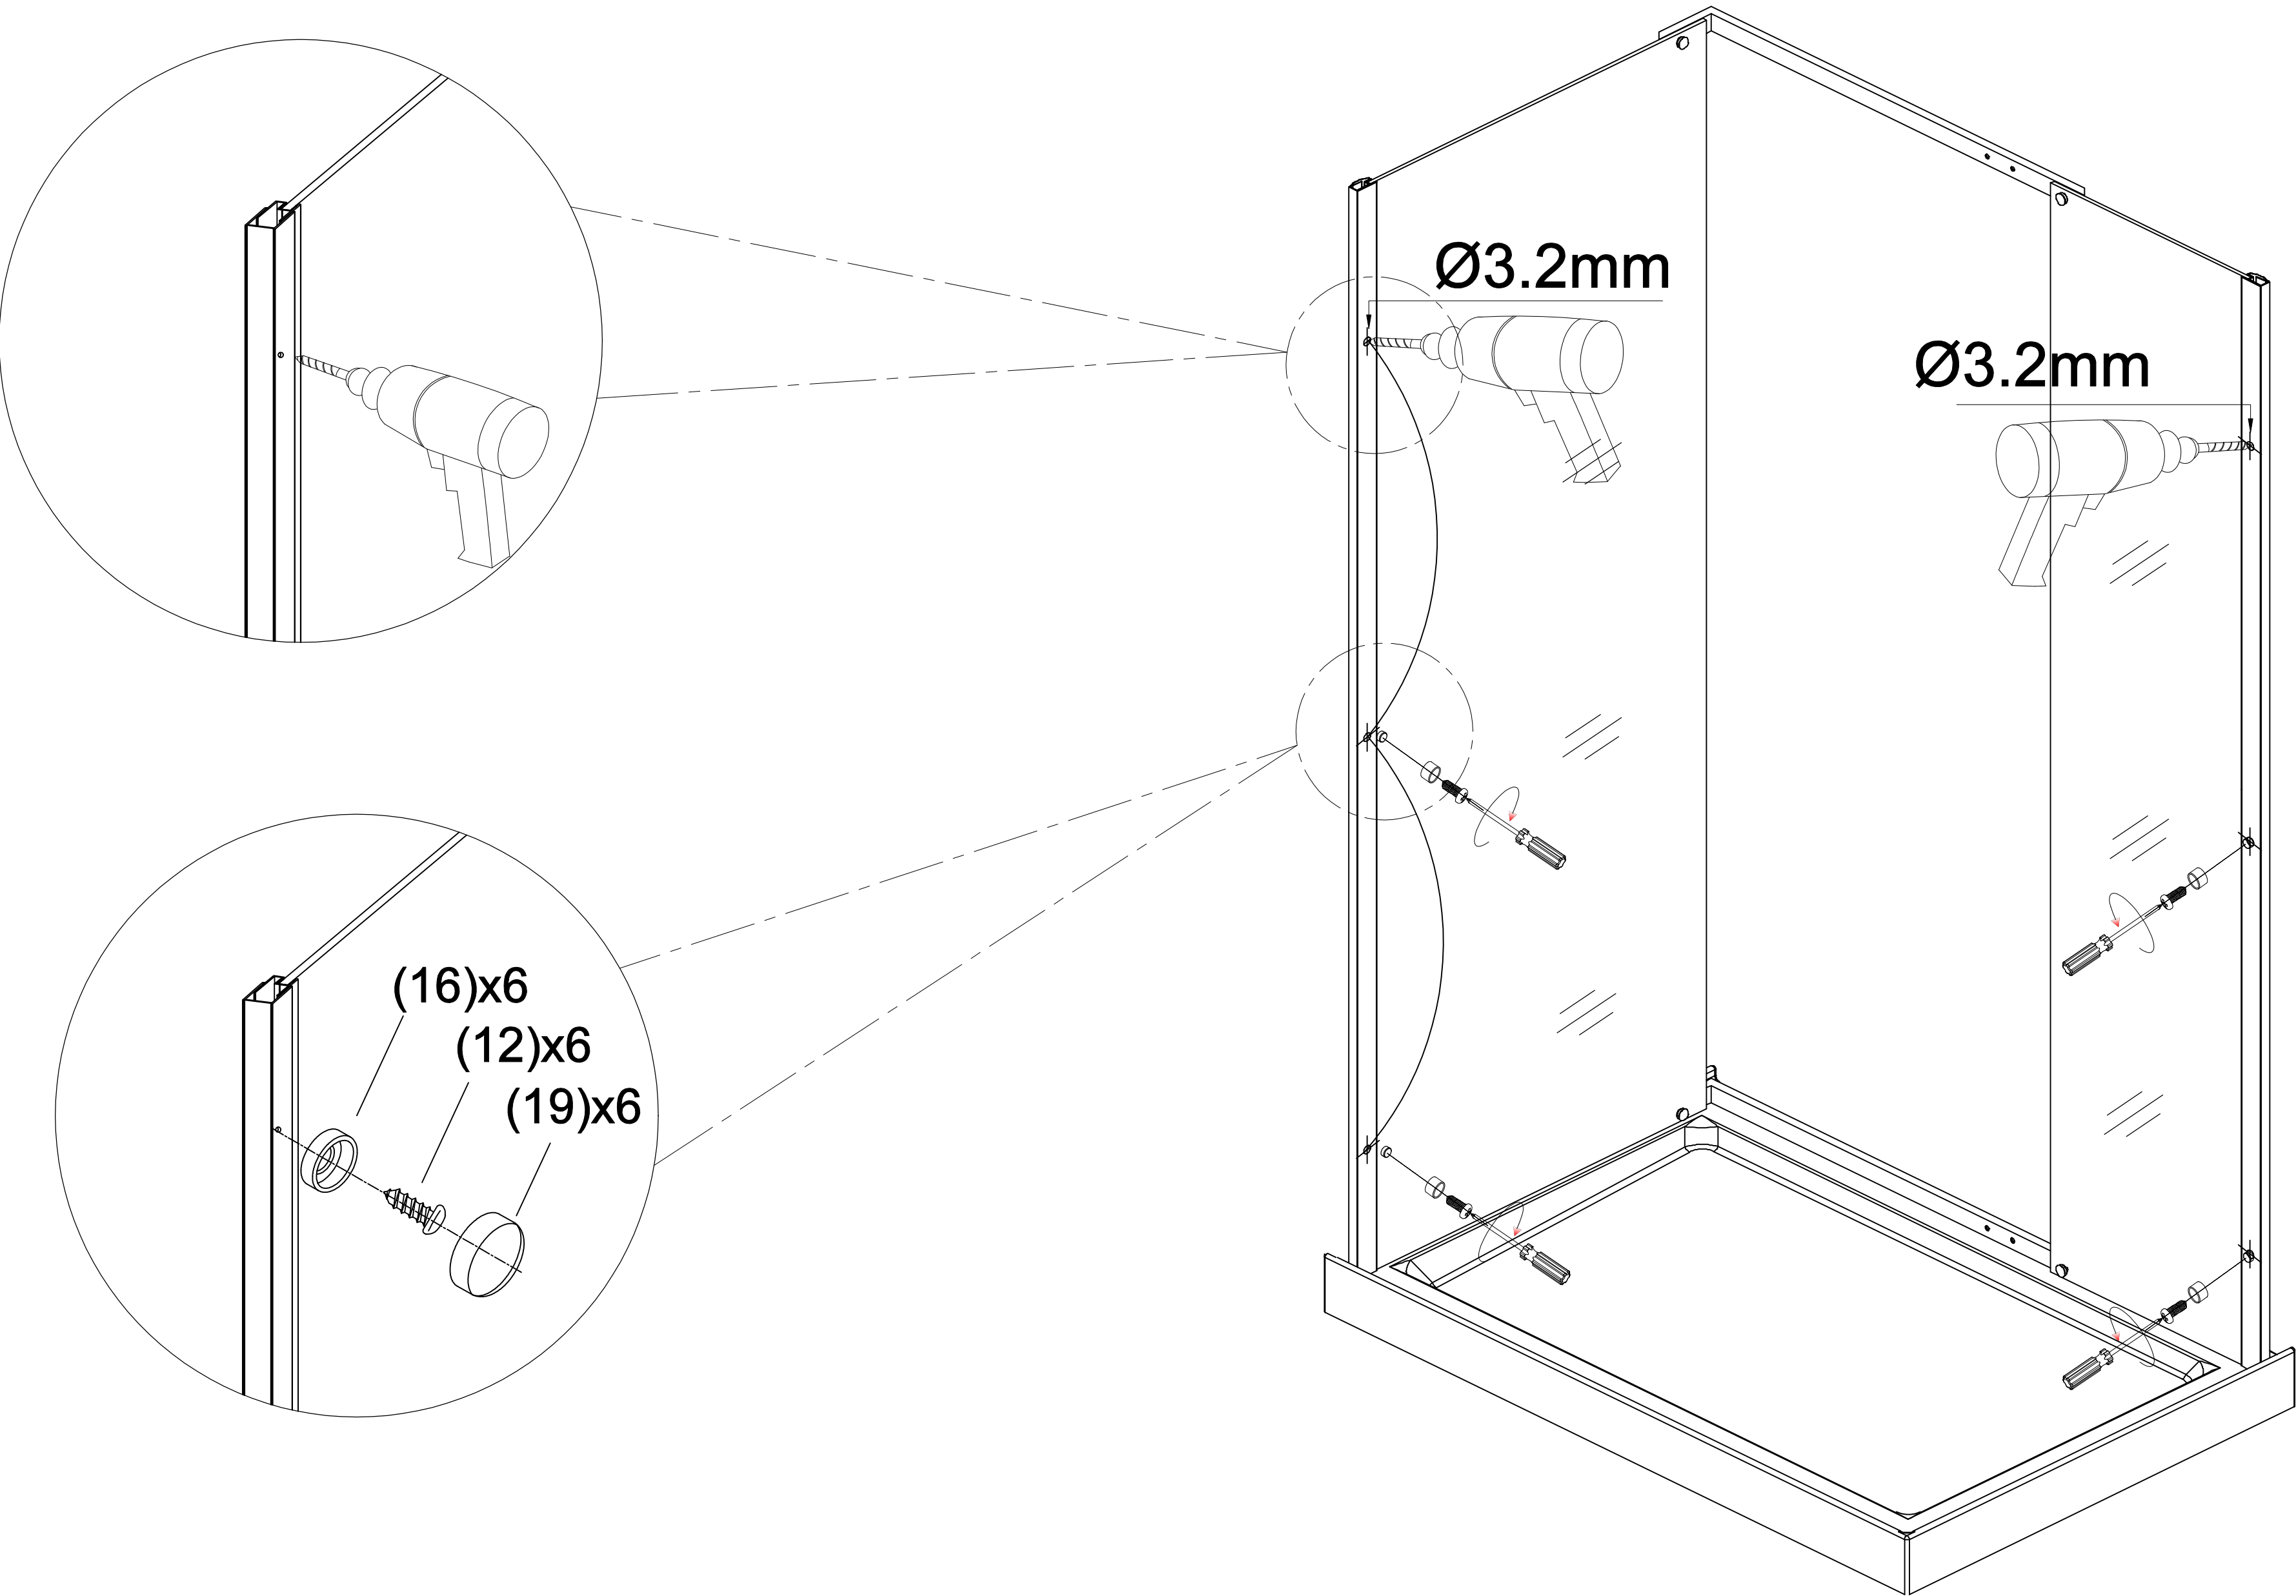


Step6

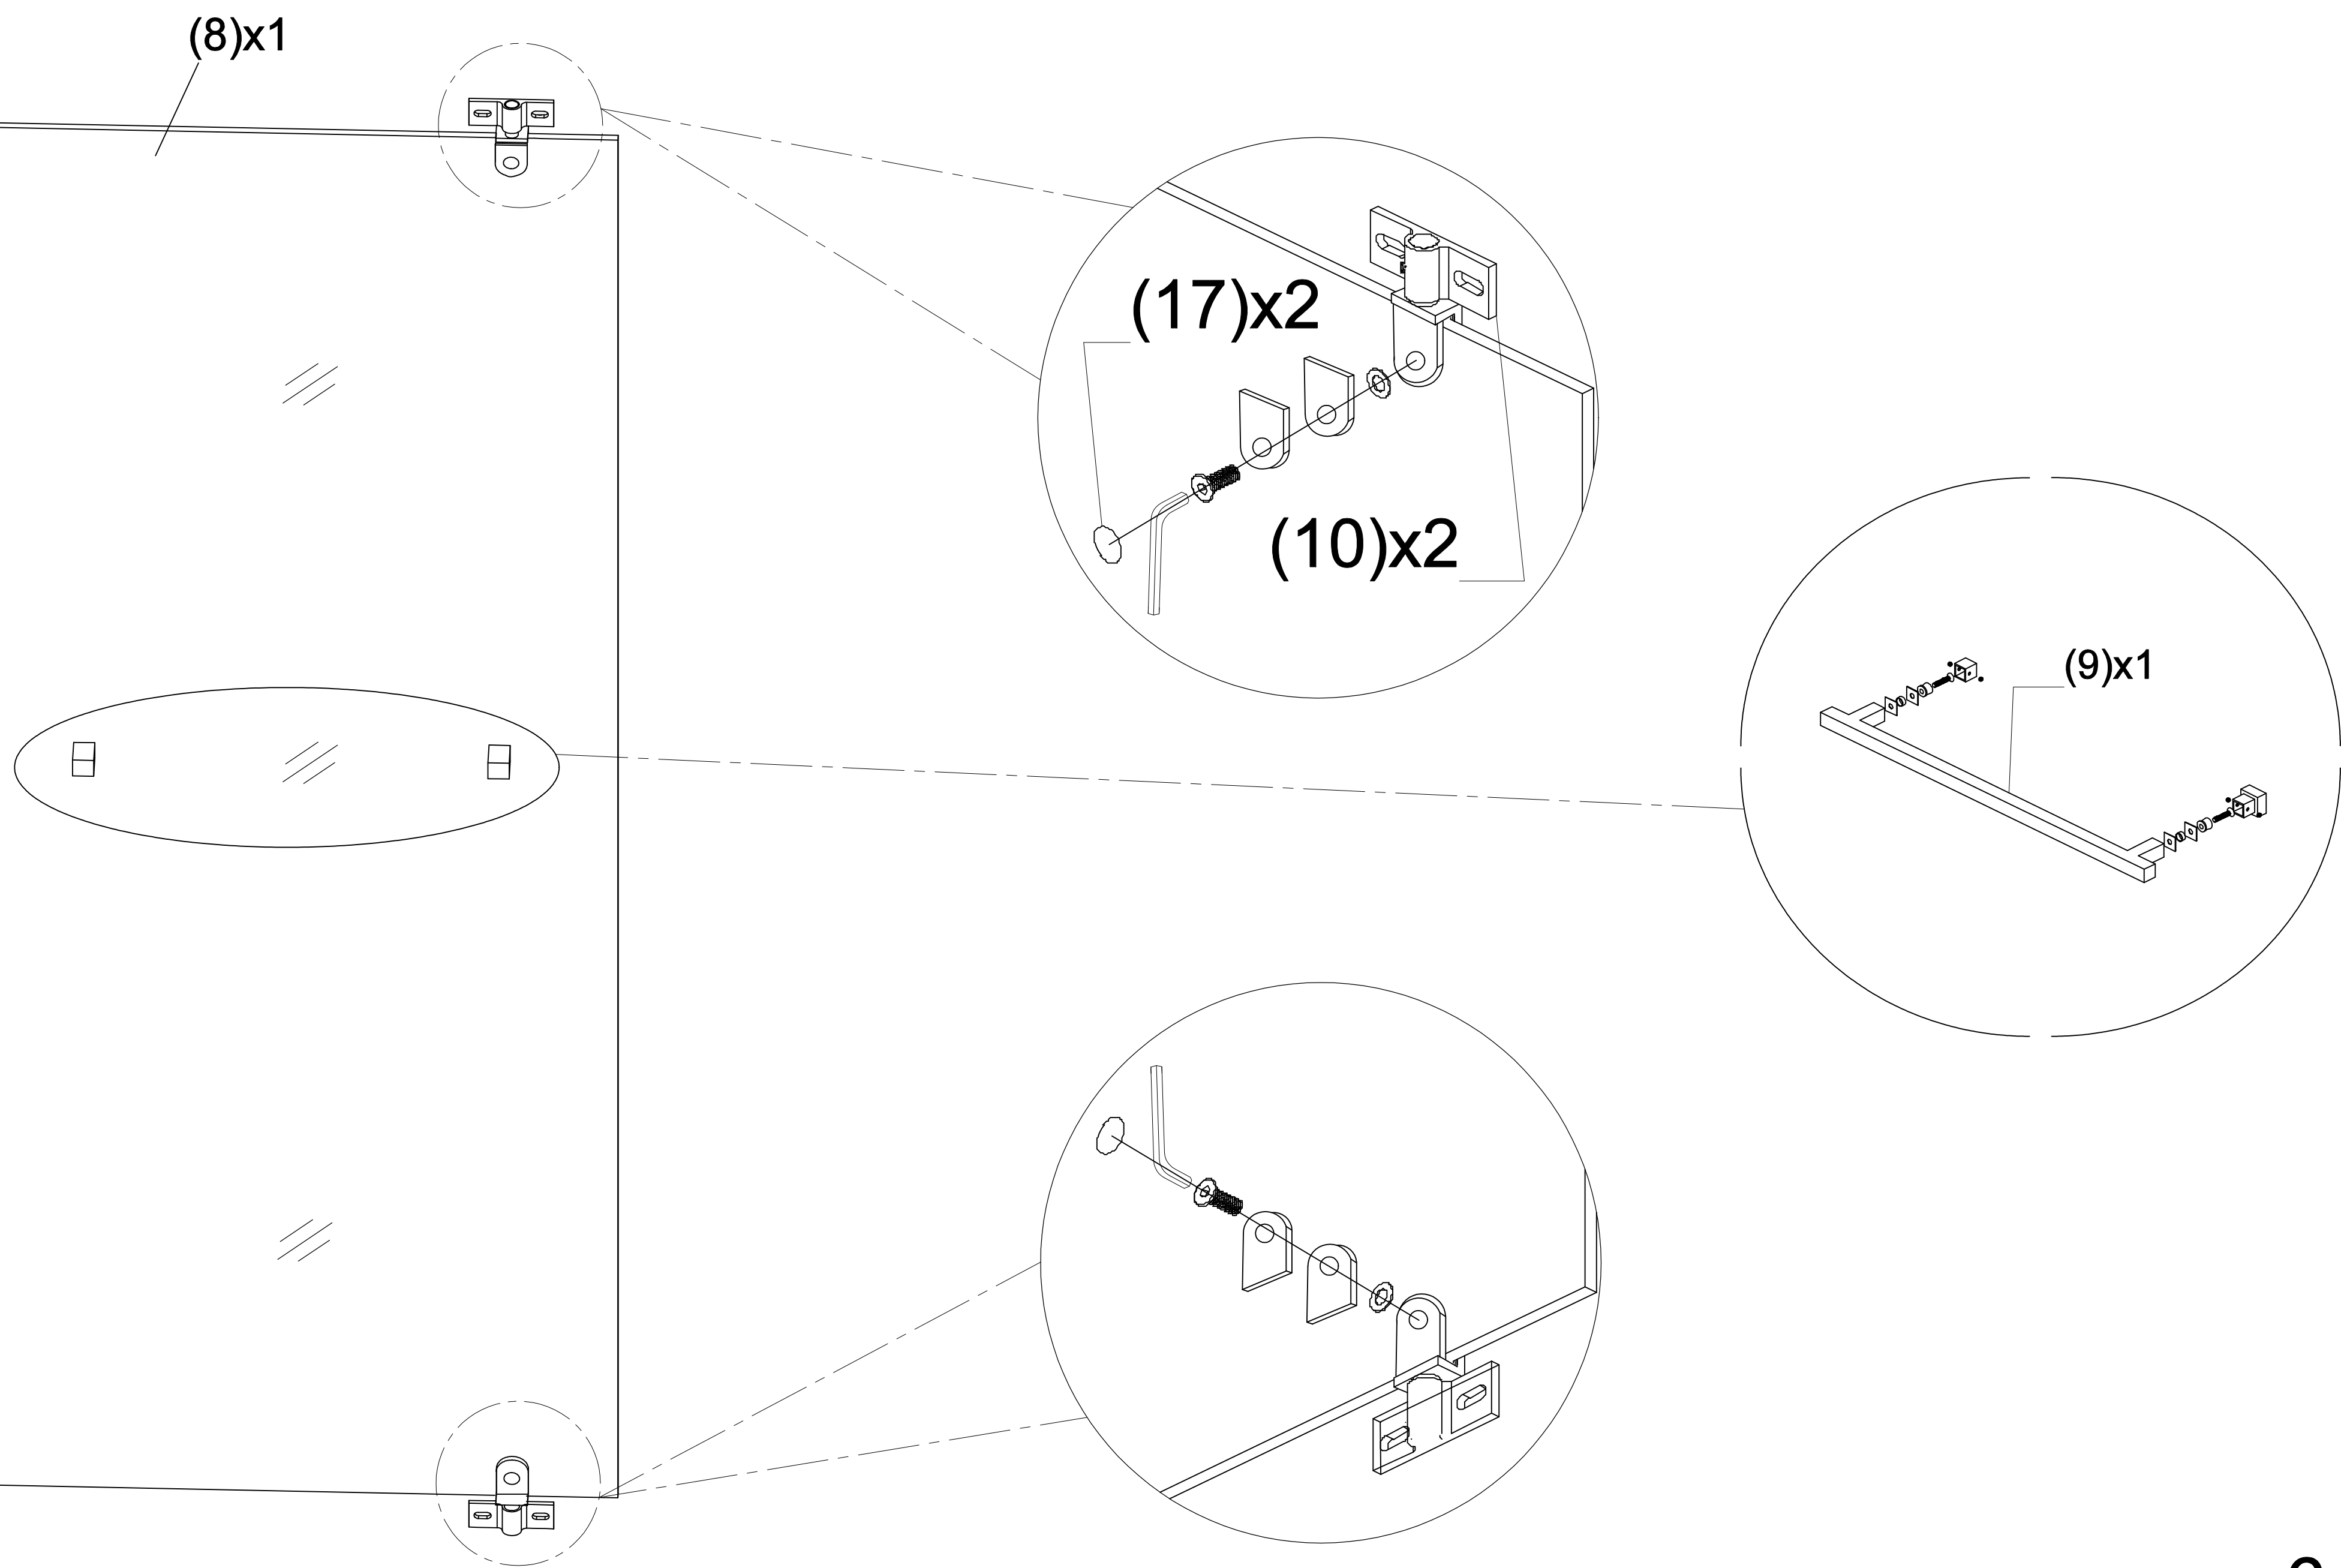


Step 7


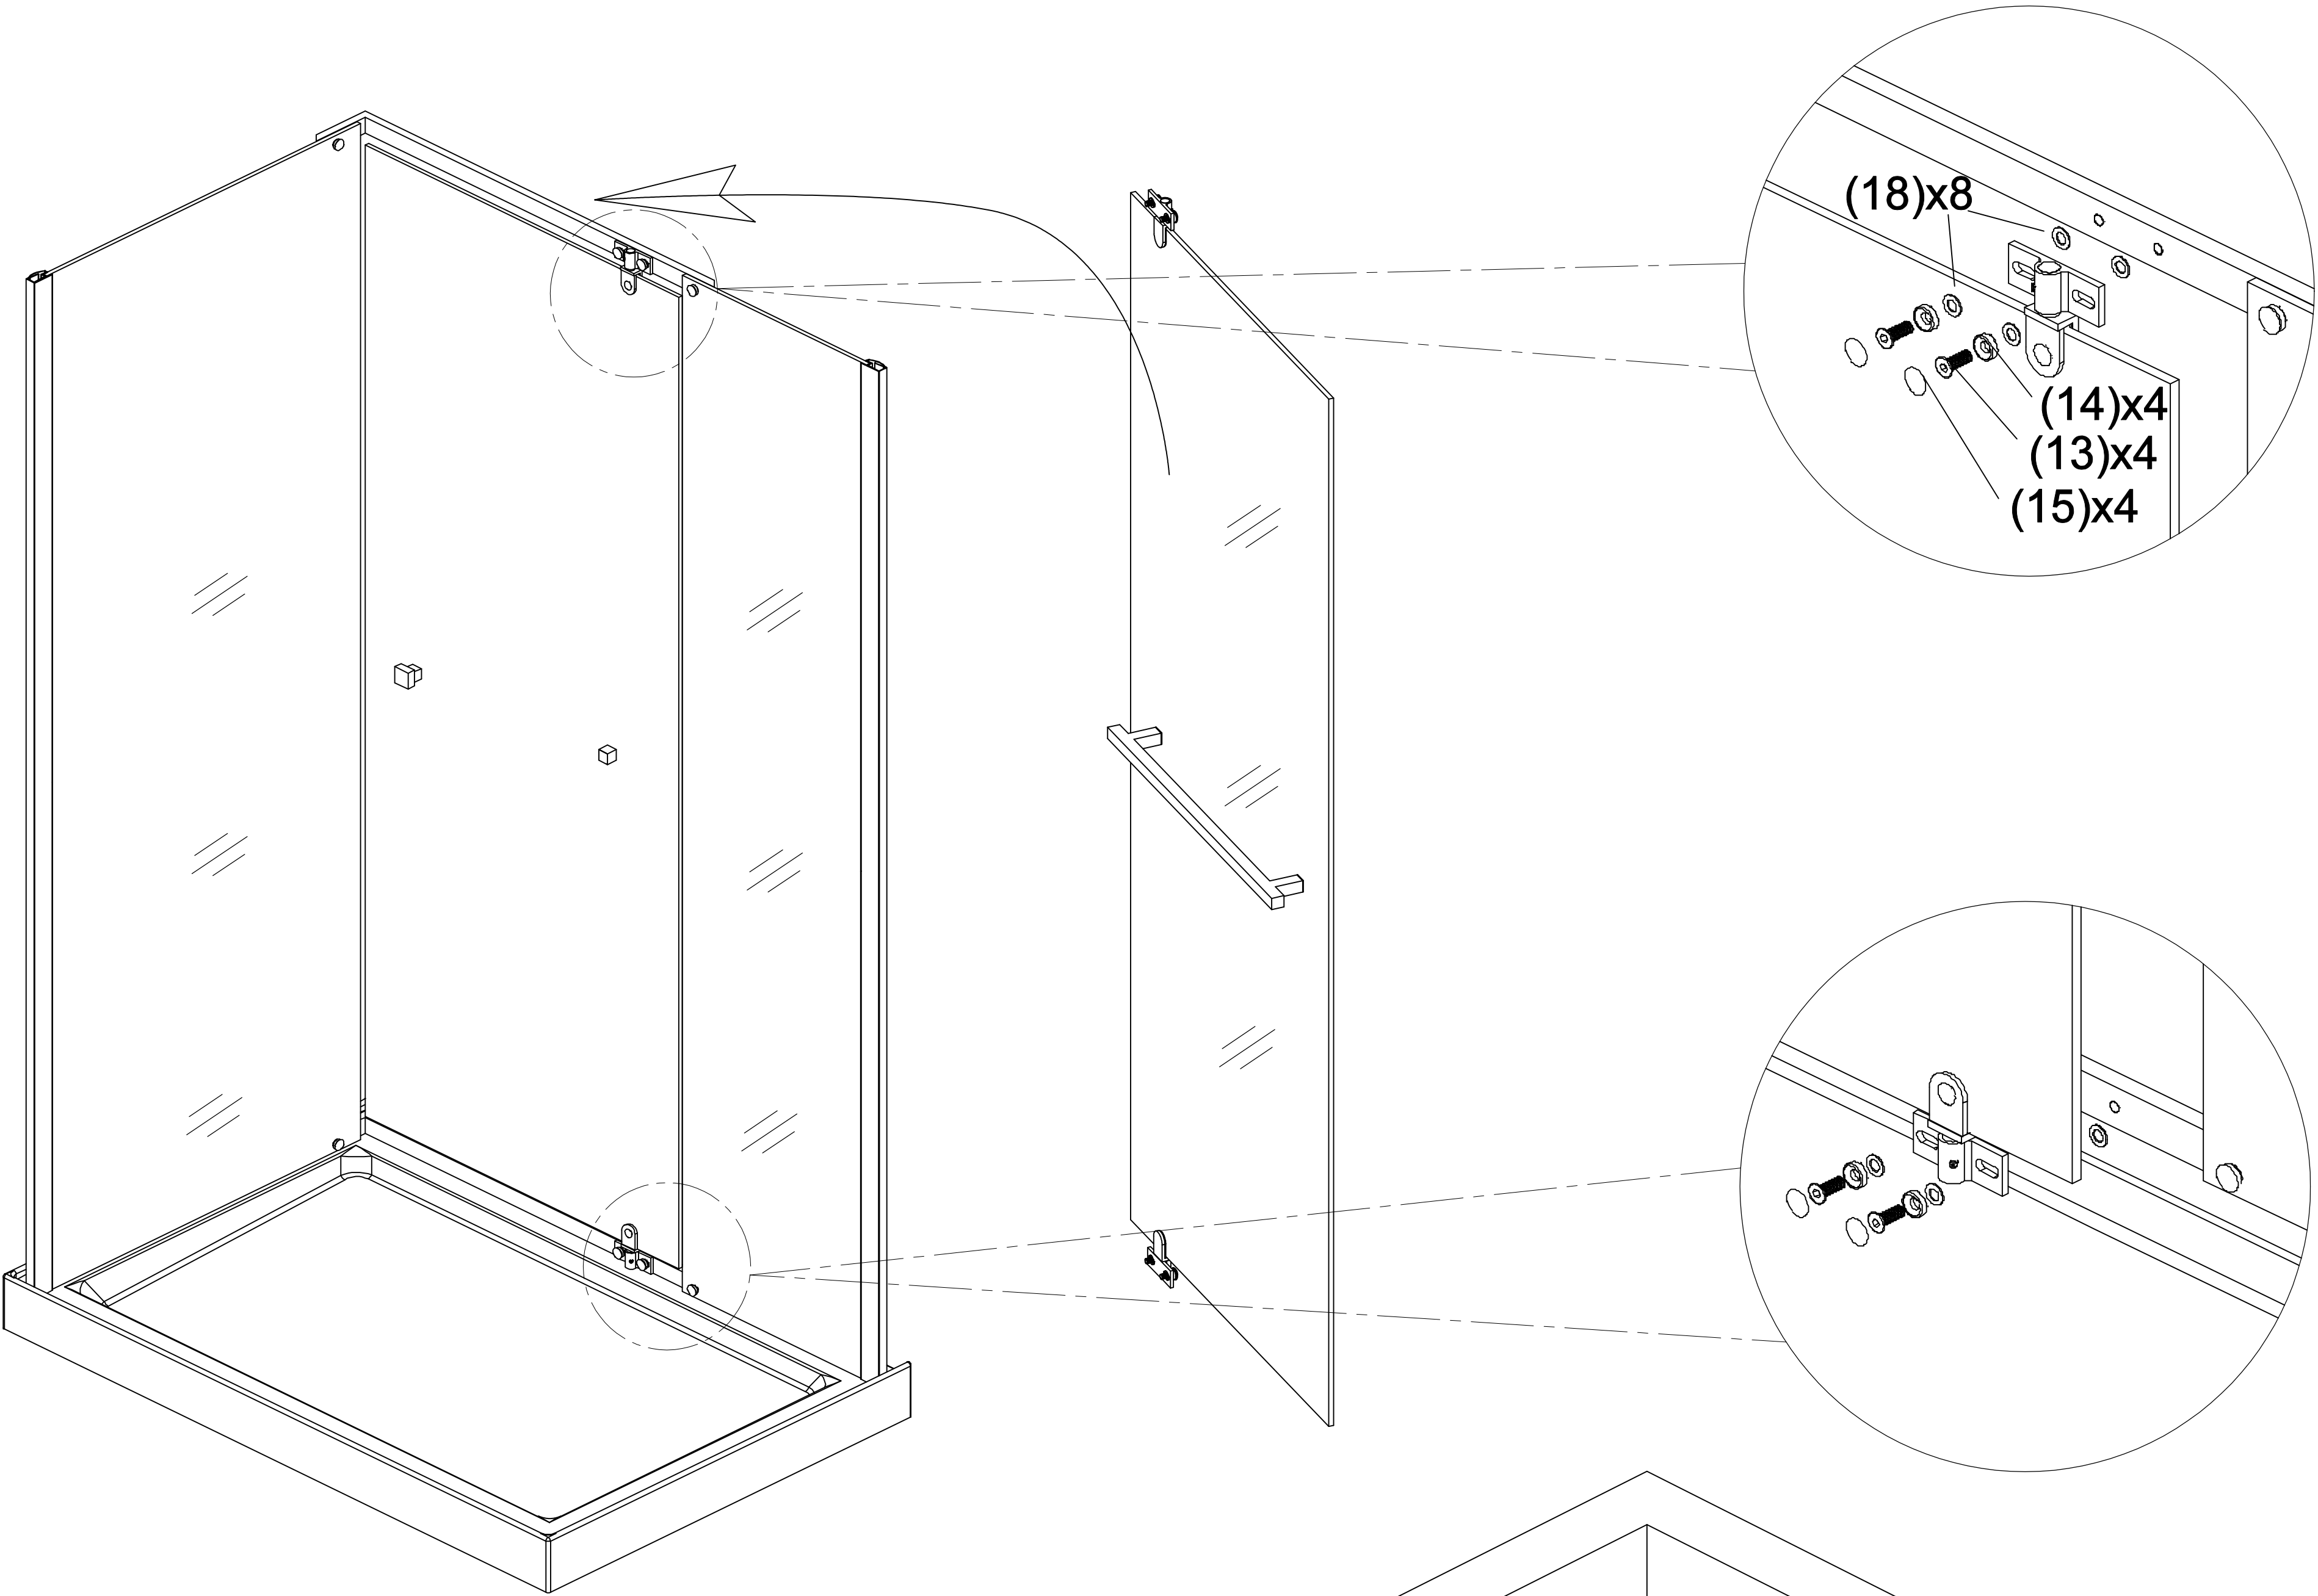


Step 8

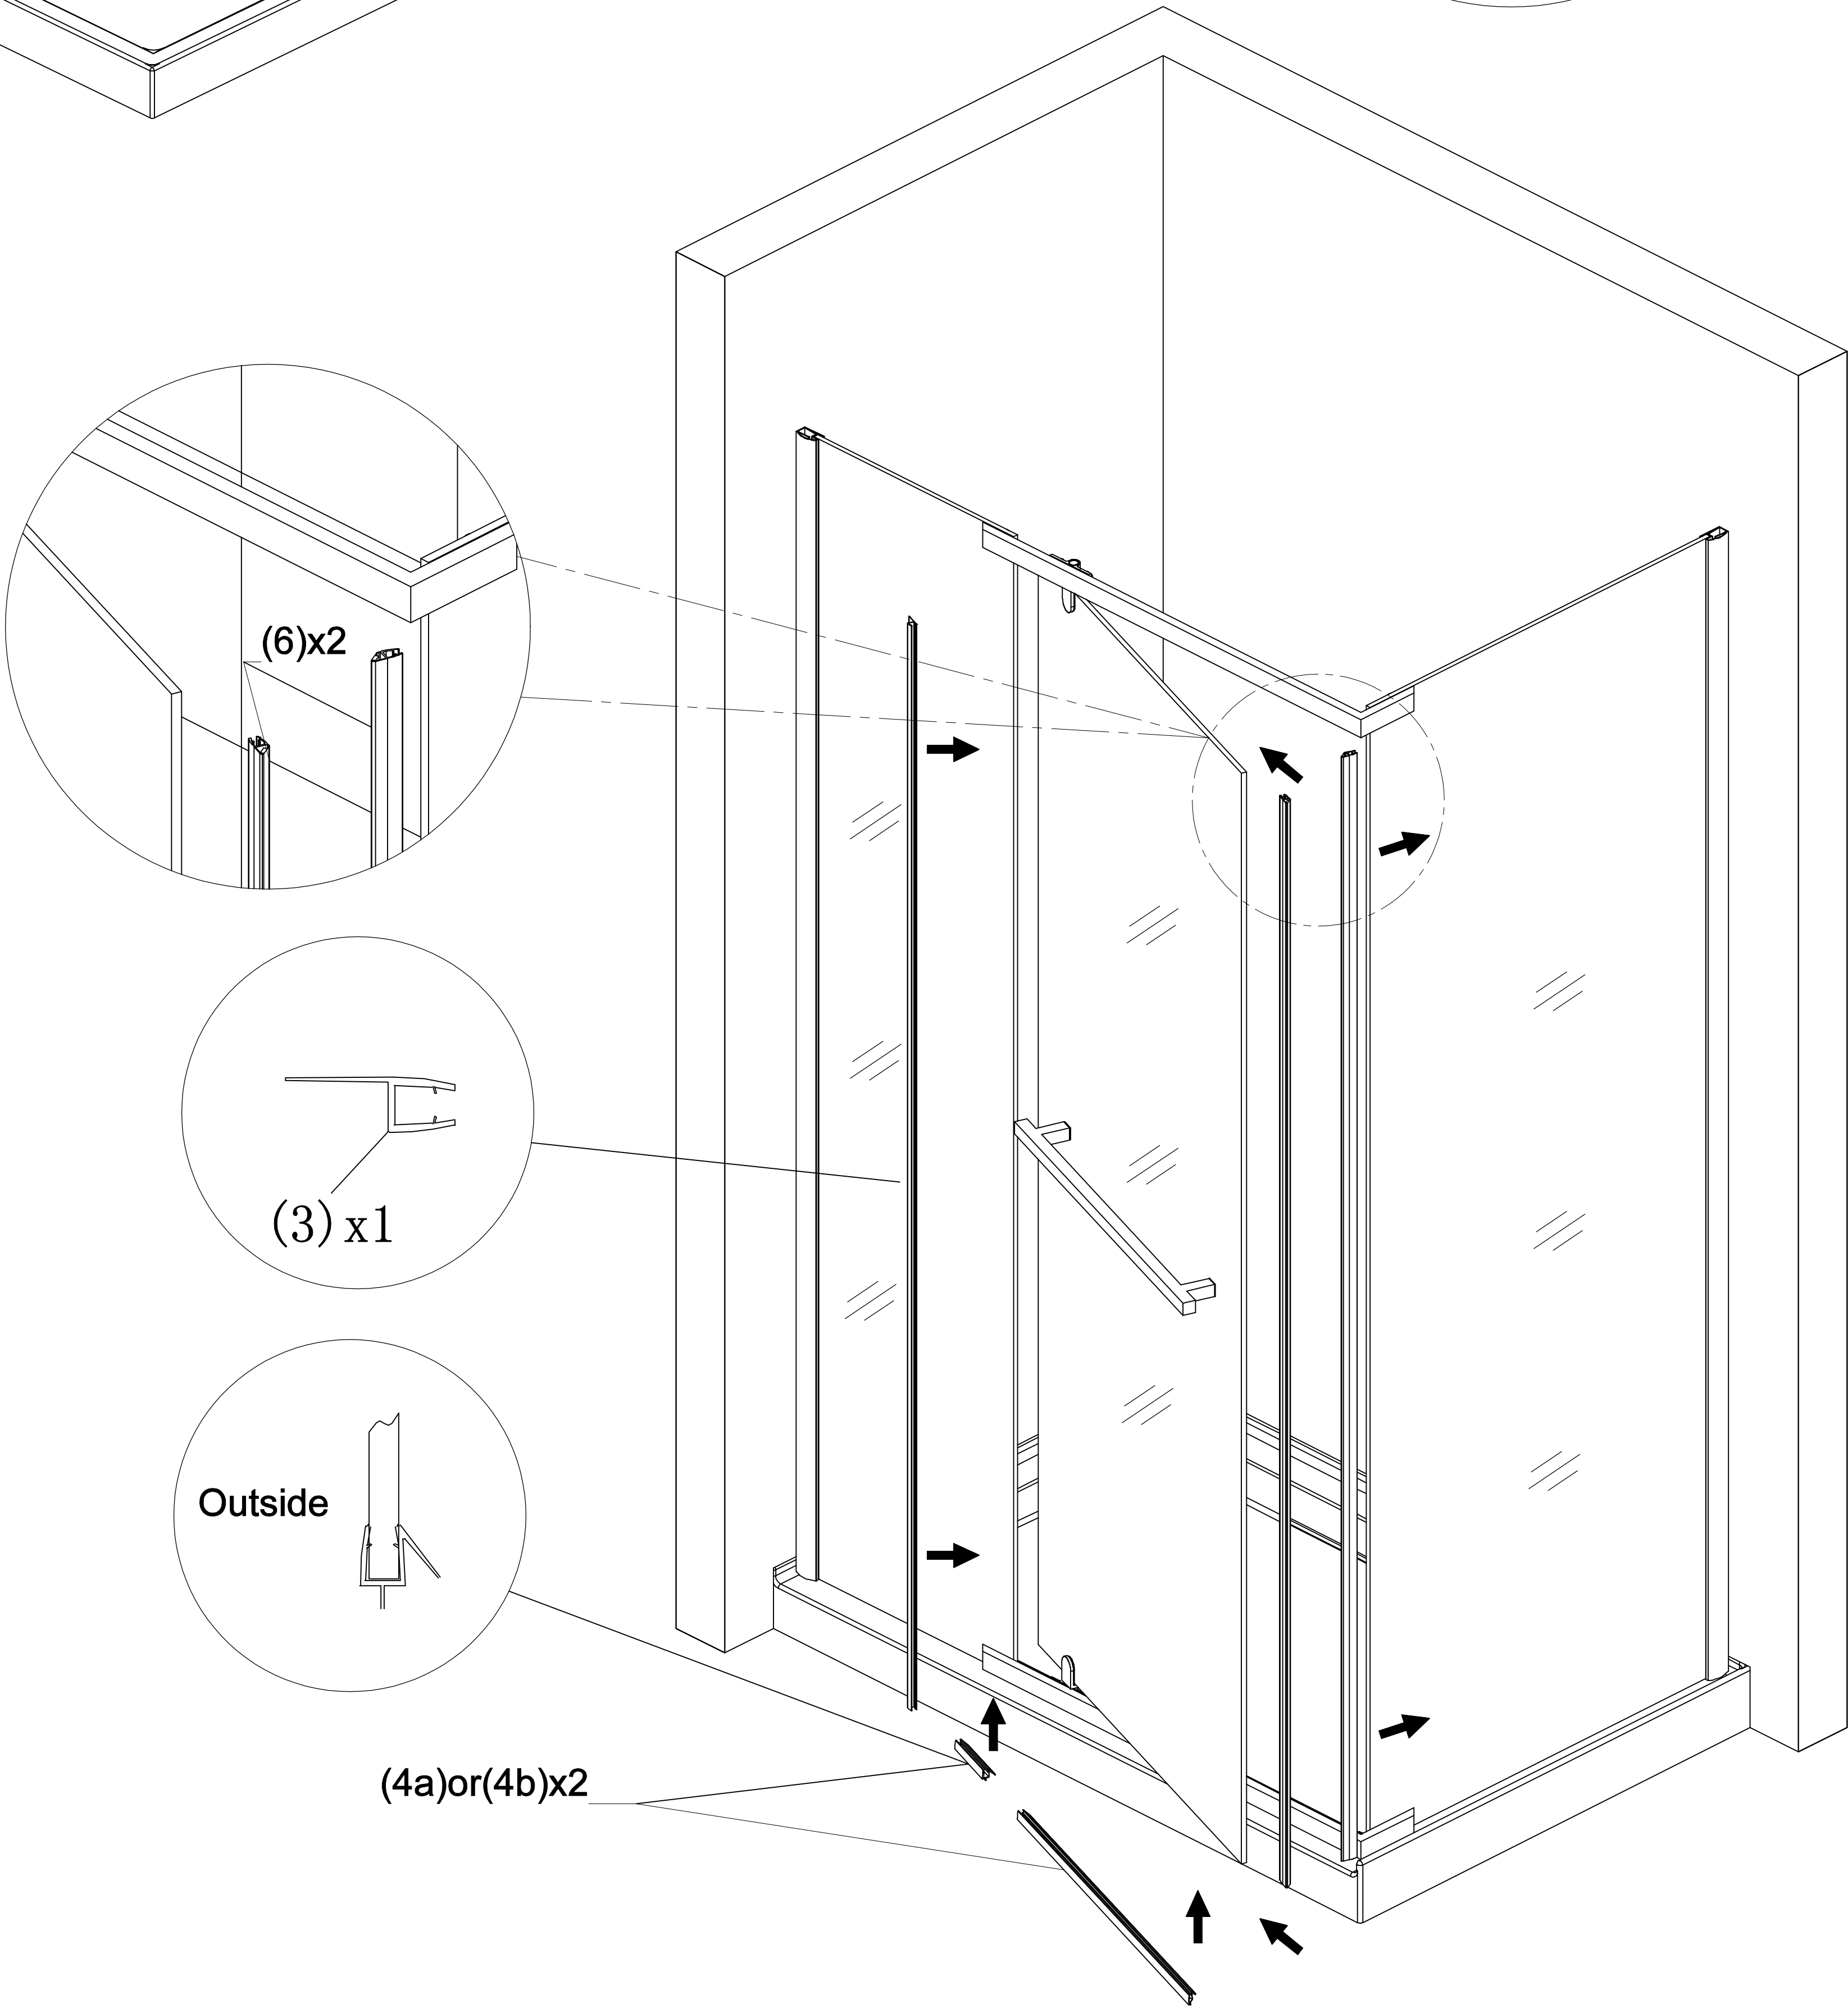

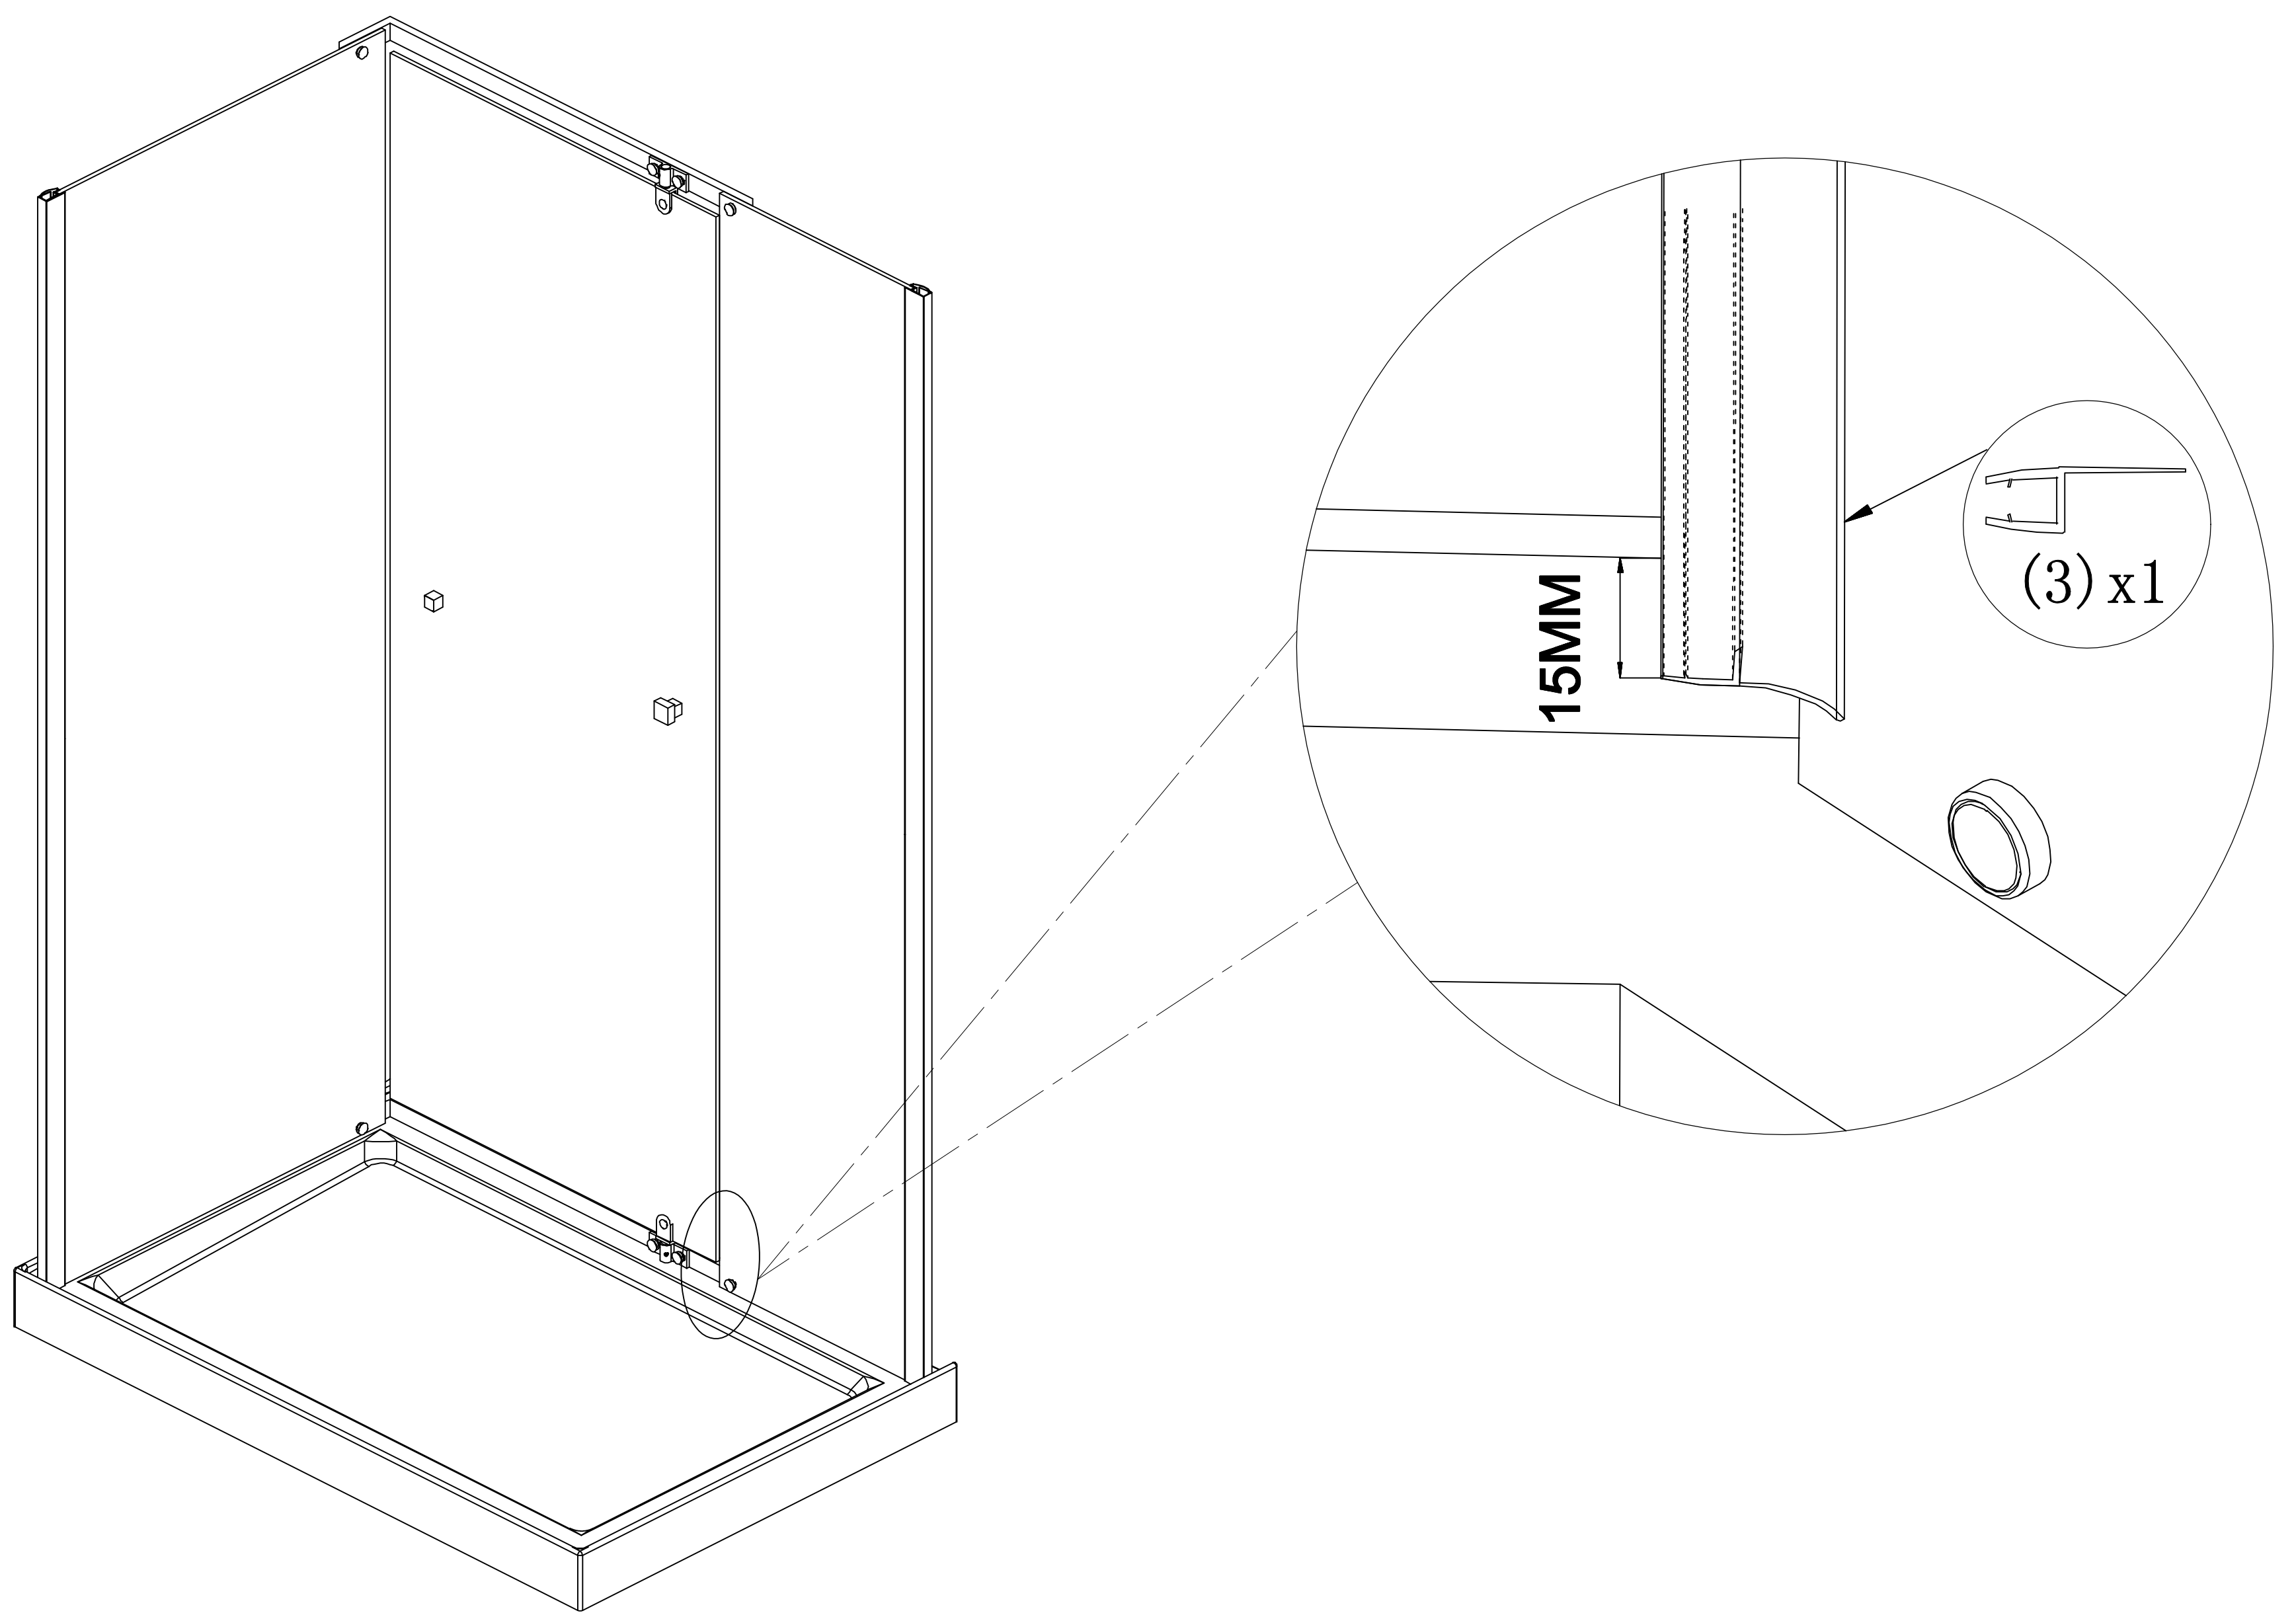

## Step 9

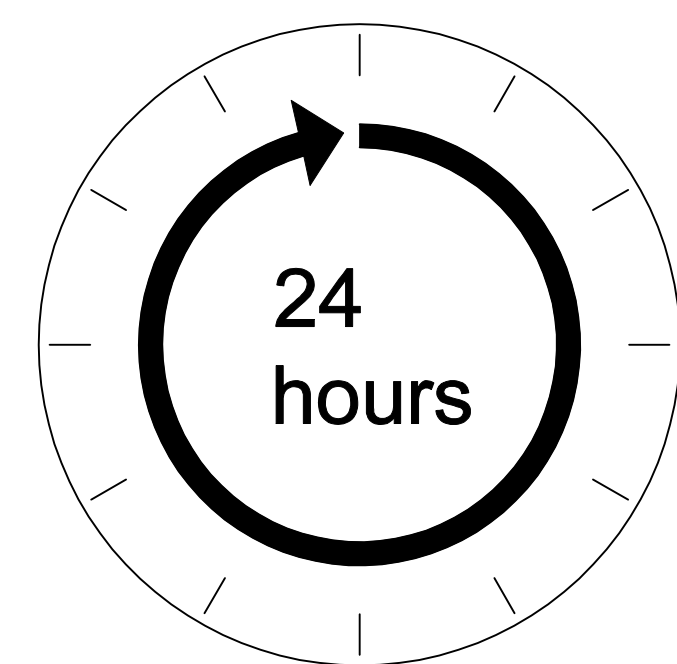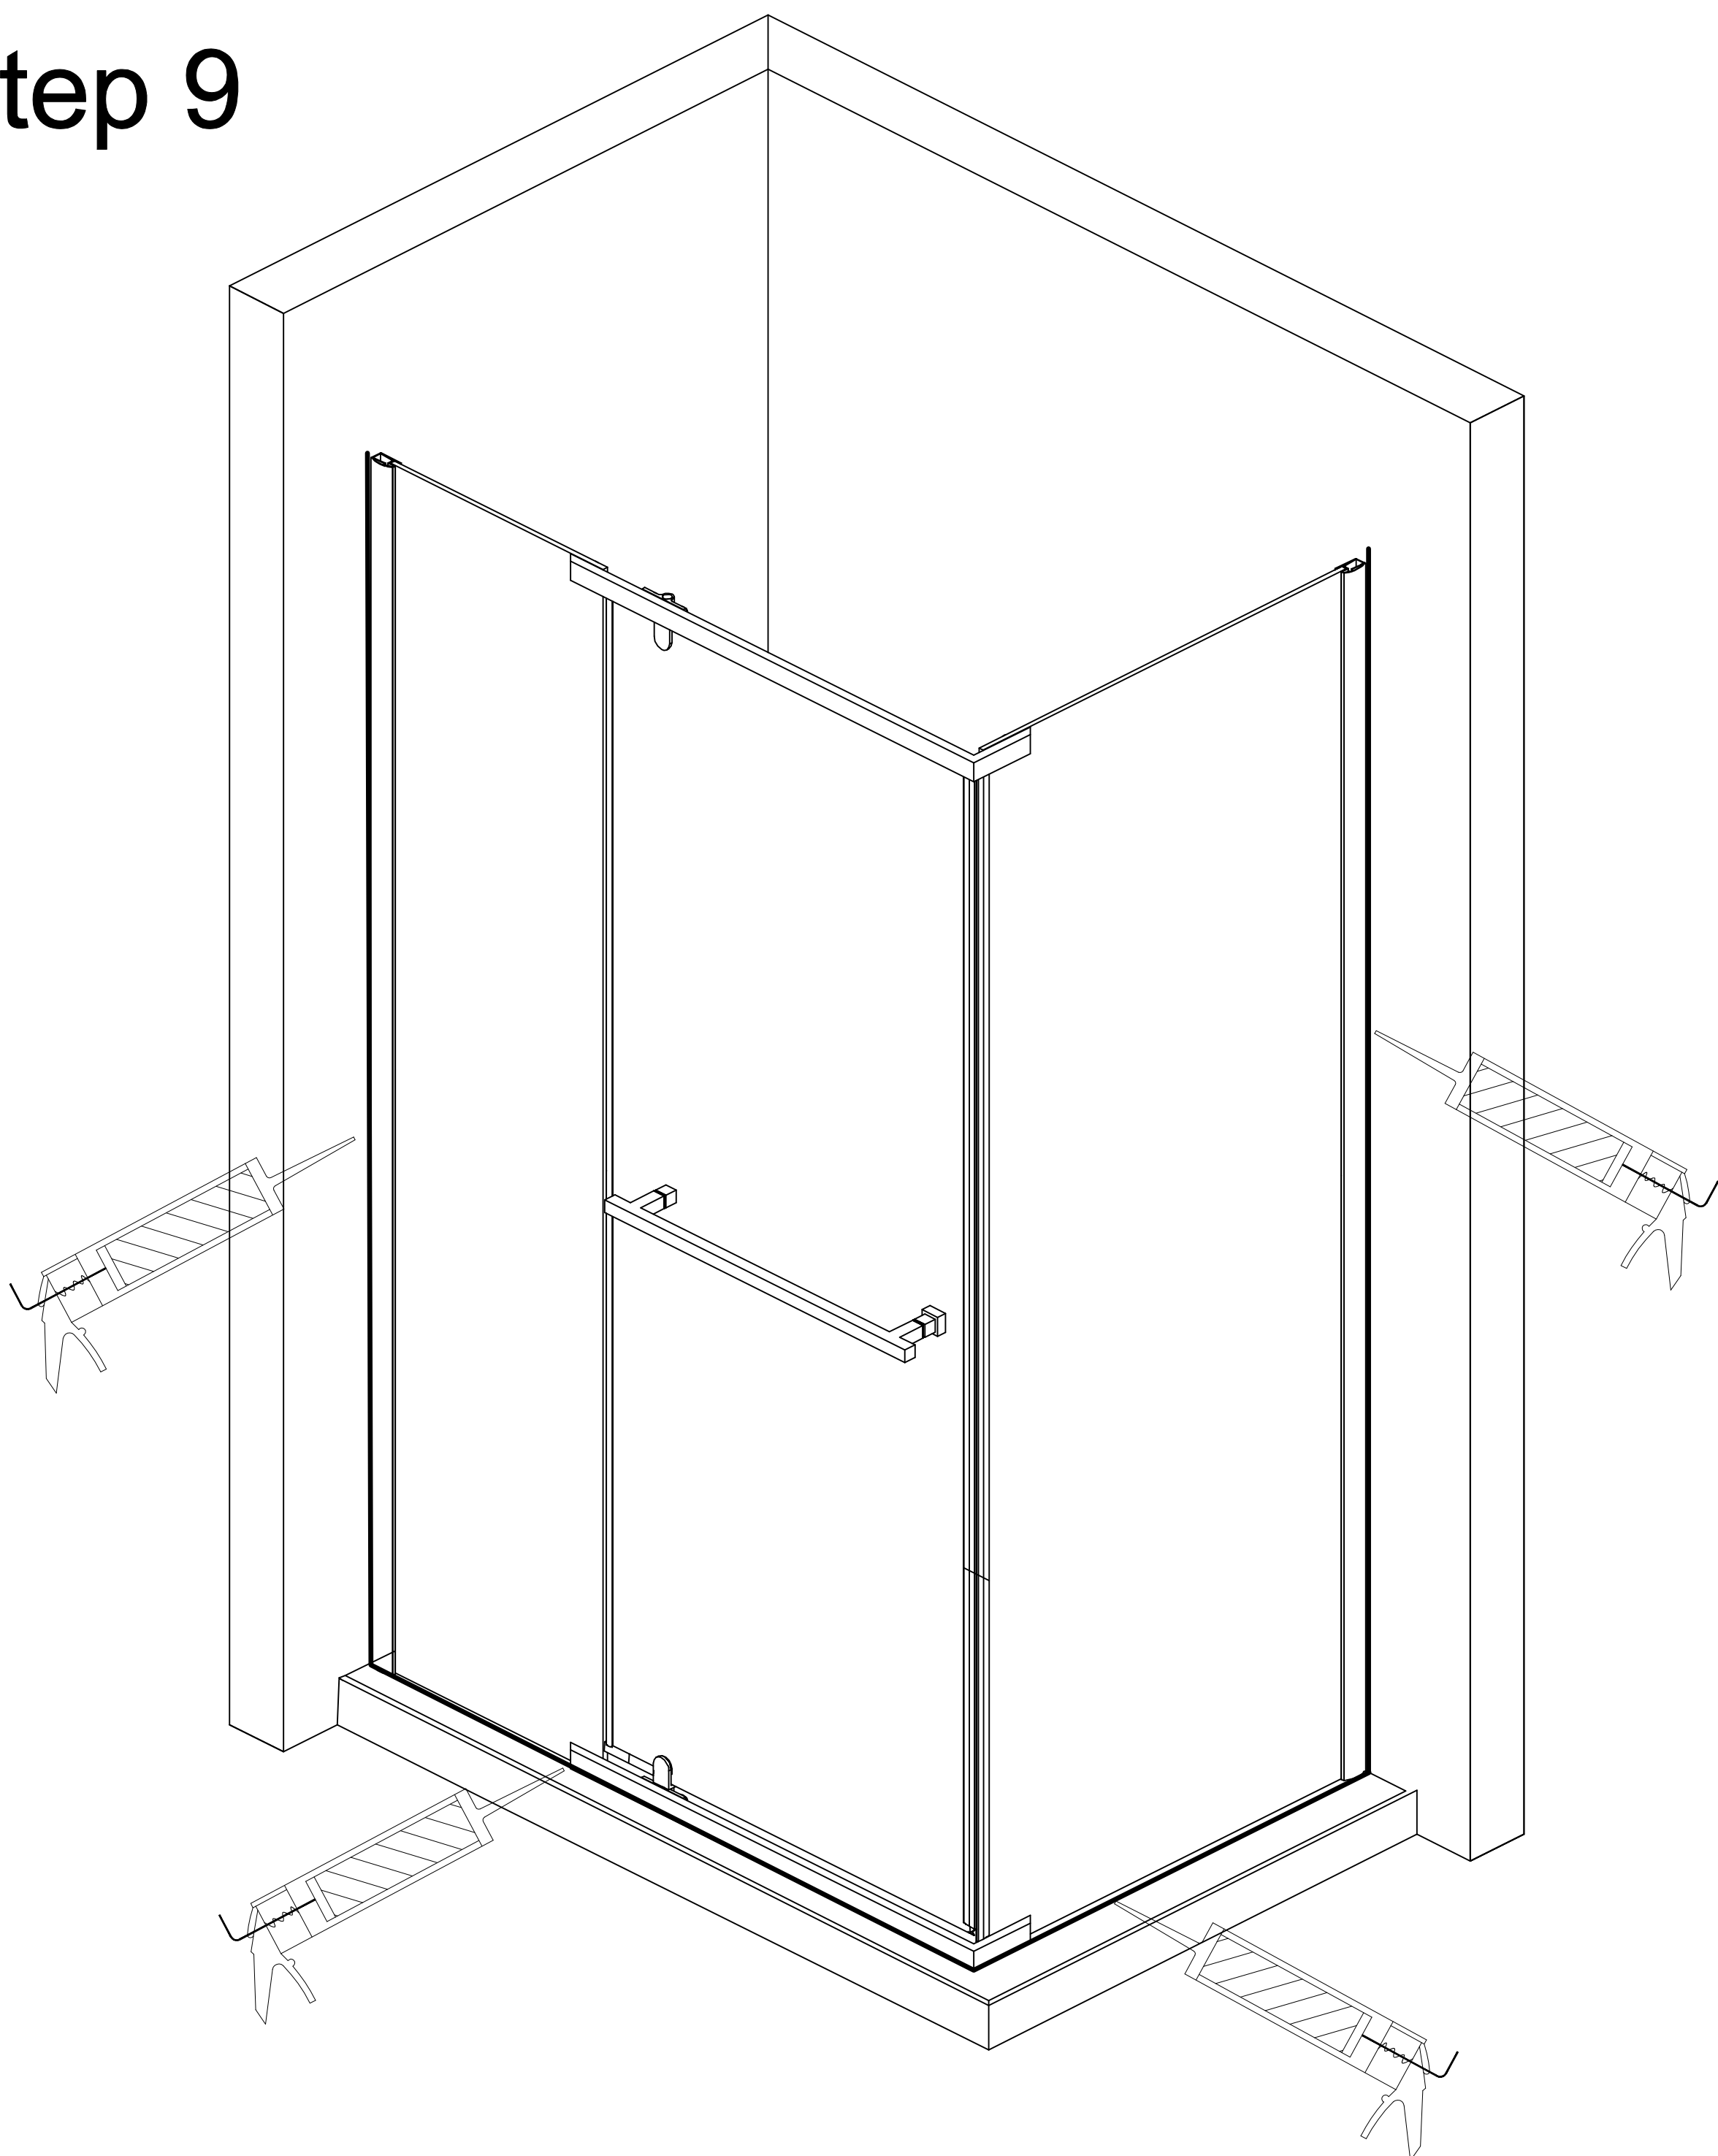

Allow 24 hours for silicone to dry before use.  
Silicone on the outside edge only