


INSTALLATION


# ➤ Instructions

## Adapter PSA Mini Van Thule 4200

301990, 301991

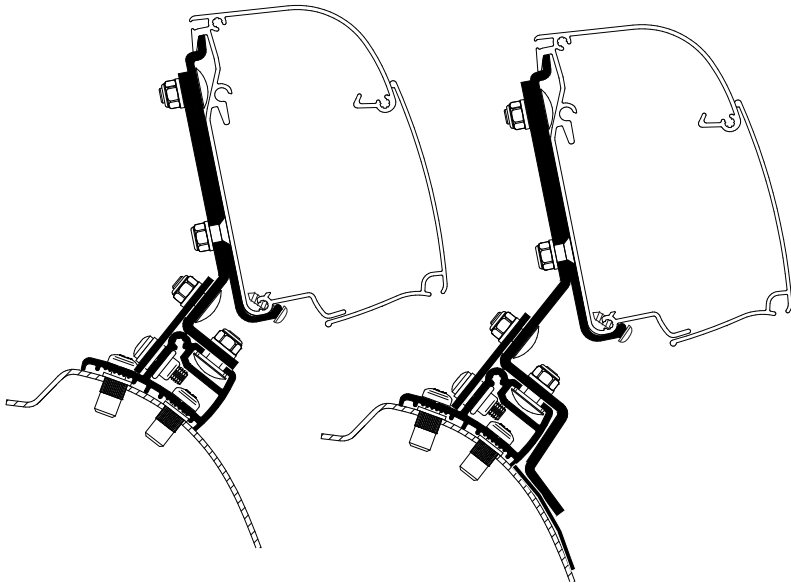



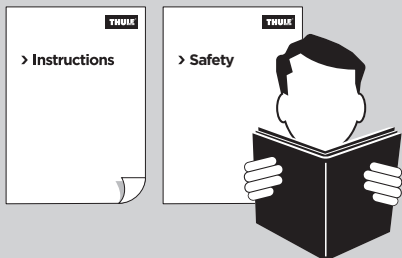

**DE** Adapter - Anleitung  
**NL** Adapter - Instructies  
**FR** Adaptateur - Instructions  
**IT** Adattatore - Istruzioni  
**ES** Adaptador - Instrucciones  
**SV** Adapter - Instruktioner  
**FI** Adapteri - Ohjeet  
**DA** Adapter - Instruktioner  
**NO** Adapter - Instruksjoner

**PL** Adapter - Instrukcje  
**PT** Adaptador - Instruções  
**CS** Adaptér - Návod  
**SL** Adapter - Navodila  
**TR** Adaptör - Talimatlar  
**ZH** 适配器 - 说明  
**JA** アダプター - 取扱説明書  
**KO** 어댑터 - 지침

## 1 WARNINGS & INFO

**4**

Warnungen & Infos / Waarschuwingen & info / Avertissements & informations / Avvertenze & informazioni / Advertencias & información / Varningar & information / Varoituksia & tietoja / Advarsler & info / Advarsler & information / Ostrzeżenia & informacje / Avisos e informações / Varování a informace / Opozorila in informacije / Uyarılar ve Bilgiler / 警告和信息 / 警告と情報 / 경고 및 정보

## 2 FITGUIDE

**5**

Kaufhilfe / Koopgids / Guide de sélection / Guida alla scelta / Guía de ajuste / Storleksguide / Valintaopas / Tilpasningsguide / Tilpasningsveiledning / Przewodnik Fit Guide / Guia de compatibilidade / Průvodce velikostmi / Fitguide / Takma Kilavuzu / 选配指南 / フィッティングガイド / 장착 가이드

## 3 CONTENT

**6**

Inhalt / Inhoudsopgave / Sommaire / Contenuto / Contenido / Innehåll / Sisällys / Indhold / Innhold / Treść / Índice / Obsah / Kazalo / İçerik / 目录 / 目次 / 목차

## 4 TOOLS

**7**






Werkzeuge / Gereedschappen / Outils / Strumenti / Herramientas / Verktøy / Työkalut / Værktøj / Verktøy / Narzędzia / Ferramentas / Nářadí / Orodja / Aletler / 工具 / ツール / 도구

## 5 INSTALLATION

**8**

Montage / Installatie / Installation / Installazione / Instalación / Montering / Asennus / Montering / Montering / Montaj / Instalação / Montáž / Namestitev / Montaj / 安装 / 取り付け / 설치



# 1 WARNINGS & INFO

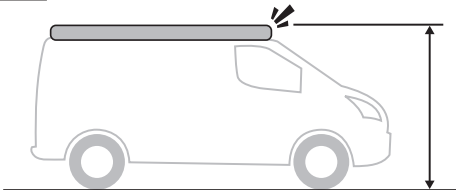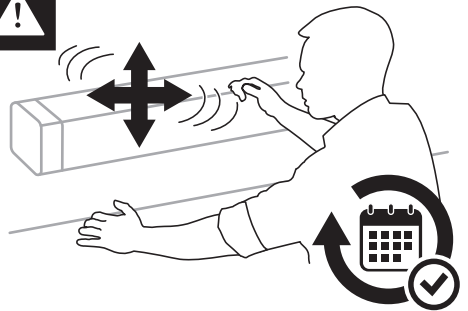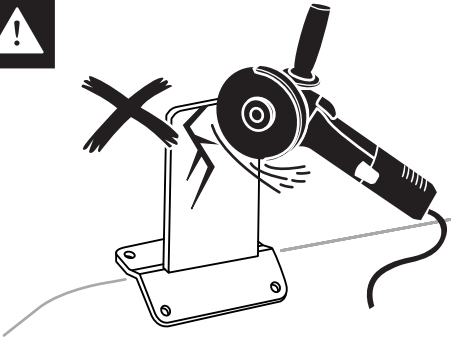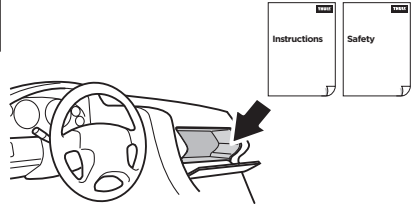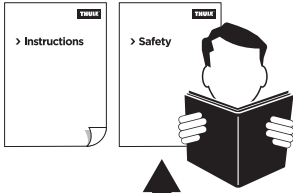

## 2 FITGUIDE








BRAND	MODEL	YEAR	ADAPTER	AWNING
Citroën	SpaceTourer L2H1 LHD	2016 - ...	301990	T4200 - 2.60m
Citroën	SpaceTourer L2H1 RHD		301991	
Citroën	Jumpy L2H1 LHD		301990	
Citroën	Jumpy L2H1 RHD		301991	
Peugeot	Traveller L2H1 LHD		301990	
Peugeot	Traveller L2H1 RHD		301991	
Peugeot	Expert L2H1 LHD		301990	
Peugeot	Expert L2H1 RHD		301991	
Toyota	ProAce L2H1 LHD		301990	
Toyota	ProAce L2H1 RHD		301991	
Toyota	ProAce Verso L2H1 LHD		301990	
Toyota	ProAce Verso L2H1 RHD		301991	
Opel	Vivaro C L2H1 LHD		2019 - ...	
Opel	Zafira Life L2H1 LHD			
Vauxhall	Vivaro C L2H1 RHD	301991		
Vauxhall	Zafira Life L2H1 RHD			

### 3 CONTENT

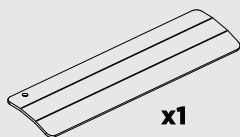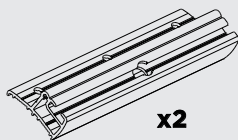

**LHD (301990)**


**RHD (301991)**

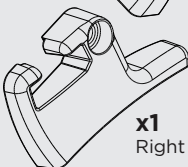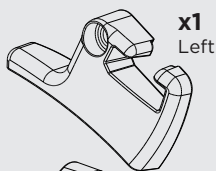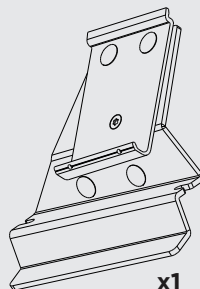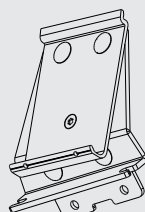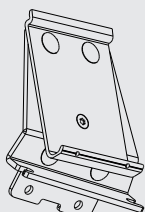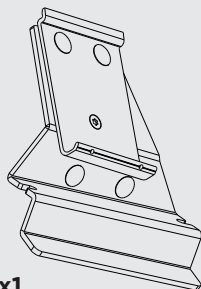

i


### LHD (301990)

Left hand drive  
(EU)

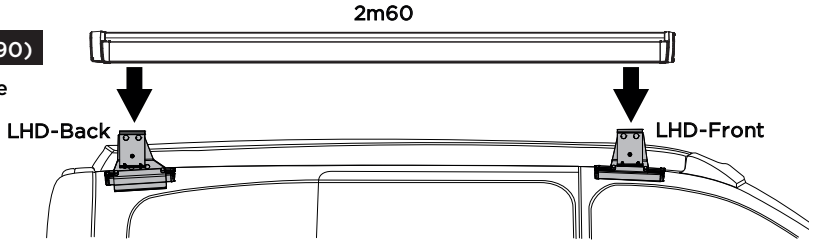


### RHD (301991)

Right hand drive  
(UK)

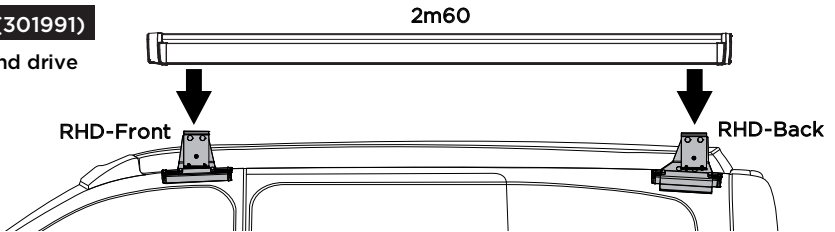


## 4 TOOLS

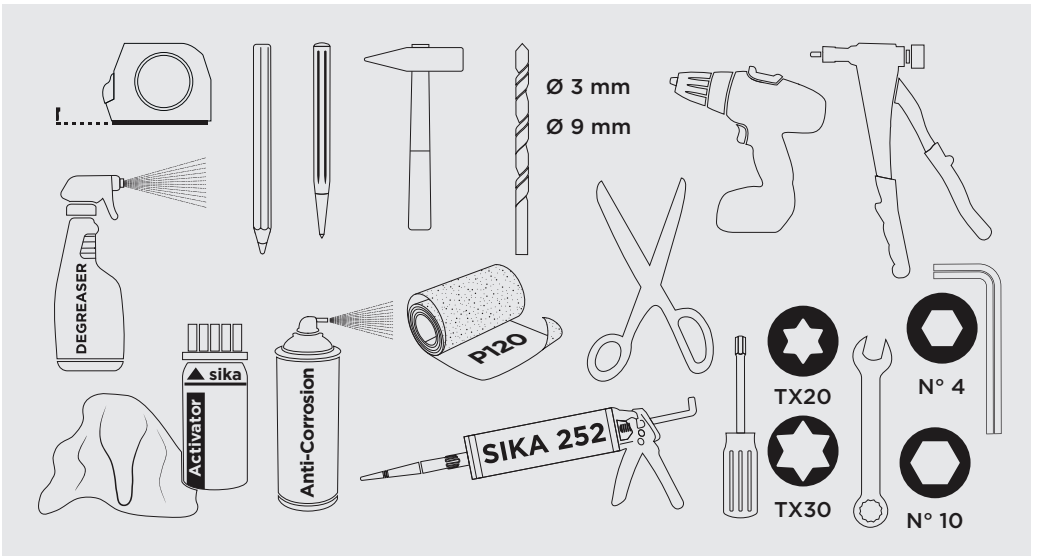

## 5 INSTALLATION



1

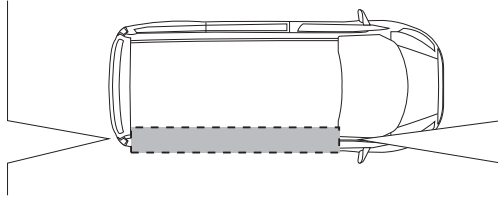


2





A

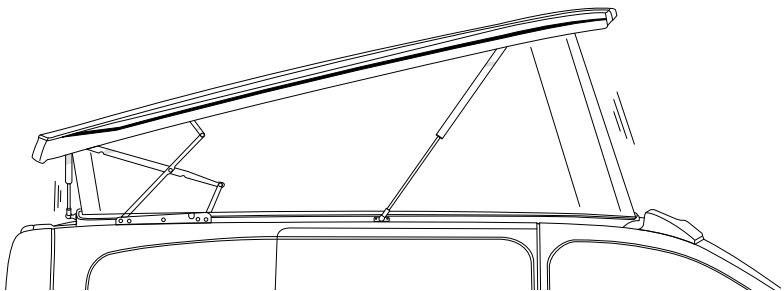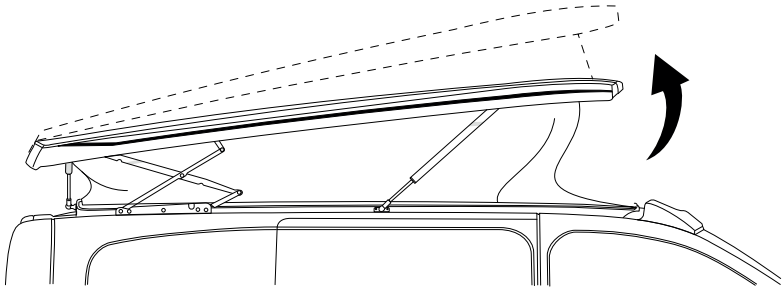






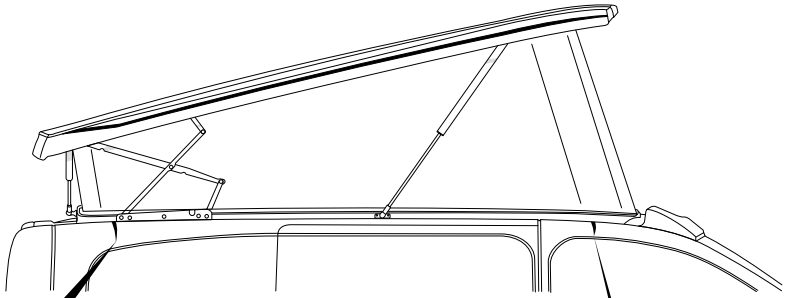



**BACK**

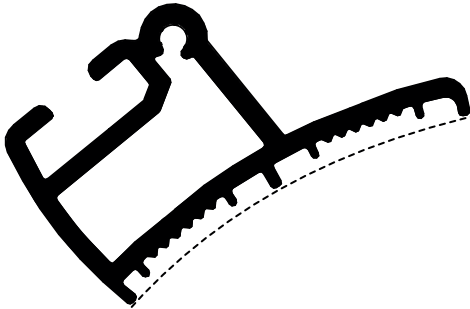



**FRONT**

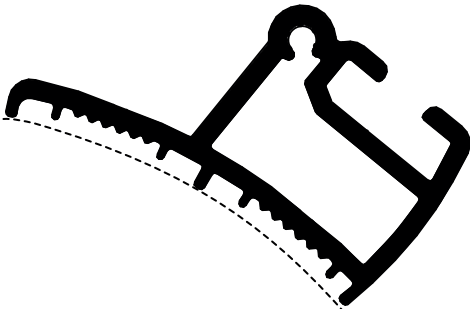



3

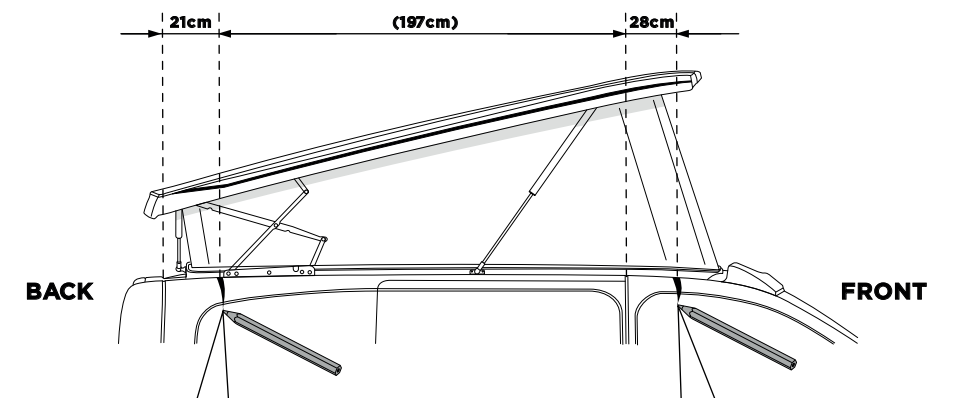







A

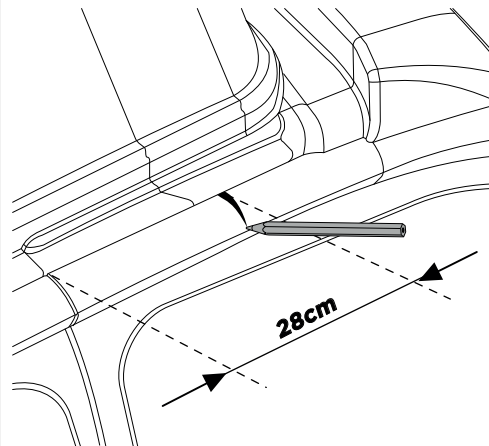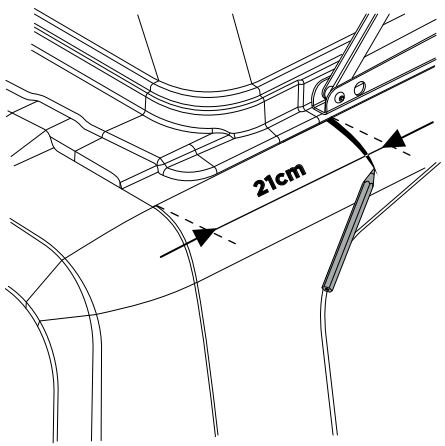


B

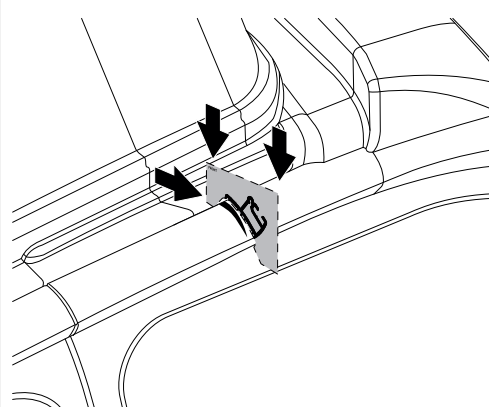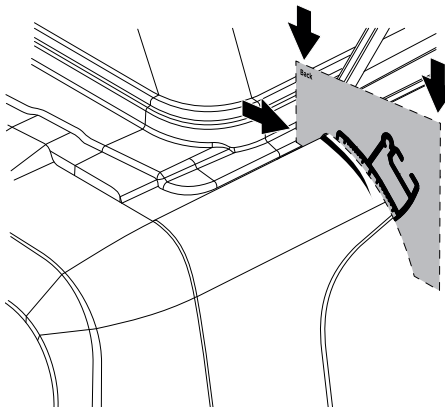

C

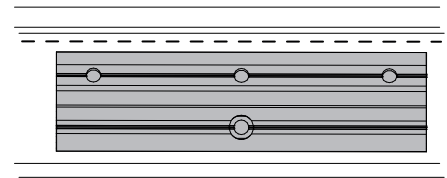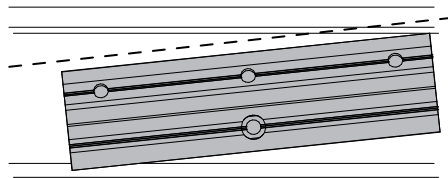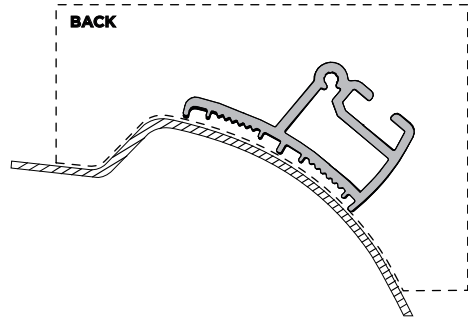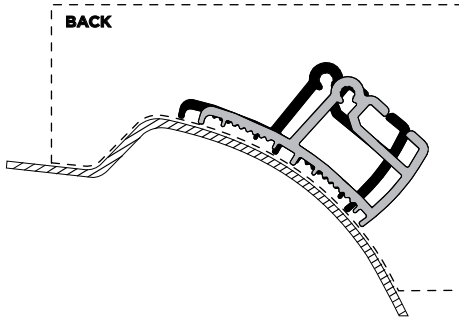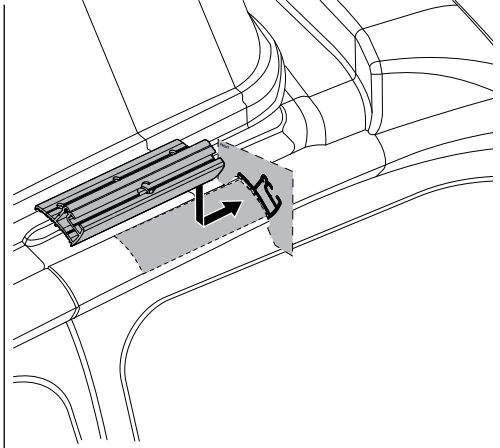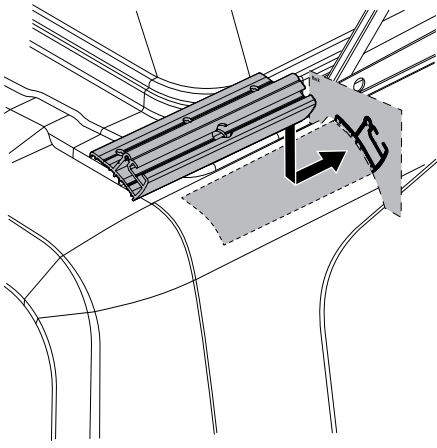


D

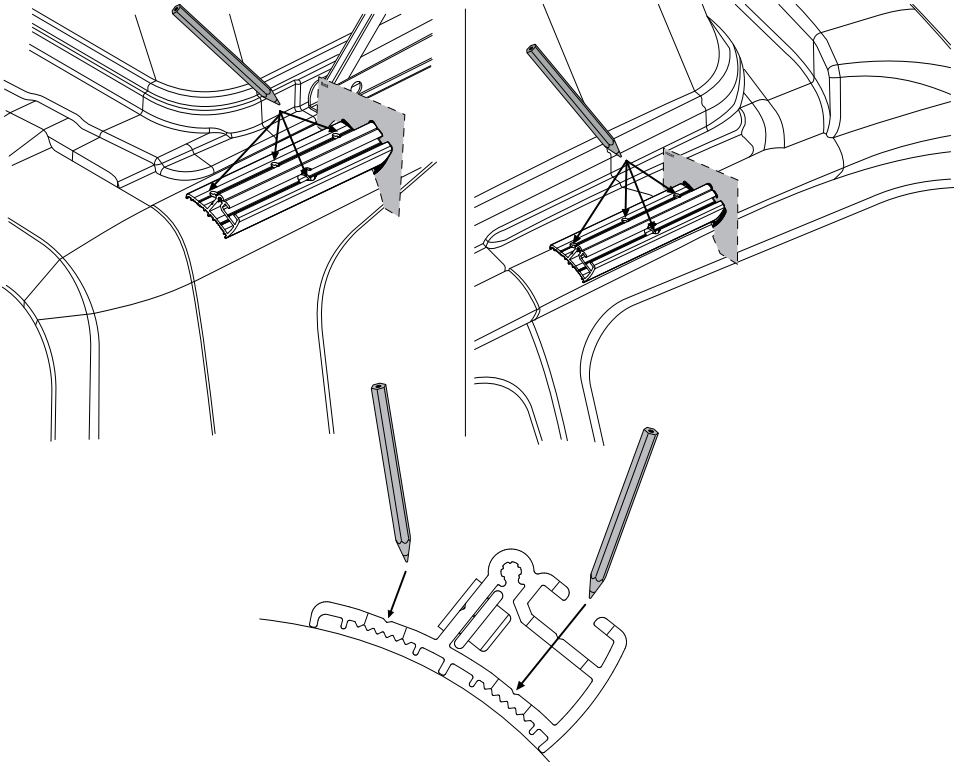

4






x8






Ø 9 mm




A

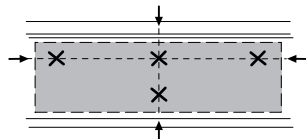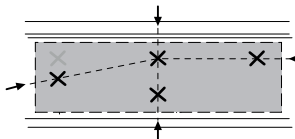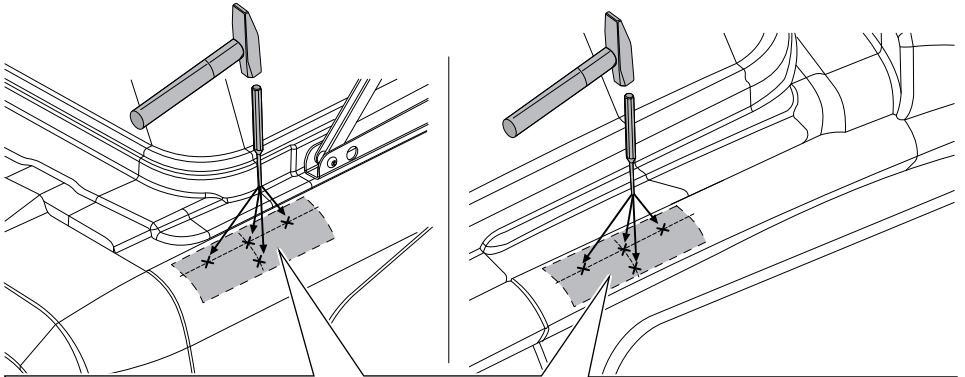


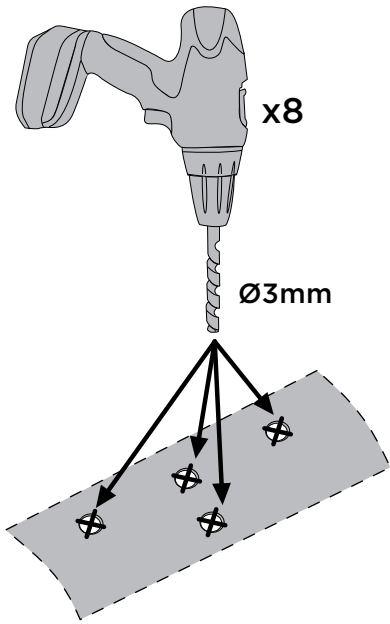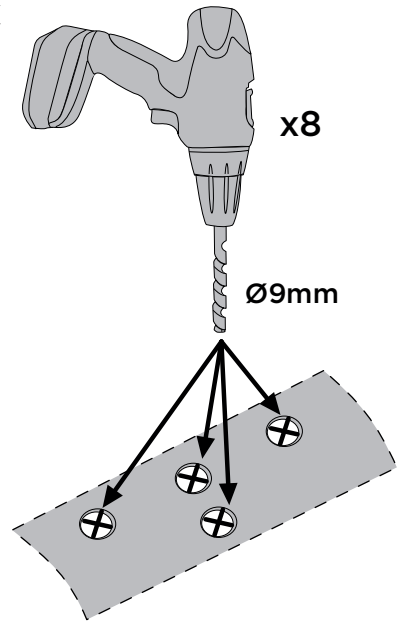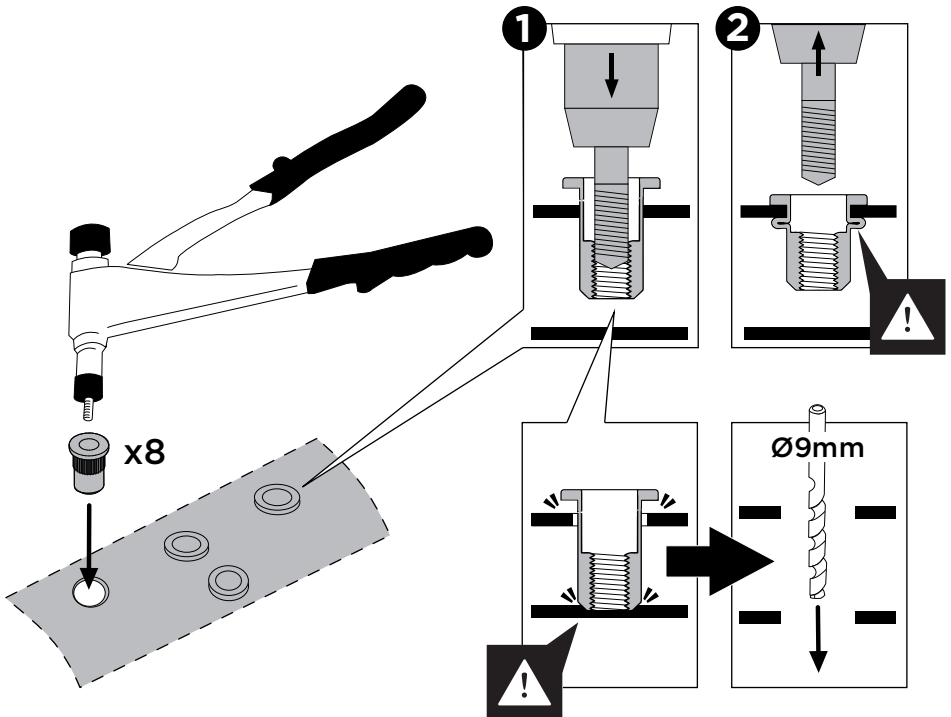**B****C****D**


5



A

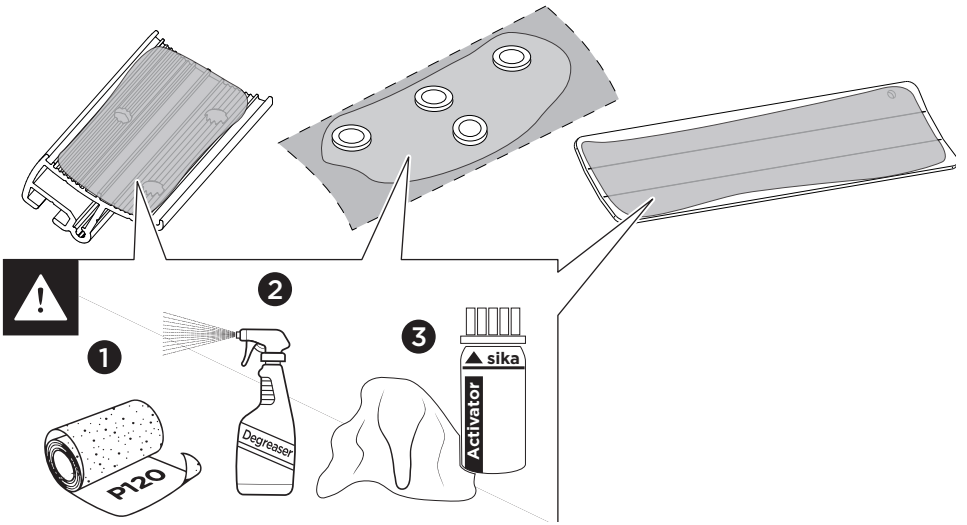


B

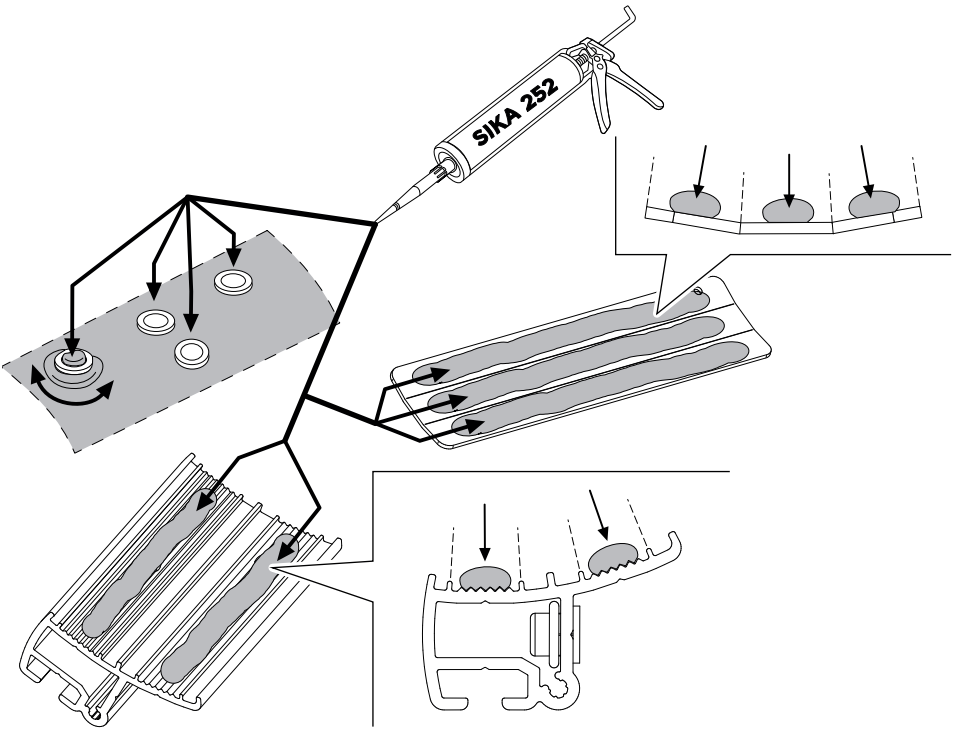


6




A

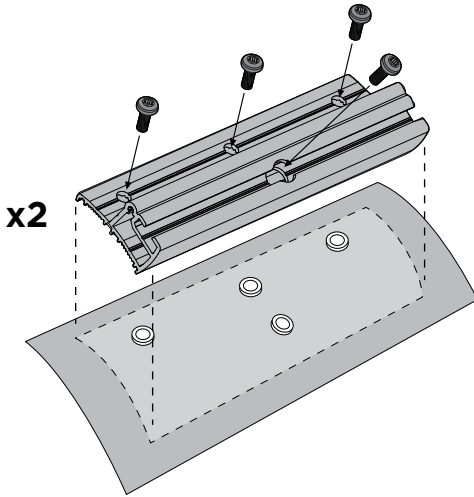


B

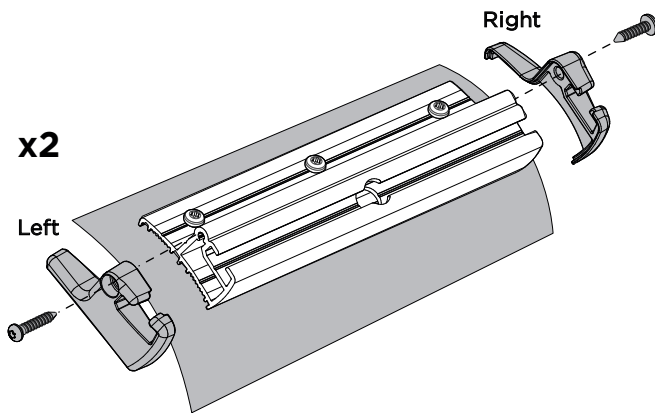


C

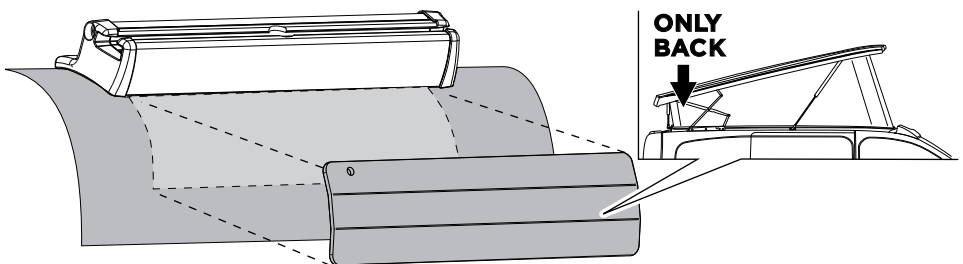


7

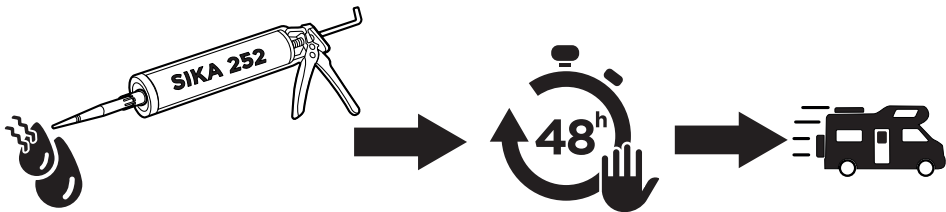


8

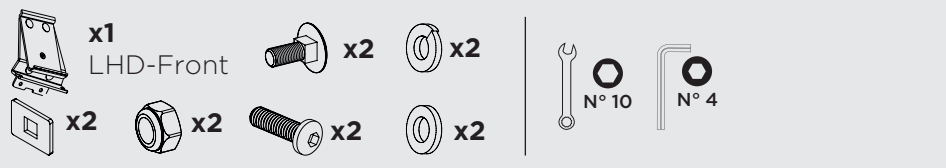

### LHD

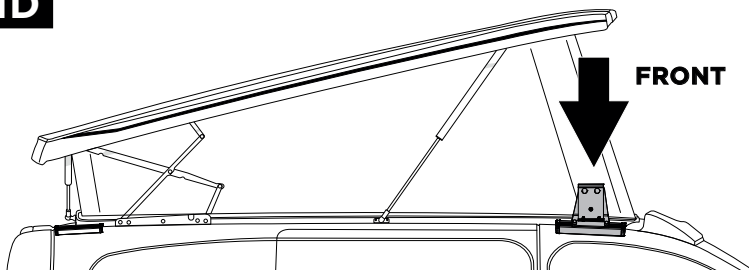


A

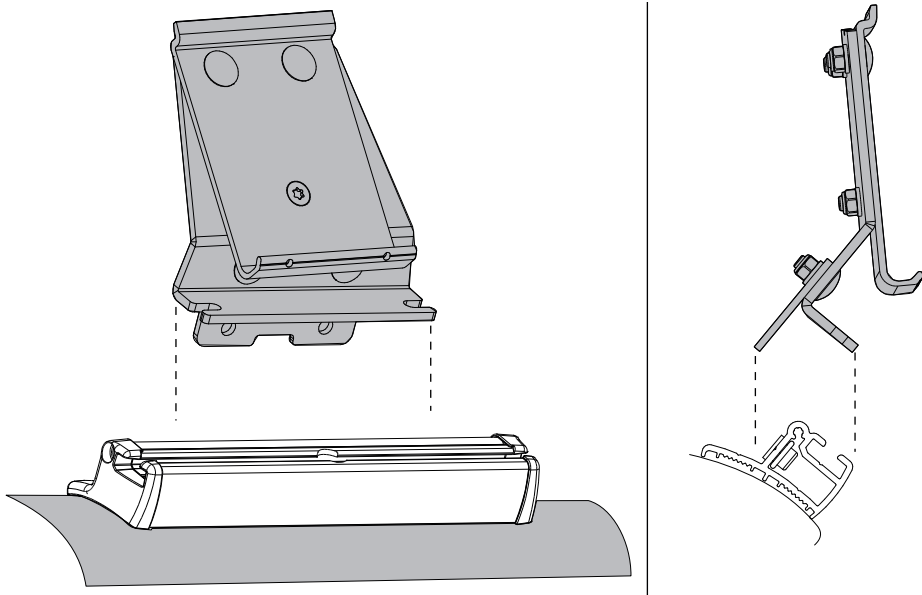




**B**

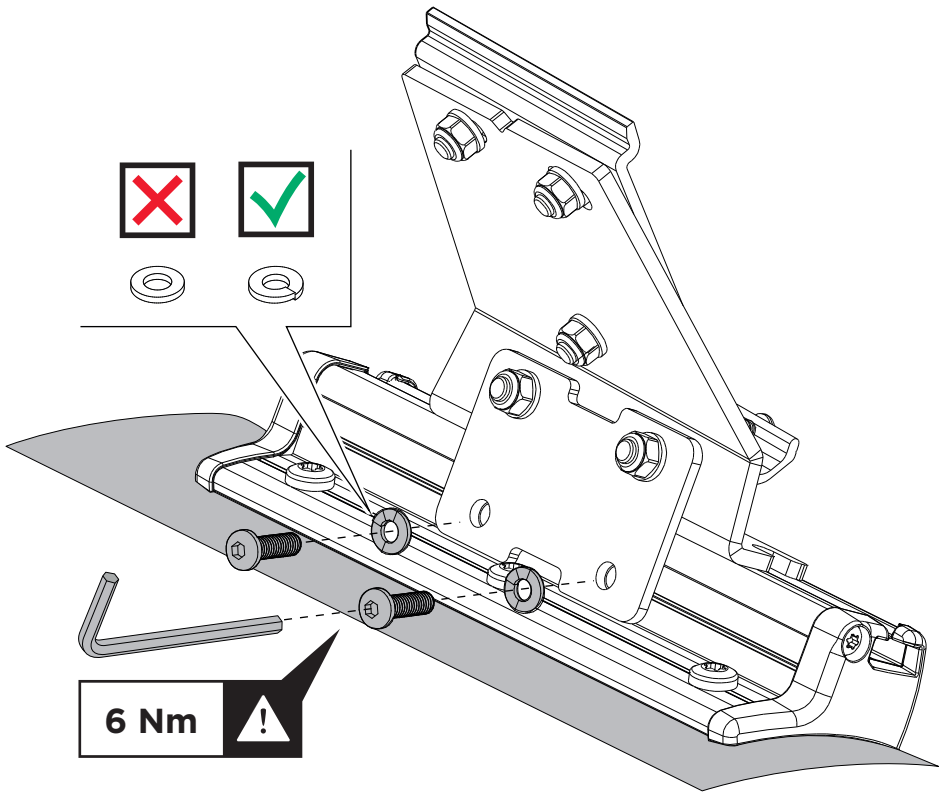

**C**

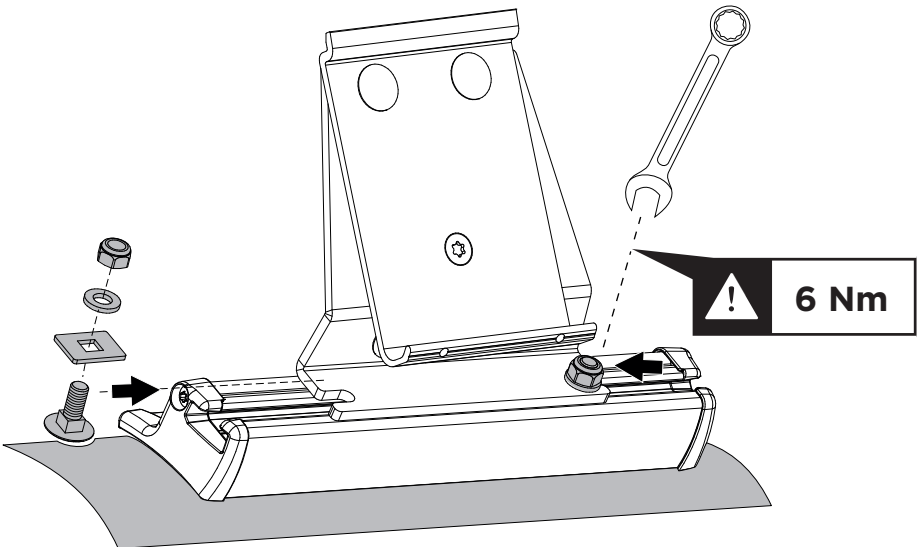

9



x1  
LHD-Back



x2



x2



x2



x2



x2



x2




N° 10





N° 4

**LHD**


**BACK**

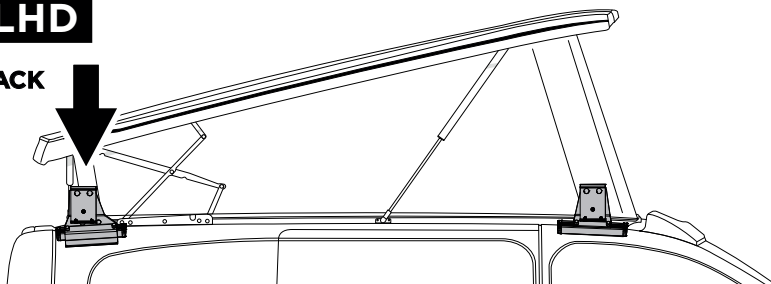


**A**

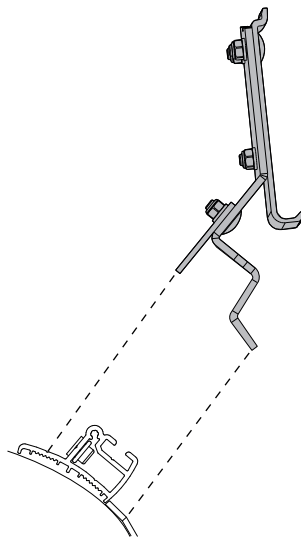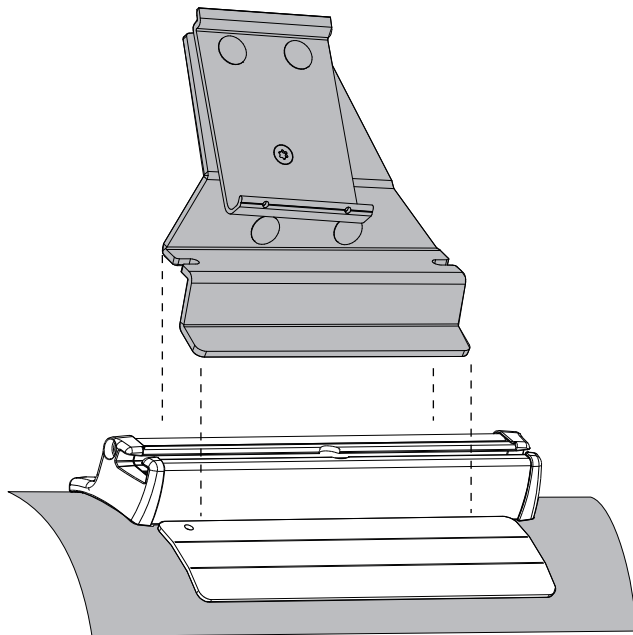

**B**

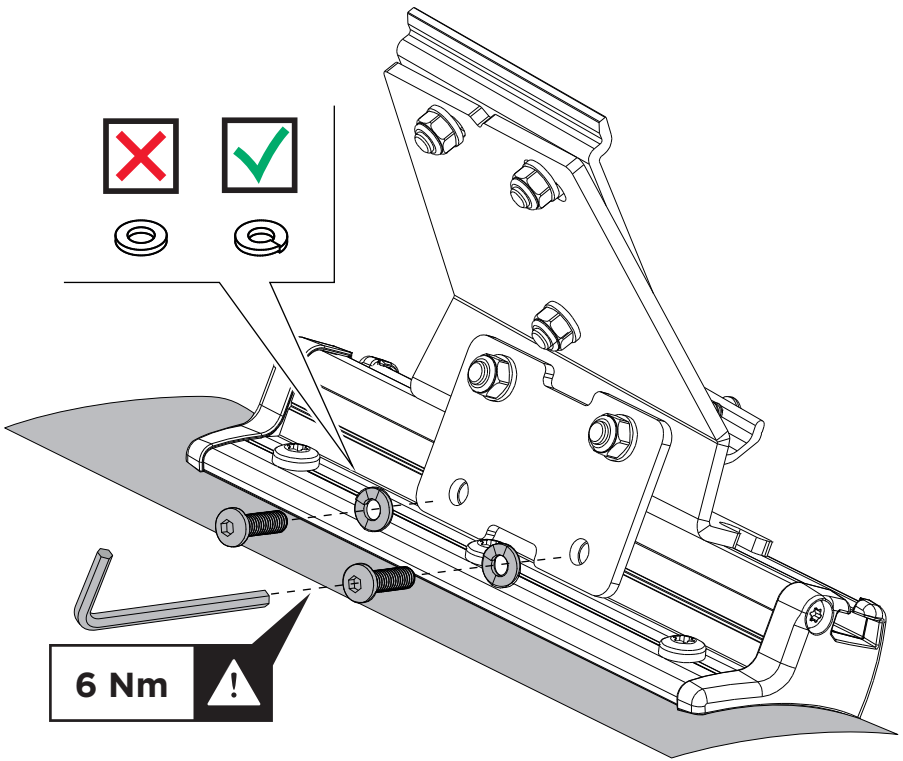

**C**

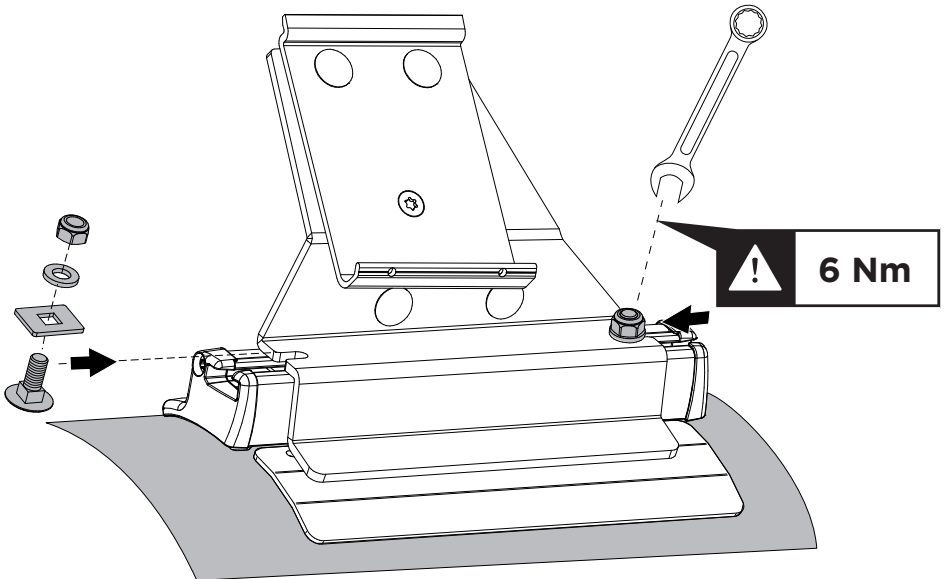


10




Ø 3 mm

A

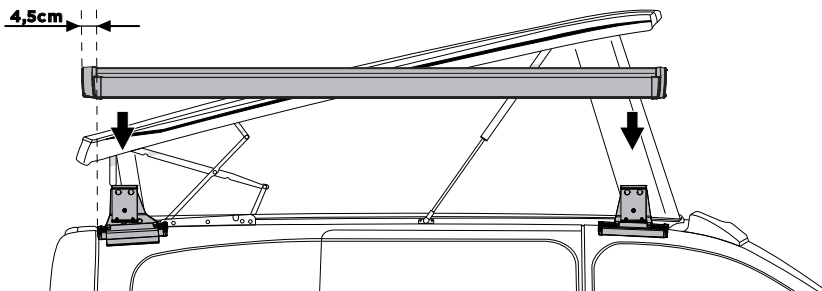

B

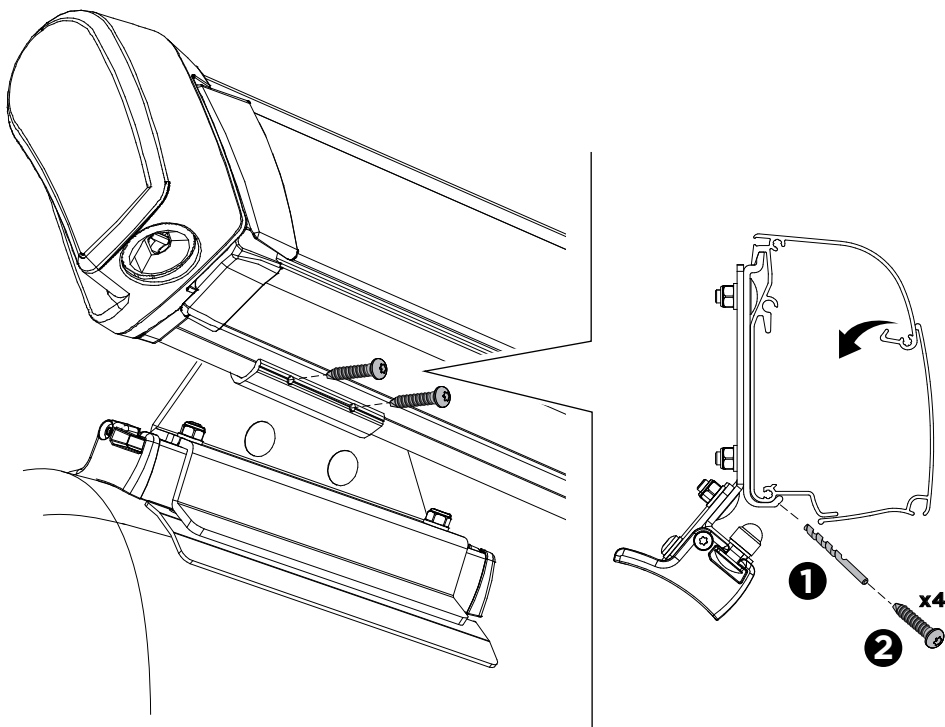



x14




TX20




N° 10

A

BACK

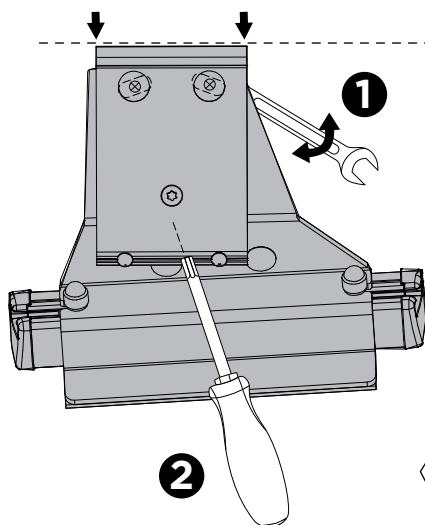

FRONT

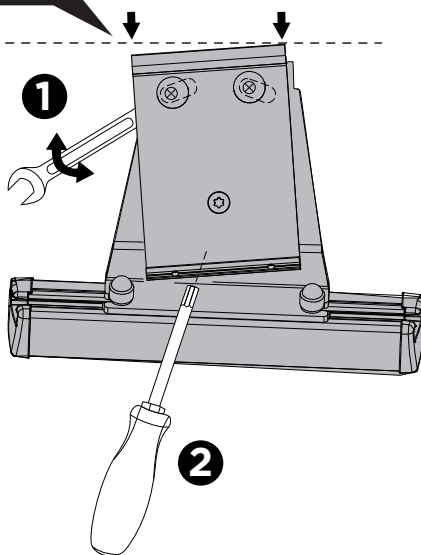

B

