



Savannah Standing Shower– CTC205

Parts Identification & Assembly Instructions



Optional Shower Hardware



Economy Shower Hardware
(Cold water Only)




Platinum Shower Hardware
(Hot & Cold)
(Full stainless steel with hand held shower)

Part #	Qty	Description
SV-01	1	Savannah Shower Wall Assembly
SV-02	7	Showers Floor Boards - 40" (102cm)
SV-03	2	Front/Back Floor Support - 40" (102cm)
SV-04	4	Floor Joists – 38 1/2" (100cm)
SV-05	1	Wall Assembly Top Cover – 5 1/2" x 42" (14x107cm)
H1	2	Stainless Steel Angle Bracket

Qty	Hardware
60	1 1/2" (38mm) Wood Screws
16	2 1/2" (64mm) Wood Screws
8	1 1/2" (38mm) Lag Screws



Savannah Standing Shower– CTC205 Parts Identification & Assembly Instructions

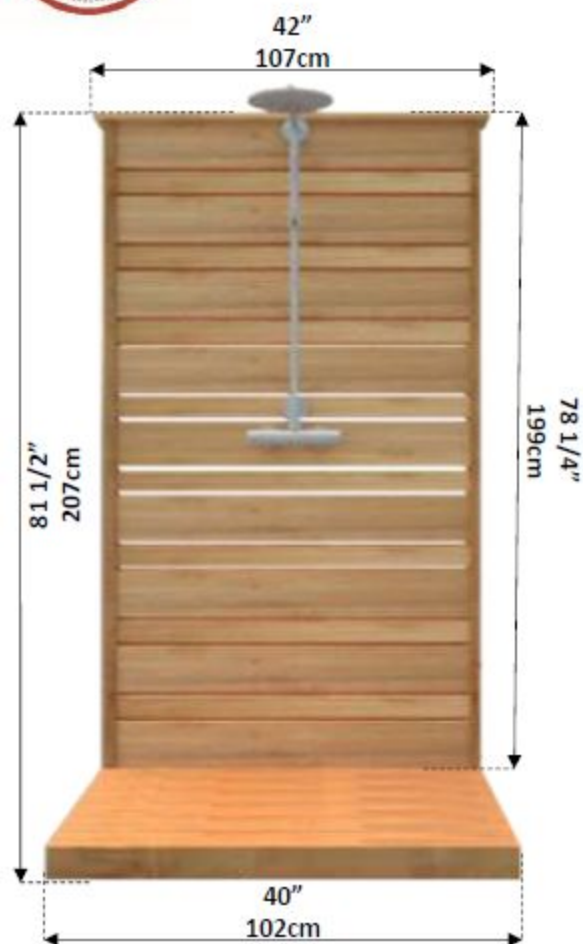

Packaging
86"x45"x12" 165 lbs
218cmx114cmx30cm 75kgs





Savannah Standing Shower– CTC205


Parts Identification & Assembly Instructions



1. To start the assembly of your Savannah shower, unpack the contents of the crate with the help of a friend. All parts are located inside of the back wall assembly as in (Fig. 1)



(Fig. 1)

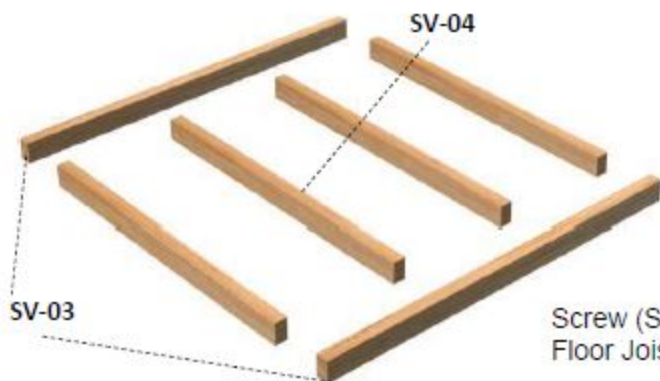


2. Floor Assembly

Screw (SV-03) Front Back Floor Supports to (SV-04) Floor Joists using the provided 2 ½" (64mm) screws.

3. Once the base is assembled as in (Fig.3), use 1 ½" (38mm) screws to fasten the (SV-02) Shower Floor Boards to each of (SV-04) Floor Joists spacing floor boards evenly.



(Fig.3)

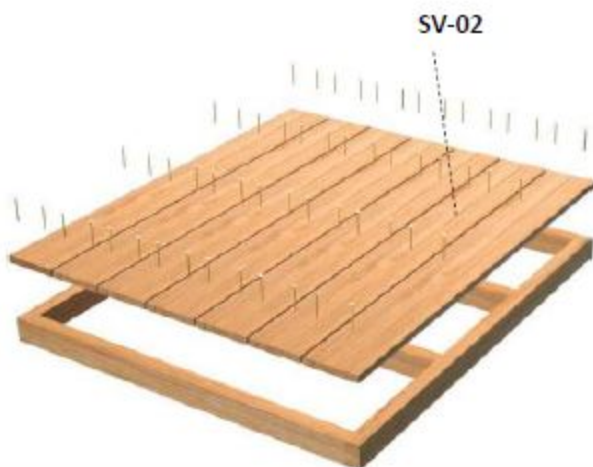



Savannah Standing Shower– CTC205 Parts Identification & Assembly Instructions



4. Position (SV-01) Shower Wall Assembly flush onto the back of the assembled base.


Secure (H1) Angle Brackets to either side of the wall assembly with the provided 1 ½" (38mm) lag screws.
(Fig.4)



(Fig.4)

5. Assemble (TC-05) Shower Head Assembly to the back wall of the shower as per the manufacturers instructions.

6. Locate the Wall Assembly Top Cover (SV-05) and secure to the Wall Assembly (SV-01) with provided 1 ½" (38mm) screws
(Fig.5)

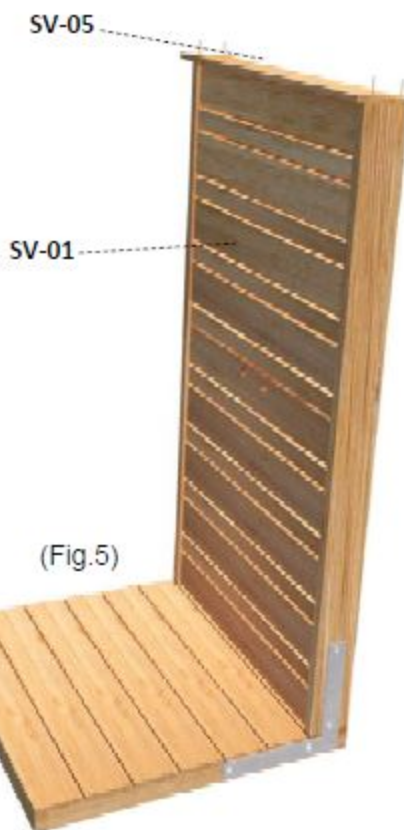

(Fig.5)