



# Lattice Option for Garden in a Box - 8 Foot Side Assembly Manual

Revision #2.0  
September 14, 2021

Thank you for purchasing an 8ft Lattice Option for your Garden In A Box. Please take the time to identify all the parts prior to assembly.


### Safety Points and Other Considerations

Please follow this instruction manual when assembling your Lattice Option and retain the manual for future maintenance purposes.



Please use Safety Eyewear and Gloves while Assembling. Be sure to read and follow all operating instructions for any tools used during assembly.

Remember - NO SAW CUTTING IS REQUIRED!

Estimated Assembly Time for  
the Lattice Option = 1 Hour.

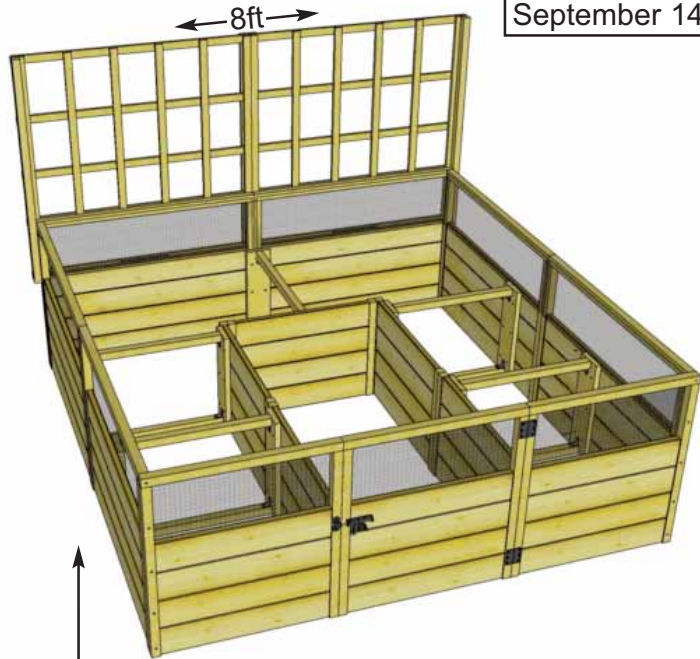


8ft Lattice Option can be installed in any of these three configurations.

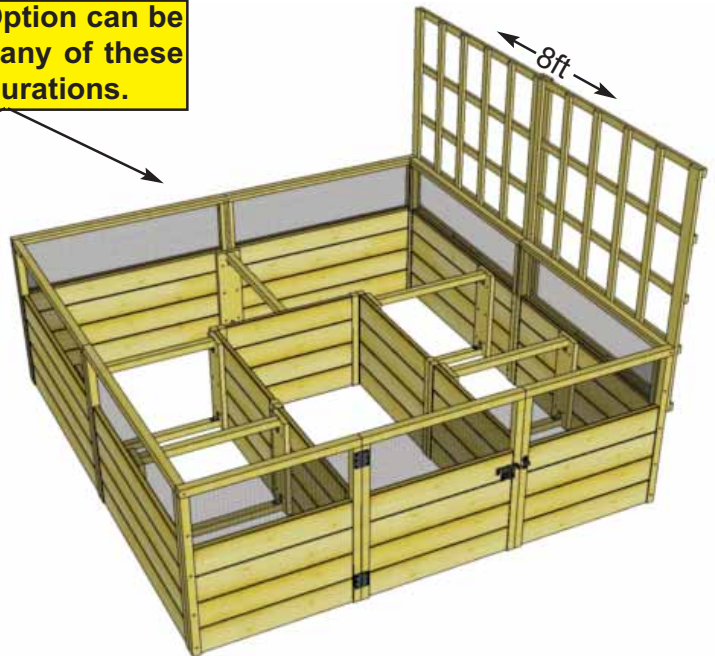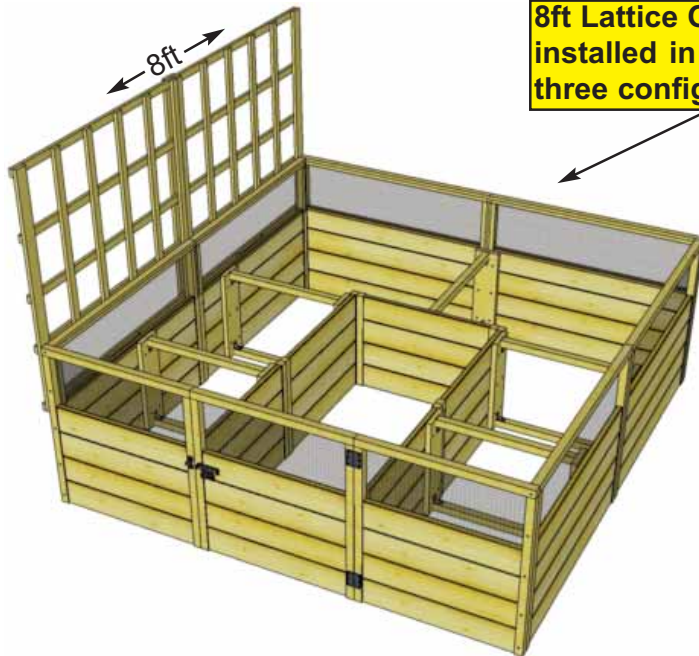

In the event of a missing or broken piece, simply call the Outdoor Living Today Customer Support Line @ 1-888-658-1658 within 30 days of the delivery of your purchase. It is our commitment to you to courier replacement parts, free of charge, within 10 business days of this notification. Replacement parts will not be provided free of charge after the 30 day grace period.

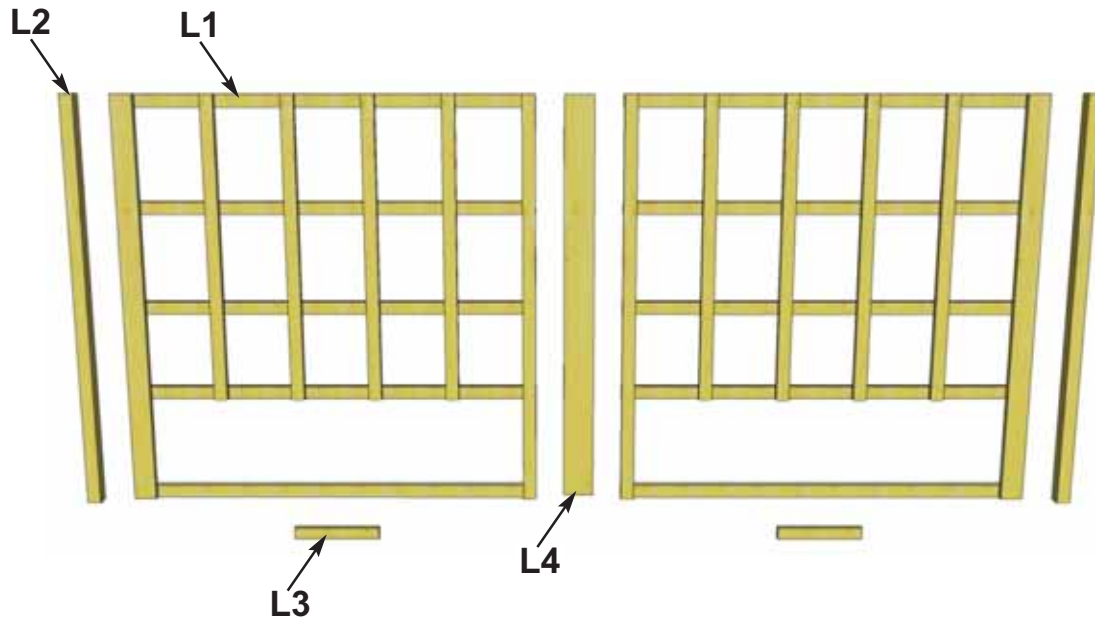


## Exploded View & Parts List for 8ft Lattice Option



### Parts List

- Part L1** 2 - Lattice Panels  
47 1/2" wide x 47" high
- Part L2** 2 - Vertical Corner Braces  
1 1/2" x 1 1/2" x 47"
- Part L3** 2 - Horizontal Cleats  
3/4" x 1 1/2" x 10"
- Part L4** 1 - Vertical Brace  
3/4" x 3 1/2" x 47"

### Hardware Kit (Provided)

- S1 - 2 1/2"  x 16 Pcs.
- S3 - 2"  x 20 Pcs.
-   
BR1 - Square Drive Bit x 1 Pc.

**Note:** Part L2 is only needed if you are attaching the Lattice to the rear of the Garden in a Box.

### Tools Required (Not Provided)



Screw Gun/Drill



Tape Measure



1/8" Drill Bit

### Safety Equipment Required

(Not Provided)




Safety Glasses



Work Gloves

**Note:** If you have an 8'x12' Garden in a Box or 8'x16' Garden in a Box then the 8ft Lattice Option can only be installed onto the rear of the Garden.


Instructions for attaching 8ft Lattice Option to **Rear** of Garden in a Box.

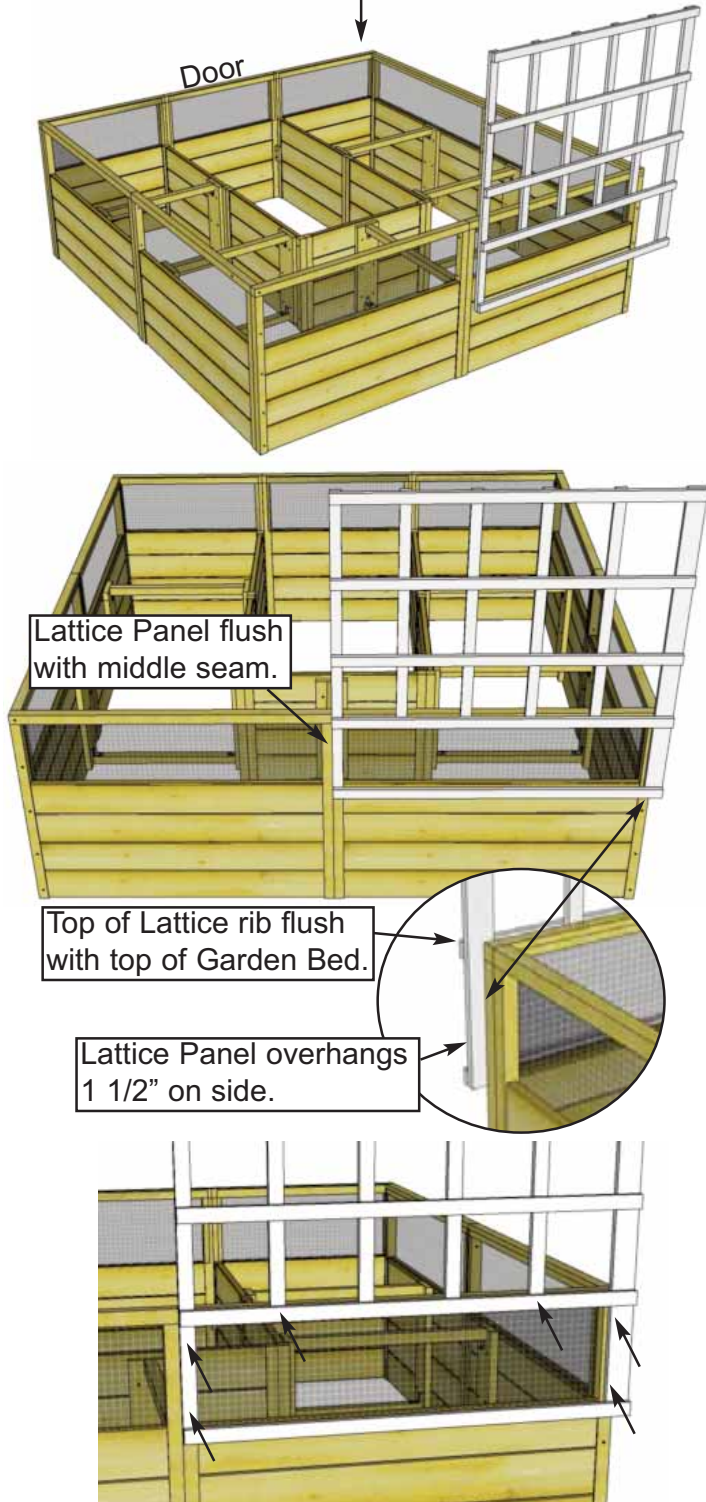

**1.** Orientate a **Lattice Panel** onto a rear panel of your Garden Bed as shown above. Position vertically as shown and attach with **6 - 2" Screws**.

Parts	Hardware
<b>L1 - Lattice Panel</b> (47 1/2" x 47") x 1	<b>S3 - 2" Screws</b> x 6 total



Instructions for attaching 8ft Lattice Option to **Side** of Garden in a Box.

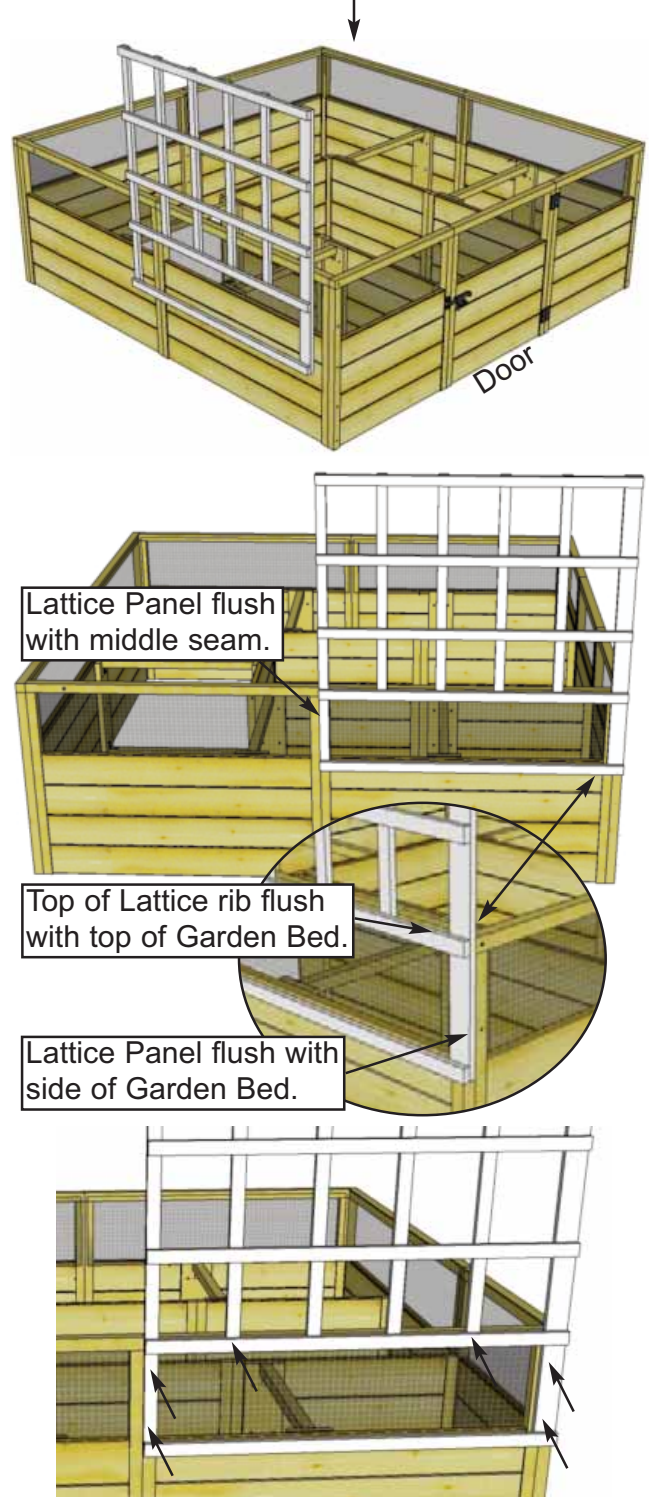

**1.** Orientate a **Lattice Panel** onto a side panel of your Garden Bed as shown above. Position vertically as shown and attach with **6 - 2" Screws**.

Parts	Hardware
<b>L1 - Lattice Panel</b> (47 1/2" x 47") x 1	<b>S3 - 2" Screws</b> x 6 total



Instructions for attaching 8ft Lattice Option to **Rear** of Garden in a Box.

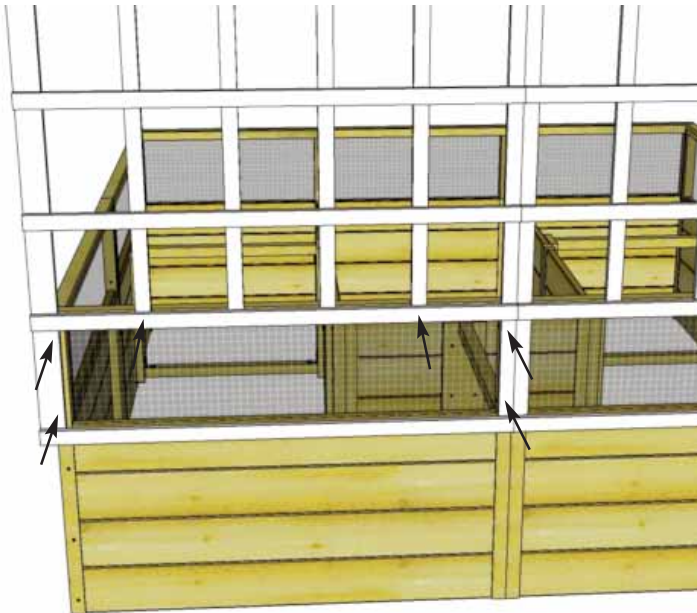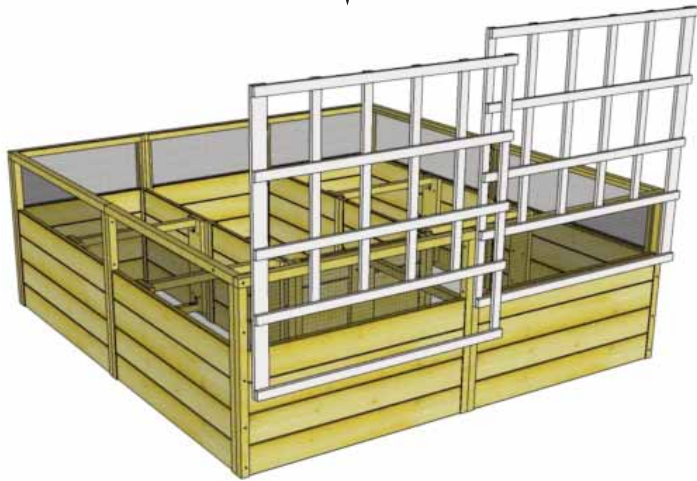

**2.** Attach second **Lattice Panel** onto rear panel of your Garden Bed as per **Step 1** and attach with **6 - 2" Screws**.

Parts	Hardware
<b>L1 - Lattice Panel</b> (47 1/2" x 47") x 1	<b>S3 - 2" Screws</b> x 6 total


Instructions for attaching 8ft Lattice Option to **Side** of Garden in a Box.

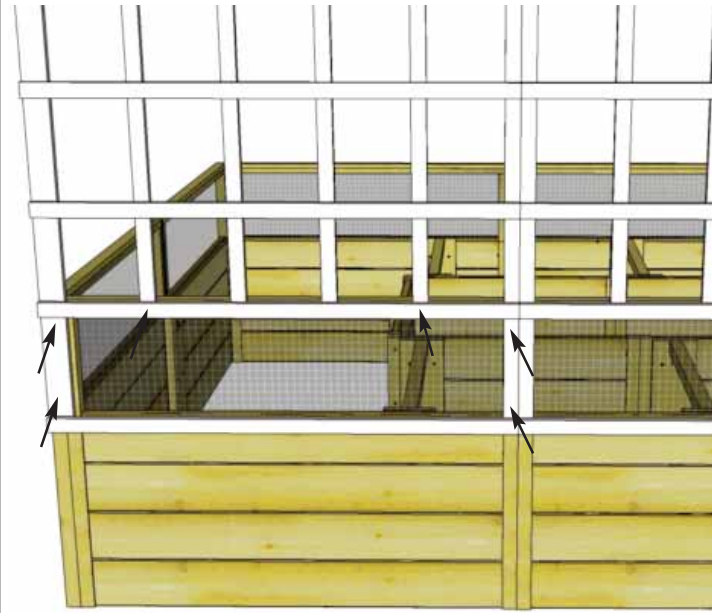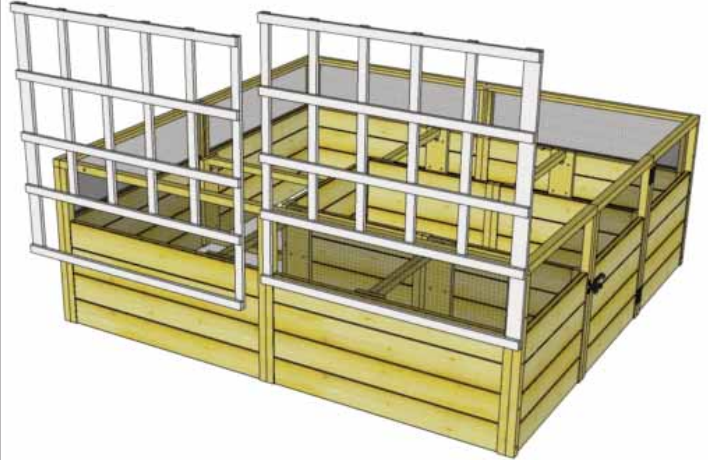



**2.** Attach second **Lattice Panel** onto side panel of your Garden Bed as per **Step 1** and attach with **6 - 2" Screws**.

Parts	Hardware
<b>L1 - Lattice Panel</b> (47 1/2" x 47") x 1	<b>S3 - 2" Screws</b> x 6 total

Instructions for attaching 8ft Lattice  
Option to **Rear** of Garden in a Box.

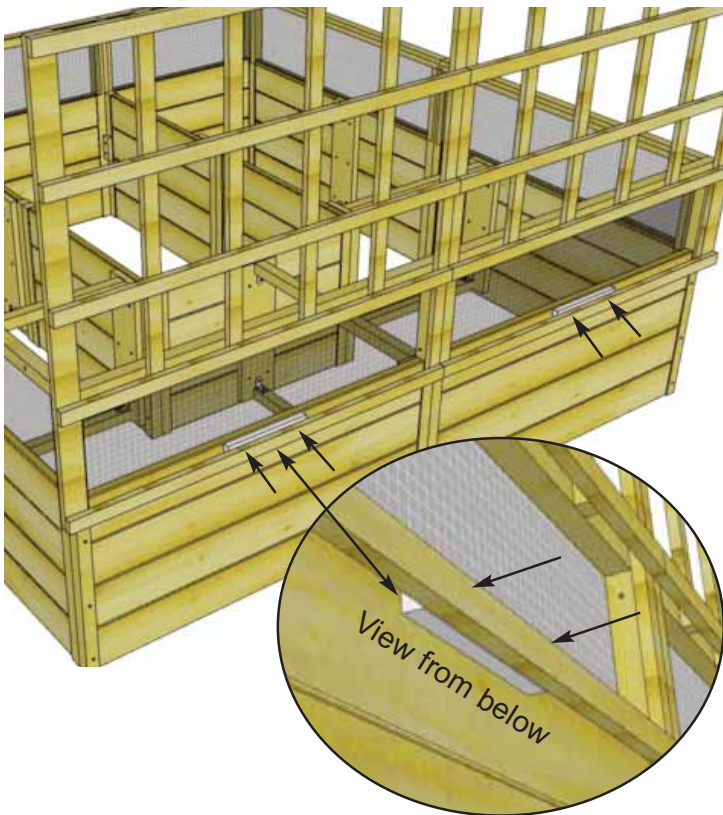

Instructions for attaching 8ft Lattice  
Option to **Side** of Garden in a Box.

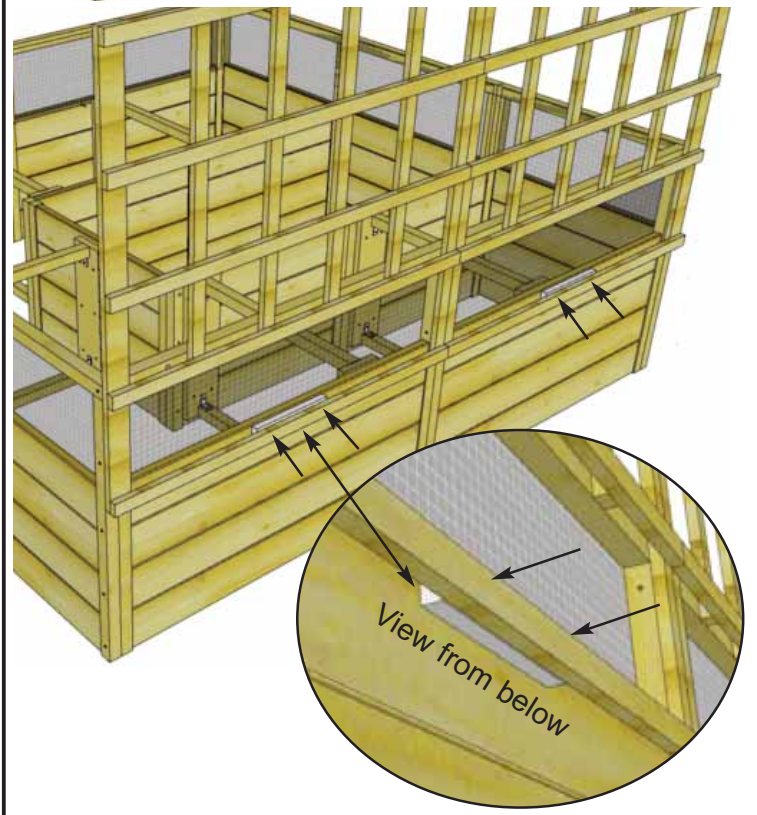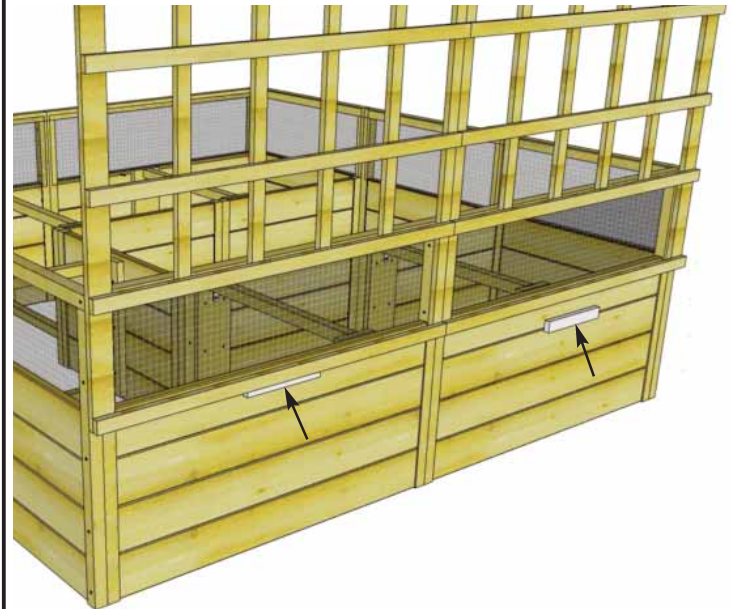

**3.** Fit a **Horizontal Cleat** between each Lattice Panel and Garden Bed panel, centered just below the screen. Attach with **2 - 2 1/2" Screws** per Cleat.



Parts	Hardware
<b>L3 - Horizontal Cleats</b> (3/4" x 1 1/2" x 10") x 2	<b>S1 - 2 1/2" Screws</b> x 4 total

**3.** Fit a **Horizontal Cleat** between each Lattice Panel and Garden Bed panel, centered just below the screen. Attach with **2 - 2 1/2" Screws** per Cleat.

Parts	Hardware
<b>L3 - Horizontal Cleats</b> (3/4" x 1 1/2" x 10") x 2	<b>S1 - 2 1/2" Screws</b> x 4 total

Instructions for attaching 8ft Lattice  
Option to **Rear** of Garden in a Box.

Instructions for attaching 8ft Lattice  
Option to **Side** of Garden in a Box.

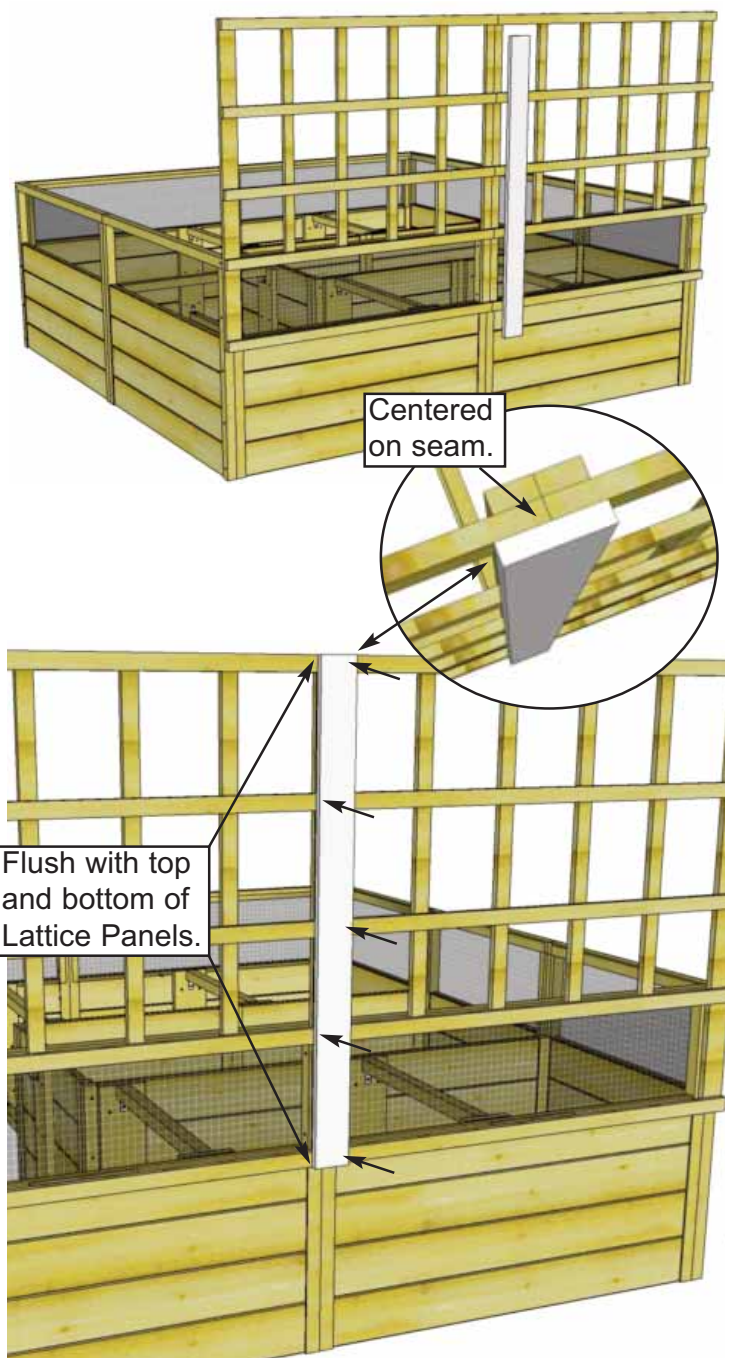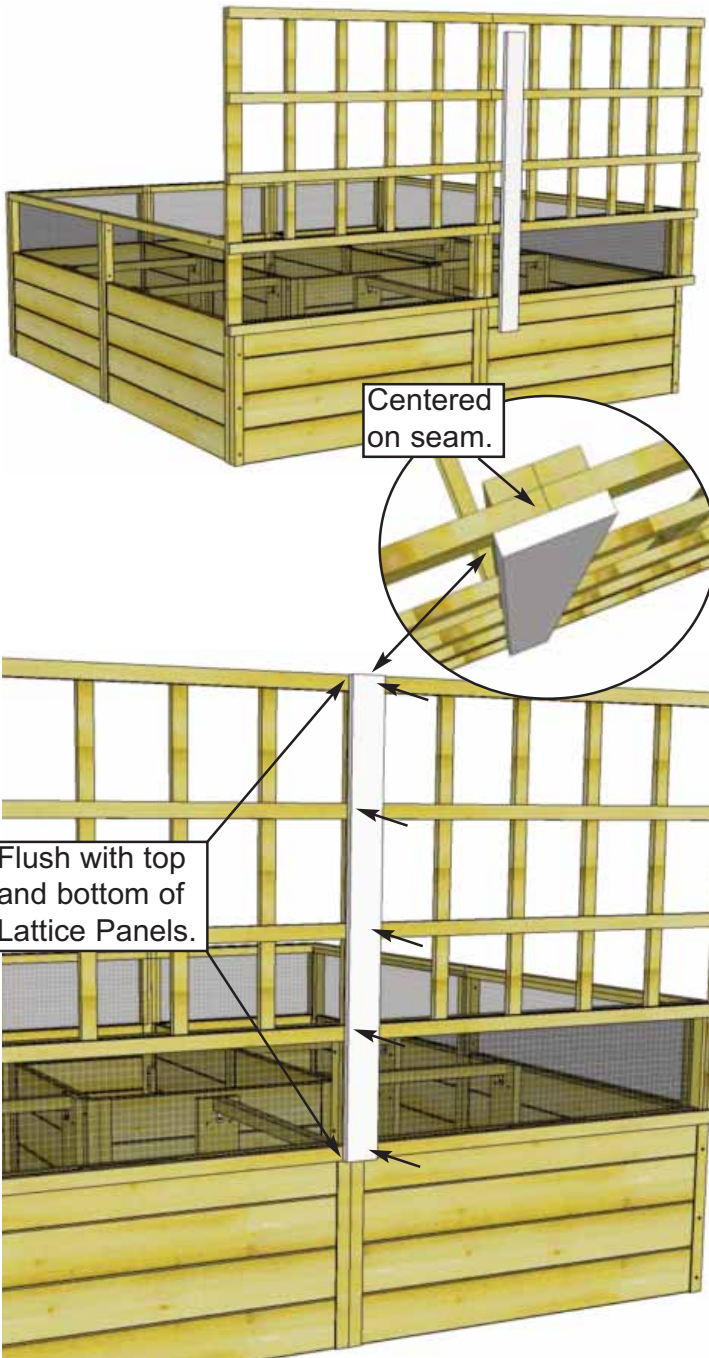



**4.** Position **Vertical Brace** onto the rear and centered over seams between Lattice Panels. Attach with **5 - 2" Screws**, ensuring screws go through the intersecting sections of the Lattice crosshatch. Stagger screws side-to-side on Brace so Lattice Panels are secured together.

**4.** Position **Vertical Brace** onto the rear and centered over seams between Lattice Panels. Attach with **5 - 2" Screws**, ensuring screws go through the intersecting sections of the Lattice crosshatch. Stagger screws side-to-side on Brace so Lattice Panels are secured together.

Parts	Hardware
<b>L4 - Vertical Brace</b> (3/4" x 3 1/2" x 47") x 1	<b>S3 - 2" Screws</b> x 5 total

Parts	Hardware
<b>L4 - Vertical Brace</b> (3/4" x 3 1/2" x 47") x 1	<b>S3 - 2" Screws</b> x 5 total

Instructions for attaching 8ft Lattice Option to **Rear** of Garden in a Box.

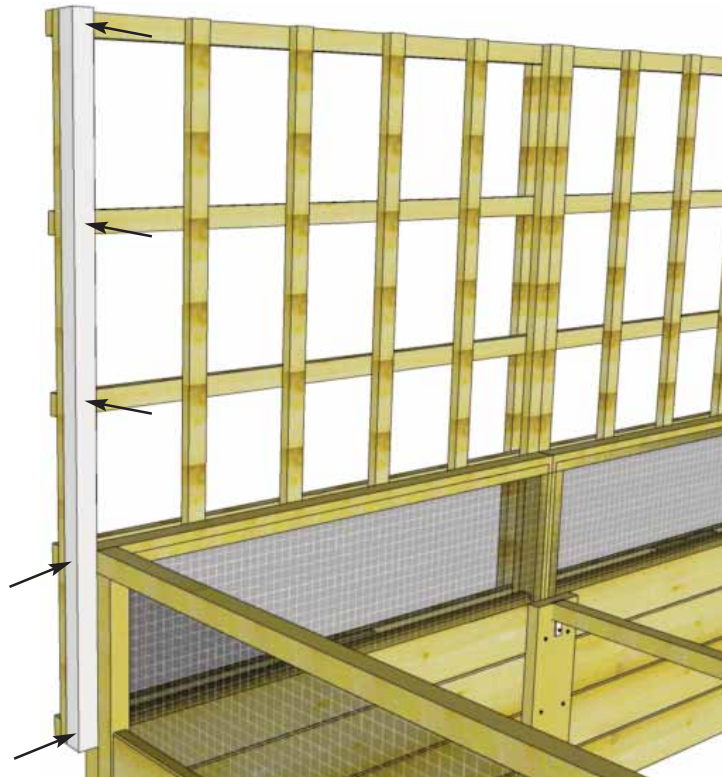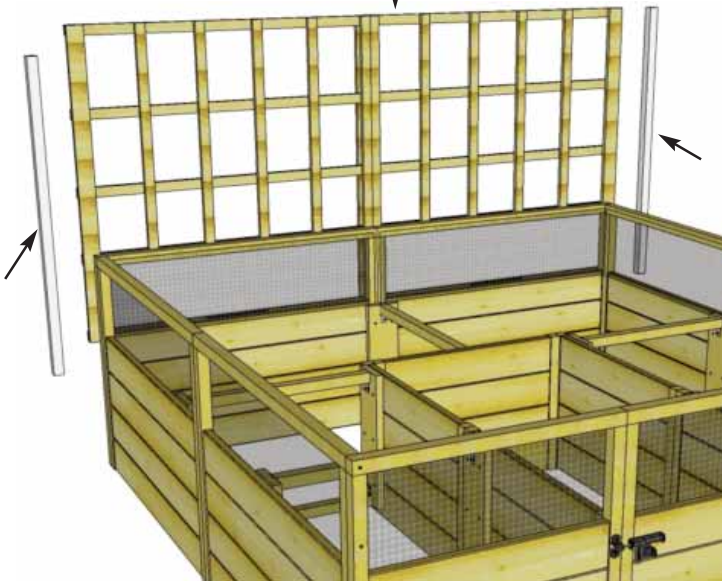


**5.** Position **Vertical Corner Braces** on outer corners where Lattice Panels overhang each side of the Garden Bed by 1 1/2". Align Brace flush with top and bottom of Lattice Panel. Attach each Brace with **5 - 2 1/2" Screws** as shown above.

Parts	Hardware
<b>L2 - Vertical Corner Braces</b> (1 1/2" x 1 1/2" x 47") x 2	<b>S1 - 2 1/2" Screws</b> x 10 total

Instructions for attaching 8ft Lattice Option to **Side** of Garden in a Box.

**5.** Lattice Option is now complete. **Vertical Corner Braces** are not needed if the Lattice Option is being installed on the side of the Garden Bed.


No Vertical Corner Brace Needed.

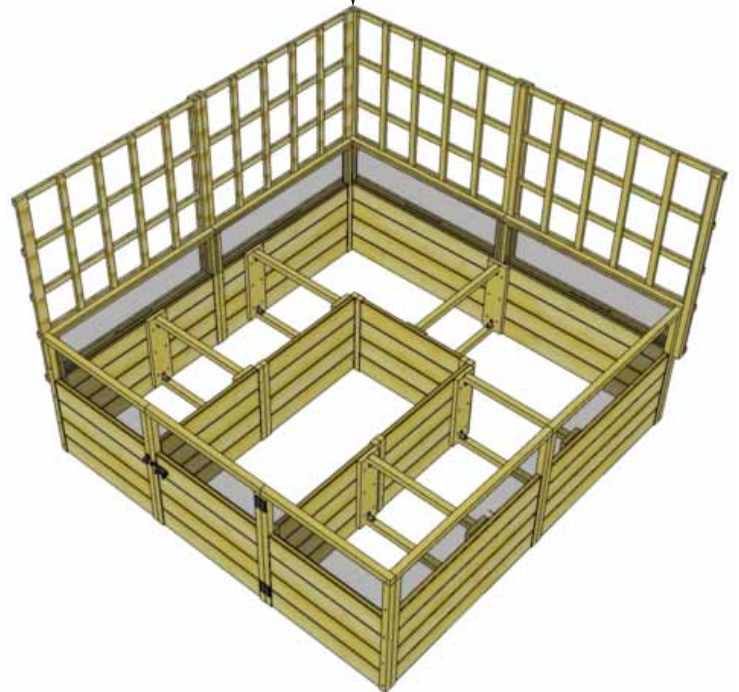

**Note:** If you are installing multiple Lattice Options onto one Garden, do not install a Vertical Corner Brace on the corner where they meet.



## Congratulations on assembling your 8ft Lattice Option for your Garden In A Box!

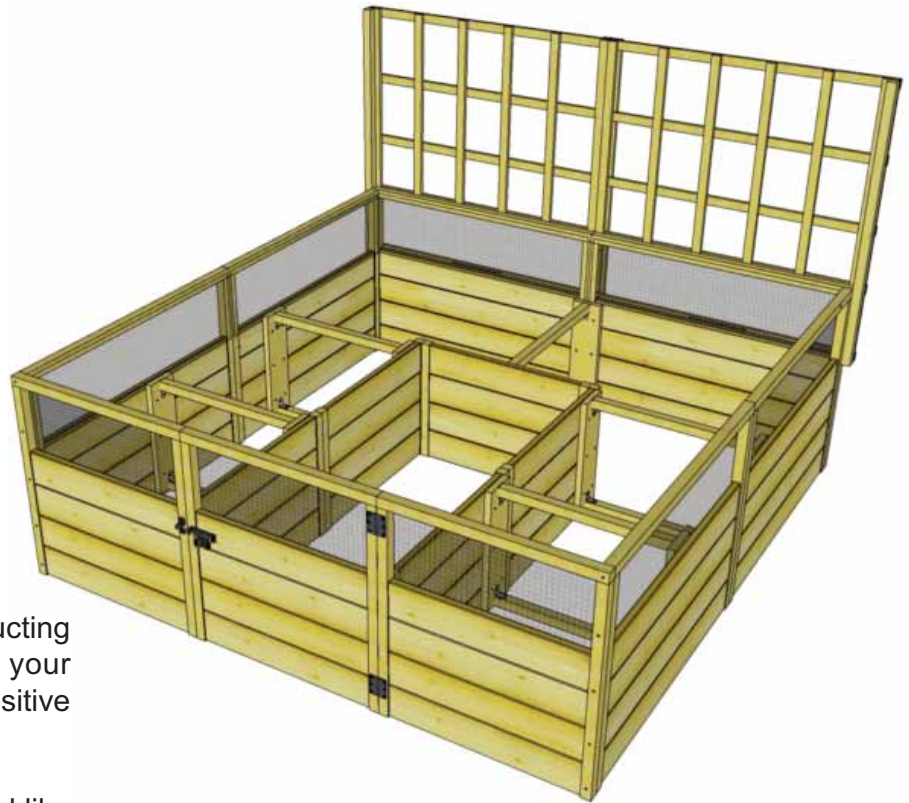

We hope your experience constructing your **8ft Lattice Option** for your Garden In A Box has been both positive and rewarding.

We value your feedback and would like to hear back from you on how well we are doing in the following areas:

1. **Customer Service**
2. **On Time Shipping**
3. **Motor Freight Delivery**
4. **Quality of Materials**
5. **Assembly Manual**
6. **Overall Satisfaction.**



The materials contained in this Assembly Manual may be downloaded or copied provided that ALL copies retain the copyright and any other proprietary notices contained on the materials. No material may be modified, edited or taken out of context such that its use creates a false or misleading statement or impression as to the positions, statements or actions.

Please call, write or email us at:

### Outdoor Living Today

Canadian Address  
9393 287th Street  
Maple Ridge, British Columbia  
Canada V2W 1L1

United States Address  
P.O. Box 96  
Sumas, Washington  
USA 98295

**Toll Line: 1.888.658.1658**

**Fax: 1.604.462.5333**

**sales@outdoorlivingtoday.com**