

RB Components

07 to Present Mercedes Sprinter Van

Rear Door Bug Net

General Notes

- For the most up to date and current instructions, please visit our website at www.rbcomponents.com
- Please read all instructions thoroughly before starting installing this product.
- Rear Door Bug Net is easier to install with the help of a second person.
- This Rear Door Bug Net can be installed with no tools.
- The Rear Door Bug Net can be completely or partially removed depending on the customer's needs. The rear doors can be closed completely when installed.

Parts List

RB Components 07 to Present Mercedes Sprinter Rear Door Bug Net

- (1) 07 + Sprinter Van Rear Door Bug Net
- (5) Fabric Clips

Tools Needed

- Your Hands

Approximate Installation Time

- With two people helping (recommended) 10 – 20 min

Installation

- 1) First un-zipp the screen away from the outer frame of the bug net. This will make the installation process much easier as your only dealing with the frame of the rear door bug net.
- 2) Since we will be using the rubber molding which seals the rear door to the van to secure our rear door bug net, we want to be remember to work in sections of removing the rubber seal.




- 3) From top center working your way to the right you want to peel back about 12" of the rubber molding strip. Once pulled back, place the fabric in-between the rubber molding strip and the van, then push the rubber molding strip back into place. About $\frac{3}{4}$ -1 inch
 - a) ***Please note that zippers of the outer frame should be facing to the inside of the van.***
- 4) Repeat this step all the way down the right side of the van until you reach the bottom.





- 5) With the right side of the bug screen frame in place go back to the top center and repeat steps 3-4
- 6) The outer frame of the bug net should now be in place.
- 7) With the outer frame in place the next step is to attach bug net screen to the outer frame that is now installed (***note: before zipping screen to outer frame make sure the RB logo is facing outwards, to the back of the van***). From the inside of the van you will want to zip the very top part of the screen to the top part of the bug screen frame as shown.

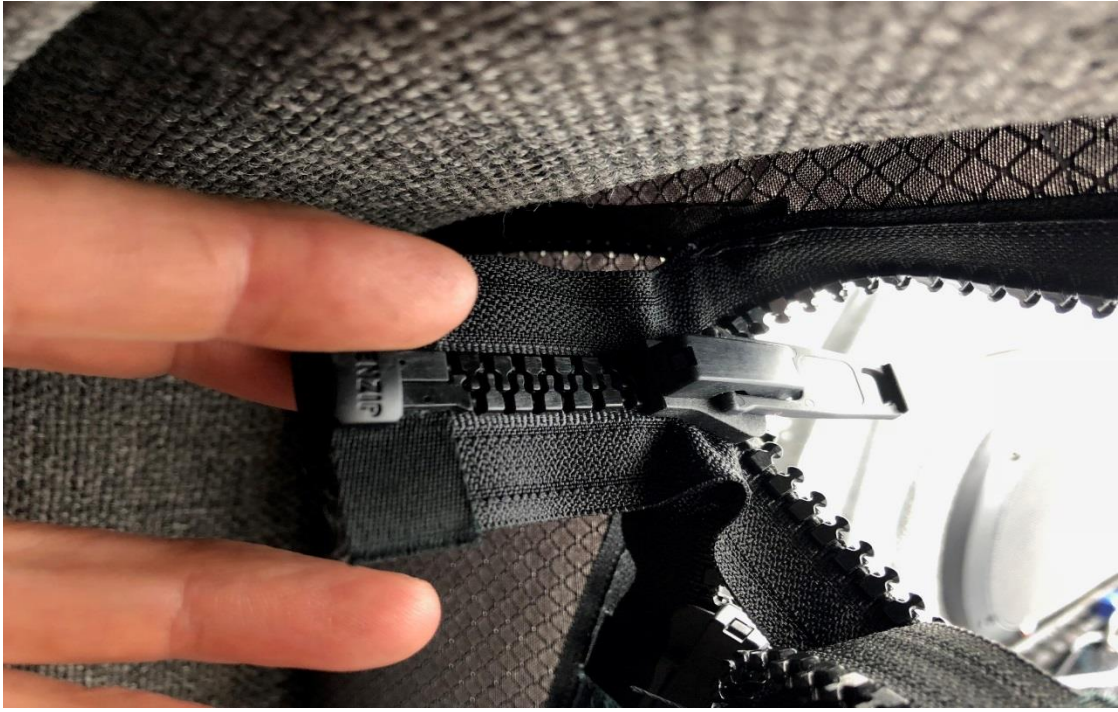

8) Zip up both right and left side of the bug net screen until complete.



- 9) The bug net screen can be accessed a few different ways. Either by the center pass through (**magnetic self-closing buttons**) or by unzipping the sides.



10) The bug net screen also comes with clips at the top of the bug net. These clips are to be used when the screen is rolled up to keep out of the way. Great when loading the rear of the van.



11) The rear door bug net does not need to be removed or rolled up to have the rear doors closed.



Installation is Complete