



## Installation Instructions for Sprinter 144

### Upper Cabinet / L-Track

### Wall Bracing

#### General Notes

- 3 pieces of galvanized steel upper wall braces. Gives support when mounting upper cabinets or l-track in this area.
- Please read all instructions thoroughly before starting installing this product.

#### Parts List

- (1) **#61999-75-01-01** - 144 WB PS Roof Corner Support - Galvanized Steel
- (1) **#61999-75-01-02** - 144,170 & 170 EXT WB DS Roof Corner Support, Front Forward - galvanized steel
- (1) **#61999-75-01-03** - 144 WB DS Roof Corner Support – Galvanized Steel
- (1) Pack of 3/16" Rivets

#### Tools Needed


- #11 Drill bit used for drilling out mounting holes for rivets
- Rivet Gun
- Measuring Tape

#### Installation


- 1) Start by identifying each of the wall braces by laying these out in the van before installation.



**Drivers Side Wall Braces**

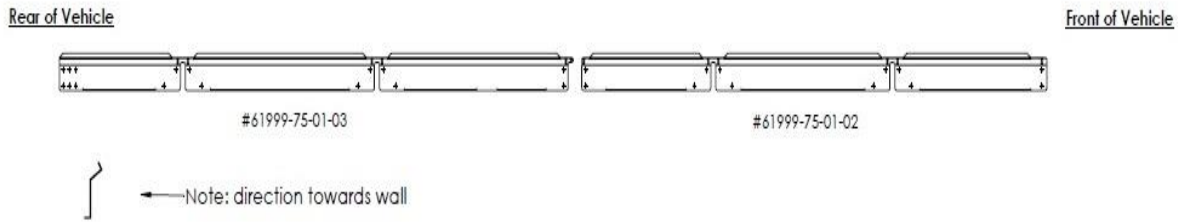

**Passenger Side Wall Brace**

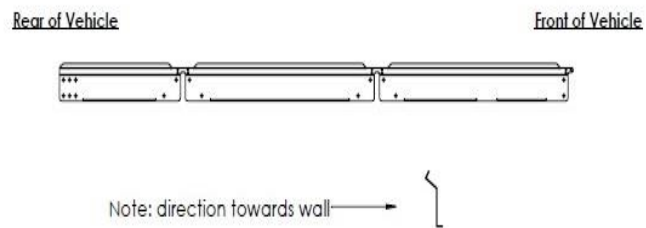

- 2) Once the individual braces have been identified we suggest aligning them properly. Each brace has a cut out for clearance on a small bump out in the frames interior. Align the driver and passenger side braces to align with these cut outs. Once aligned the brace is held up to the top and side support structure of the van. Using a #11 drill bit drill thru the holes and rivet braces into place as shown.





***Installation is now complete. If you have any further questions on this or any other RB Components product please feel free to reach us directly (562) 802-1200***