Installation and Assembly Instructions

SCV Series Retrofit to Encore or Scottsdale Flat Cut-Out (12" & 16" wide deck)

Risk of fire, electric shock, injury or property damage

Risk of electric shock--Disconnect power to equipment before installing or servicing.

Risk of fire or electric shock. Install this kit only in luminaires that have the construction features and dimensions shown in drawings and where the input rating of the retrofit kit does not exceed the input rating of the luminaire.

To prevent wiring damage or abrasion, do not expose wiring to edges of sheet metal or other sharp objects.

This equipment must be installed according to all applicable codes & ordinances.

Installation and service of this equipment must be performed by qualified service personnel.

Do not install damaged equipment.

Read these instructions before installing, servicing or maintaining this equipment.

Save these instructions for maintaining and servicing.

Failure to follow instructions or altering equipment could result in damage and void warranty.


Edges may cut--wear gloves while handling or servicing this equipment.


Inspect equipment for damage from shipping and handling.


LUMINAIRE PREPARATION

Remove the luminaire from the carton and inspect luminaire for damage. Do not install a damaged luminaire.

WIRING INFORMATION

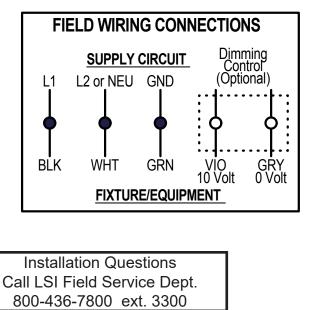

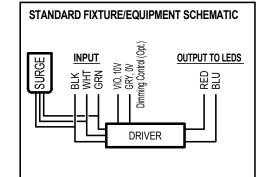

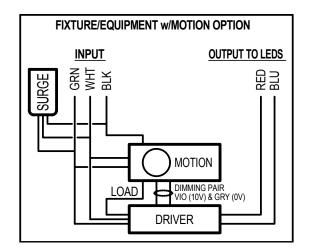

LSI Industries Inc. 10000 Alliance Rd. Cincinnati, OH 45242 www.lsi-industries.com 750486ENC Rev. 10-13-20

Installation and Assembly Instructions SCV Series Retrofit to Encore or Scottsdale Flat Cut-Out (12" & 16" wide deck)


Encore KIT (Part# 673425 for 16"; Part # 676011 for 12") includes the following: Plate and Sealant

STEP 1: Remove existing Encore or Scottsdale Flat Luminaire from canopy deck.

STEP 2: Install SCV luminaire to

Canopy Deck Opening


Canopy Deck with existing cut-out from Encore or Scottsdale Flat, (max. opening 12" square in 16" deck, max. opening 9" round in 12" deck.)

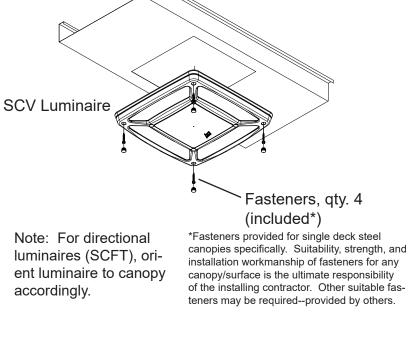

Installation Questions	
Call LSI Field Service Dept.	
800-436-7800 ext. 3300	

LSI Industries Inc. 10000 Alliance Rd. Cincinnati, OH 45242 www.lsi-industries.com 750486ENC Rev. 10-13-20

STEP 3: Align Plate over (4) Fasteners and Attach Locking Collar (Torque Bolts to 10-15 ft. lbs.)

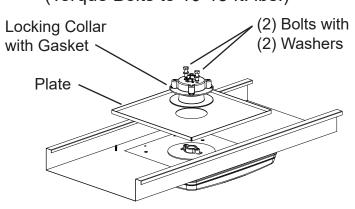

- Plate and fasteners require sealant (provided) to prevent water leaking to bottom of canopy.
- Install 3/4" threaded conduit and junction box (by others) making sure conduit threads are properly sealed preventing water entry into wireway.
- Make primary field wiring connections to SCV luminaire leads.

Optional (ordered seperately) Junction Box and 3/4" Conduit for Wiring Connections, Part# 673429

- Junction Box 3/4" Conduit with (2) Conduit Nuts