
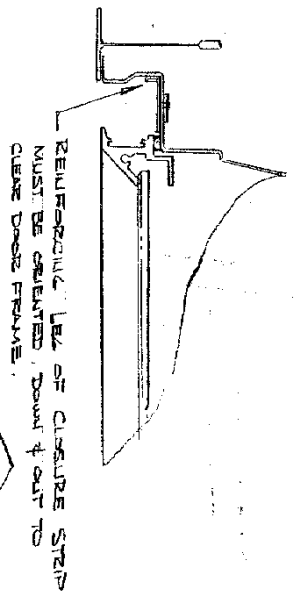


A. INSERT CLOSURE STRIPS INTO FIXTURE BODY AS ILLUSTRATED, TO CLOSE OFF AIR SUPPLY SLOTS.

B. ENGAGE CLOSURE STRIP HOLDING TABS WITH AIR SUPPLY WEBS.

C. SLIDE CLOSURE STRIPS TO CAUSE HOLDING TABS TO ENGAGE WITH OPPOSITE SIDE OF AIR SUPPLY WEB, AS SHOWN IN DETAIL XX, AGAINST STOP.

D. LOCK CLOSURE STRIPS IN POSITION!

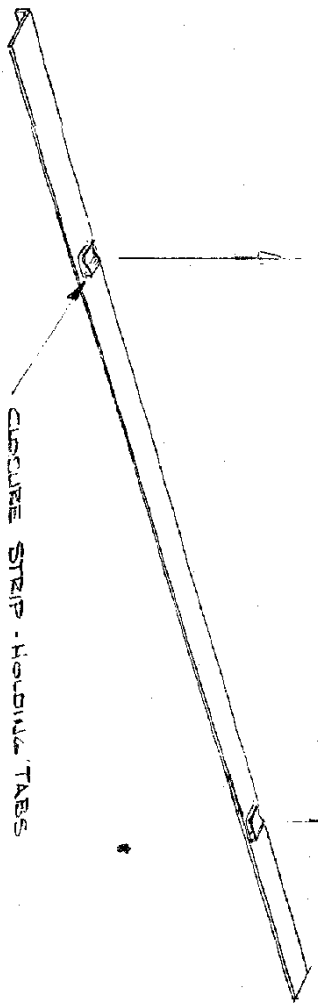

REINFORCEMENT LEG OF CLOSURE STRIP MUST BE ORIENTED DOWN & OUT TO CREATE DRAFT FRAME.