

EZ HANG

Available in most luminaires. See specification sheets for details.
Shown with 1527 Omega fixture.

CUSTOMER INSTALLATION INSTRUCTIONS

WARNING: TO AVOID FIRE, SHOCK OR DEATH, TURN OFF AND LOCKOUT POWER BEFORE PERFORMING ANY MAINTENANCE.

CAUTION: THIS FIXTURE MUST BE WIRED IN ACCORDANCE WITH THE NATIONAL ELECTRIC CODE AND ALL APPLICABLE LOCAL CODES. PROPER GROUNDING IS REQUIRED. A QUALIFIED ELECTRICIAN MUST DO ALL WORK.

A. PREPARE EZ HANG ASSEMBLY

STEP 1

Loosen cover screws only enough until cover can be detached from EZ Hang Housing. Do not remove screws from cover as retaining washers will fall off the screws. Detach and retain cover and the screw assemblies with retained lock washers and with retaining washers on them for reinstallation.



STEP 2

Remove two screws holding Safety Bracket over hang straight ball. Remove Safety Bracket and retain screws for reinstallation.



SternbergLighting

ESTABLISHED 1923

800-621-3376
555 Lawrence Ave., Roselle, IL 60172
contactus@sternberglighting.com
www.sternberglighting.com

8/21 STERNBERG LIGHTING. ALL RIGHTS RESERVED. PRINTED IN THE USA.

EZ HANG

Available in most luminaires. See specification sheets for details.
Shown with 1527 Omega fixture.

CUSTOMER INSTALLATION INSTRUCTIONS

WARNING: TO AVOID FIRE, SHOCK OR DEATH, TURN OFF AND LOCKOUT POWER BEFORE PERFORMING ANY MAINTENANCE.

CAUTION: THIS FIXTURE MUST BE WIRED IN ACCORDANCE WITH THE NATIONAL ELECTRIC CODE AND ALL APPLICABLE LOCAL CODES. PROPER GROUNDING IS REQUIRED. A QUALIFIED ELECTRICIAN MUST DO ALL WORK.

B. MOUNT FIXTURE TO EZ HANG, LEVEL AND SECURE FIXTURE

STEP 1

Feed power supply wires through the EZ Hang and into the arm.




STEP 2

Lift luminaire, with ball aligner attached, and insert ball aligner into the fixed portion of EZ Hang housing. The fixed portion and cover mate together forming a secure socket for the ball to move freely allowing fixture to hang straight.



STEP 3

Insert the Safety Bracket into the EZ Hang Housing with opening straddling the cord grip and cord as shown. Secure Safety Bracket into the EZ Hang Housing using screws removed earlier from Safety Bracket. The Safety Bracket is designed to prevent the ball aligner and fixture from lifting and potentially separating from the EZ Hang during extreme weather conditions.

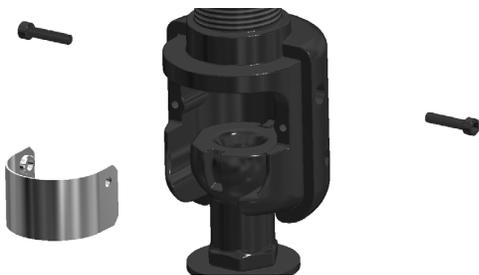

STEP 4

After the Safety Bracket has been installed into the housing, cover the EZ Hang Housing with EZ Hang Cover. The EZ Hang Cover prevents the Safety Bracket from separating from the EZ Hang.



SternbergLighting

ESTABLISHED 1923

800-621-3376
555 Lawrence Ave., Roselle, IL 60172
contactus@sternberglighting.com
www.sternberglighting.com

EZ HANG

Available in most luminaires. See specification sheets for details.
Shown with 1527 Omega fixture.

CUSTOMER INSTALLATION INSTRUCTIONS

WARNING: TO AVOID FIRE, SHOCK OR DEATH, TURN OFF AND LOCKOUT POWER BEFORE PERFORMING ANY MAINTENANCE.

CAUTION: THIS FIXTURE MUST BE WIRED IN ACCORDANCE WITH THE NATIONAL ELECTRIC CODE AND ALL APPLICABLE LOCAL CODES. PROPER GROUNDING IS REQUIRED. A QUALIFIED ELECTRICIAN MUST DO ALL WORK.

B. MOUNT FIXTURE TO EZ HANG, LEVEL AND SECURE FIXTURE

STEP 5

Secure cover with screws with retained lock washers and screw retainers that were retained on the cover from removal above. Final Torque screws to 20 inch pounds.



STEP 6

Align fixture to level by placing a bubble level across the bottom of the luminaire. Plumb adjustments are automatic by letting the fixture hang straight down via the EZ Hang apparatus. Once in position install and tighten lock screw to 20 inch pounds. The luminaire will not move in any direction once the lock screw is torqued down.



STEP 7

Wire the luminaire per the wiring schematic.

WIRING SCHEMATIC

FIXTURE	BLACK	L1
	WHITE	L2
	GREEN	GROUND

NOTE: POLE MUST BE PROPERLY GROUNDED. TO ENSURE PROTECTION, THE EARTH GROUND WIRE (GREEN) MUST ALSO BE CONNECTED TO THE POLE GROUND LUG. FAILURE TO DO SO CAN REDUCE OR ELIMINATE SURGE PROTECTION, RESULTING IN POSSIBLE DAMAGE TO THE LUMINAIRE.



SternbergLighting

ESTABLISHED 1923

800-621-3376
555 Lawrence Ave., Roselle, IL 60172
contactus@sternberglighting.com
www.sternberglighting.com

8/21 STERNBERG LIGHTING. ALL RIGHTS RESERVED. PRINTED IN THE USA.

EZ HANG

Available in most luminaires. See specification sheets for details.
Shown with 1527 Omega fixture.

CUSTOMER INSTALLATION INSTRUCTIONS

WARNING: TO AVOID FIRE, SHOCK OR DEATH, TURN OFF AND LOCKOUT POWER BEFORE PERFORMING ANY MAINTENANCE.

CAUTION: THIS FIXTURE MUST BE WIRED IN ACCORDANCE WITH THE NATIONAL ELECTRIC CODE AND ALL APPLICABLE LOCAL CODES. PROPER GROUNDING IS REQUIRED. A QUALIFIED ELECTRICIAN MUST DO ALL WORK.

C. DURING REGULAR MAINTENANCE

STEP 1

Check to ensure fixture is still level and adjust if needed.

STEP 2

Check to ensure the 3/8-16 lock screw is tight into the EZ Hang Housing. Remove any loose set screws and apply Loctite® Red Threadlocker or equivalent, reinstall and fully tighten all set screws.



STEP 3

Apply Loctite® Red Threadlocker, install and fully tighten the 3/8-16 lock screw to 20 in-lbs if needed.



SternbergLighting

ESTABLISHED 1923

800-621-3376
555 Lawrence Ave., Roselle, IL 60172
contactus@sternberglighting.com
www.sternberglighting.com

8/21 STERNBERG LIGHTING. ALL RIGHTS RESERVED. PRINTED IN THE USA.