





<b>Fixture Installation Instructions</b>	<b>Product: 9930 Series Fixtures</b>
<b>Effective Date:</b> September 20, 2021	<b>Part Description:</b> VCOB Retrofit Kit

	<b>WARNING:</b> To avoid fire, shock or death, turn off and lockout power before performing any maintenance.
	<b>CAUTION:</b> This Fixture must be wired in accordance with the National Electric Code (NEC) and all applicable local codes. Proper grounding is required. All work should be done by a qualified electrician.

### A. Remove Roof of Fixture


	<p><b>Step 1:</b> Unpack VCOB conversion kit. Handle with care, being careful not to touch the optics. Recycle the empty packaging.</p>
	<p><b>Step 2:</b> Open the fixture roof and remove any existing optics. Unlatch the fitter cap and remove the cap and attached ballast. These components will not be required for this conversion. Discard/Recycle them per local code.</p>

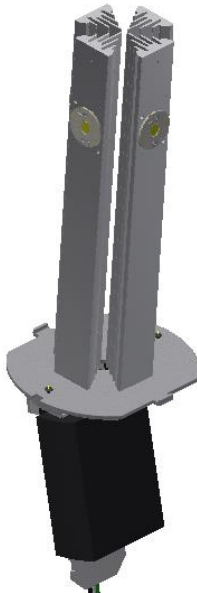

**Step 3:** Place VCOB in fixture and connect the supply lines to per wiring schematic.



**Step 4:** Orient the "STREET" designation on the fitter cap to the street side of the fixture, and latch cap in place, taking care not to pinch any wires between the cap and the fitter. Close and latch door.

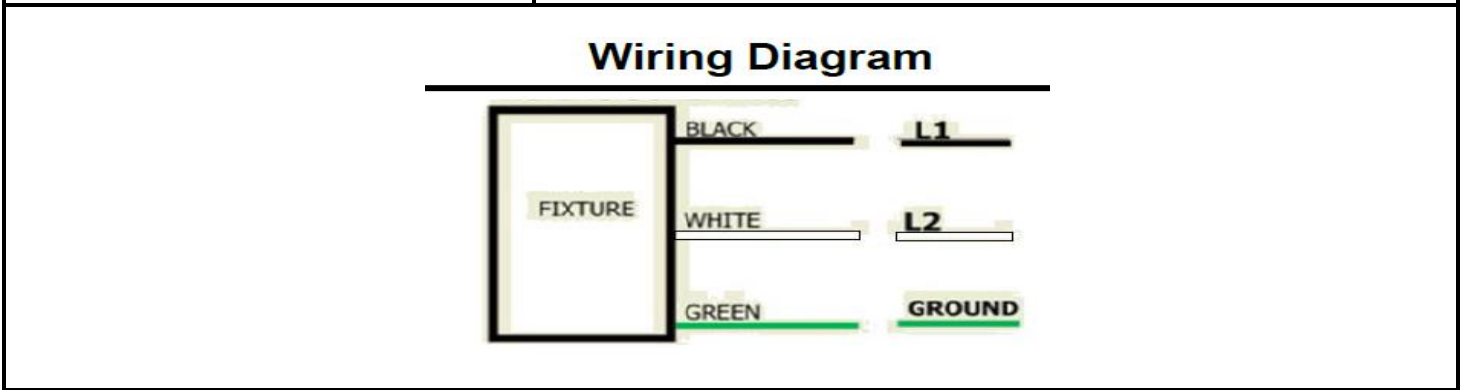

Revision History				
Rev	Description of Revision	ECN Number	Design Engineer Author	Engineering Approval
-	Initial Release	ECN 09-20-2021 RAY	RAY	MR