




Installation Instructions	Product : LU660 LUNARIA
Effective Date: April 1, 2019	Part Description: Post Top


	WARNING: To avoid fire, shock or death, turn off and lockout power before performing any maintenance.
	CAUTION: This Fixture must be wired in accordance with the National Electric Code (NEC) and all applicable local codes. Proper grounding is required. A qualified electrician must do all work.




STEP 1: Disconnect the male quick disconnect from the female quick disconnect.

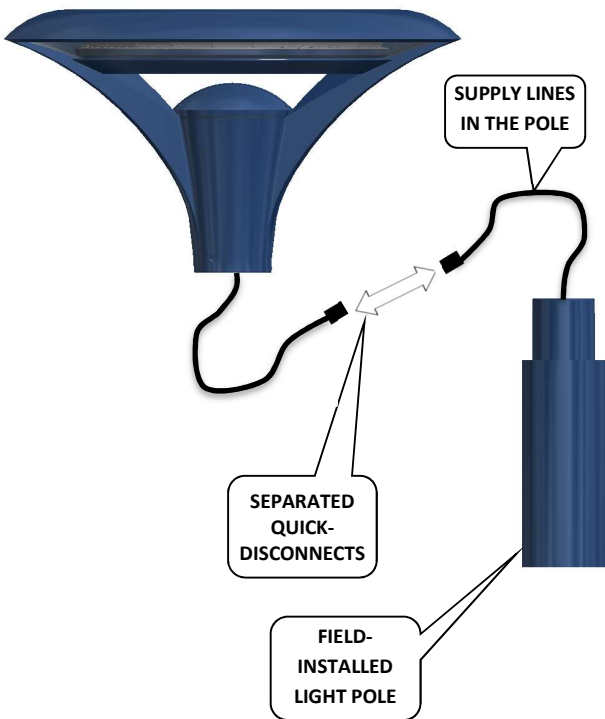
STEP 2: Wire the free end of the male connector to the supply lines from pole. See wiring schematic below.

WIRING SCHEMATIC

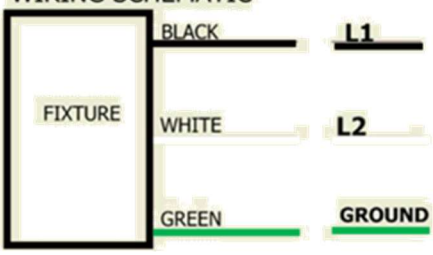

STEP 3: Connect the male and female connectors together and press firmly together to lock them.

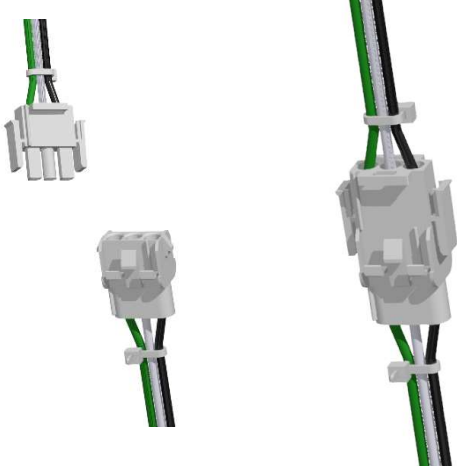

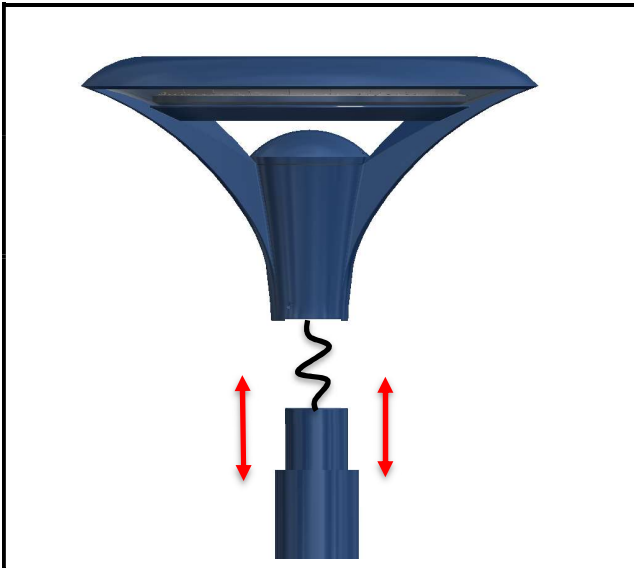

STEP 4: Guide wires into the tenon and carefully install the fixture on top of the tenon.

NOTE: Be careful to not pinch wires.



STEP 5: Uniformly tighten all 3 set screws located at the bottom of the fixture to secure the fixture to the Tenon.

NOTE: There is no orientation to house-side or street-side

Revision History				
Rev	Description of Revision	Release Date	Design Engineer Author	Manufacturing Engineer Approval
A	Create Fixture Installation Instructions	04/03/2019	Nataliya Kozyreva	Grant Burton