
## **RW300 STEM MOUNT** INSTALLATION INSTRUCTIONS

CAUTION:

WARNING: TO AVOID FIRE, SHOCK OR DEATH, TURN OFF AND LOCKOUT POWER BEFORE PERFORMING ANY MAINTENANCE.

THIS FIXTURE MUST BE WIRED IN ACCORDANCE WITH THE NATIONAL ELECTRIC CODE AND ALL APPLICABLE LOCAL CODES. PROPER GROUNDING IS REQUIRED. ALL WORK SHOULD BE DONE BY A QUALIFIED ELECTRICIAN.

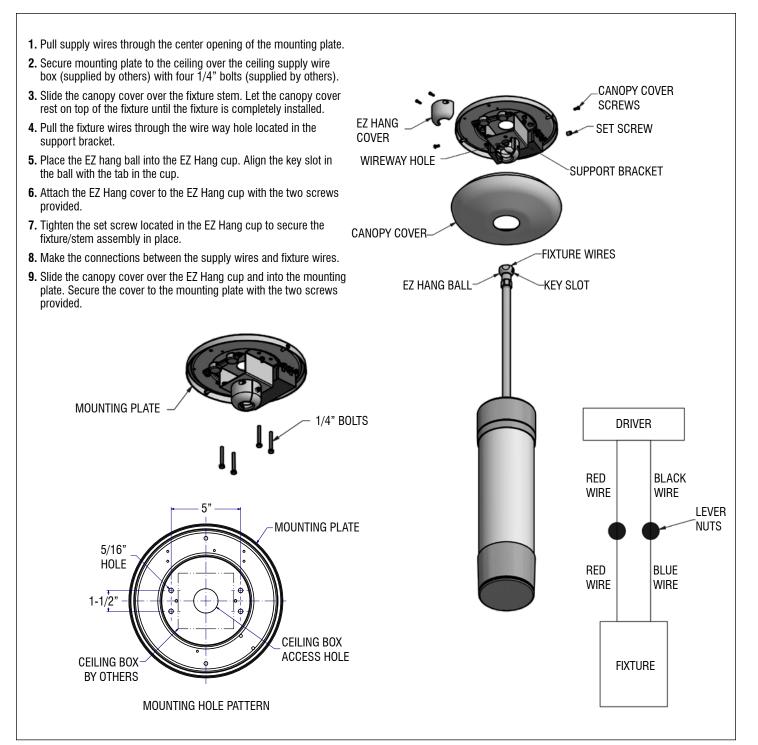



800-621-3376 555 Lawrence Ave., Roselle, IL 60172 info@sternberglighting.com www.sternberglighting.com

6/18 STERNBERG LIGHTING, ALL RIGHTS RESERVED, PRINTED IN THE USA.