
RIALTA RW302 WALL MOUNT

INSTALLATION INSTRUCTIONS

WARNING: TO AVOID FIRE, SHOCK OR DEATH, TURN OFF AND LOCKOUT POWER BEFORE PERFORMING ANY MAINTENANCE.

CAUTION: THIS FIXTURE MUST BE WIRED IN ACCORDANCE WITH THE NATIONAL ELECTRIC CODE AND ALL APPLICABLE LOCAL CODES. PROPER GROUNDING IS REQUIRED. ALL WORK SHOULD BE DONE BY A QUALIFIED ELECTRICIAN.

- 1. Pull the supply wires through center hole in mounting bracket.
- 2. Secure mounting plate to wall over the wall supply wire box with four 1/4" bolts supplied by others.
- **3.** Make the electrical connection between the fixture and supply wires.
- **4.** Apply silicone (by others) to the top and side edges of the wall plate. Lower the fixture wall plate over the top of the mounting bracket. With the plate flush with the wall secure the wall plate to the mounting bracket with the two sets provided.

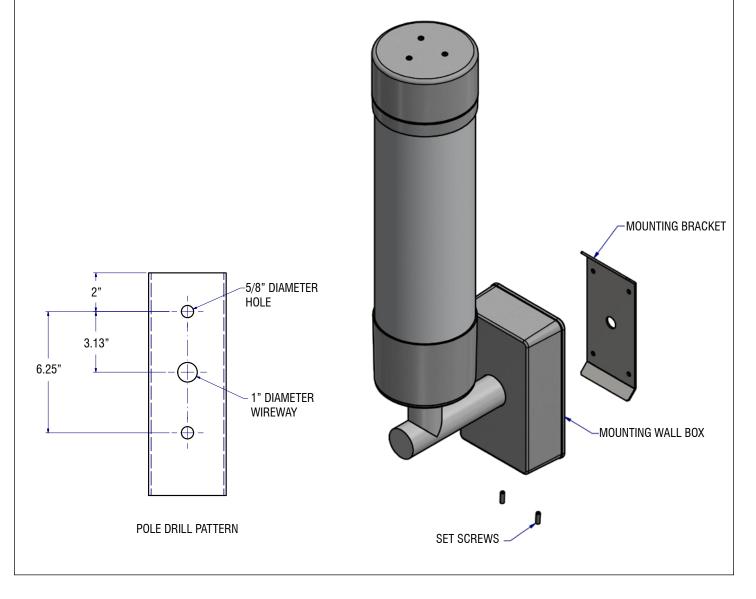



800-621-3376 555 Lawrence Ave., Roselle, IL 60172 info@sternberglighting.com www.sternberglighting.com

5/18 STERNBERG LIGHTING. ALL RIGHTS RESERVED. PRINTED IN THE USA.