


SL270 WALL SCONCE WITH CONDUIT BOX INSTALLATION INSTRUCTIONS



- WARNING: TO AVOID FIRE, SHOCK OR DEATH, TURN OFF AND LOCKOUT POWER BEFORE PERFORMING ANY MAINTENANCE.
- CAUTION: THIS FIXTURE MUST BE WIRED IN ACCORDANCE WITH THE NATIONAL ELECTRIC CODE AND ALL APPLICABLE LOCAL CODES. PROPER GROUNDING IS REQUIRED. ALL WORK SHOULD BE DONE BY A QUALIFIED ELECTRICIAN.
- SAVE THESE INSTRUCTIONS.
 - 1. Apply silicone bead to the back of the conduit box as shown. **SEE FIGURE 1**.
 - 2. Attach conduit box mounting bracket to wall (customer supplied hardware). SEE FIGURE 2.
 - 3. Attach conduit box front casting to the fixture using mounting screws and supplied lock washers and nuts. SEE FIGURE 3.
 - **4.** Attach conduit as required (customer supplied). 3/4" NPT threaded holes are provided on both sides of the conduit box.
 - **5.** Attach supply wires to fixture wires.
 - **6.** Attach fixture assembly to mounting bracket with supplied screws. **SEE FIGURE 4.**

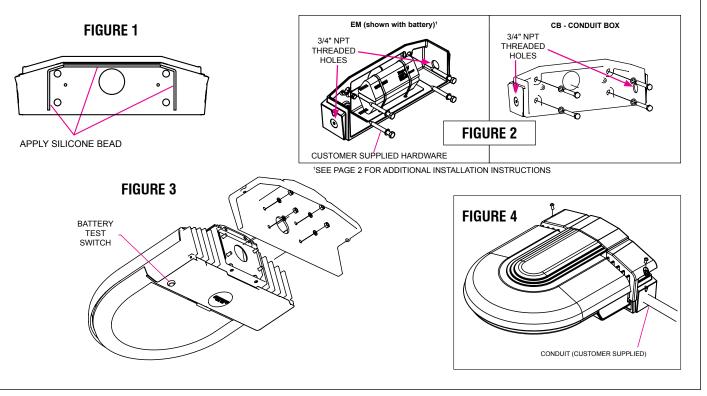





SL270 WALL SCONCE WITH EMERGENCY LIGHTING (EM) INSTALLATION INSTRUCTIONS



WARNING: BATTERY CONNECTIONS WERE DISCONNECTED PRIOR TO SHIPMENT TO REDUCE SHOCK HAZARD. WITH THE POWER TURNED OFF RECONNECT BATTERY CONNECTORS ONLY AFTER THE FIXTURE HAS BEEN INSTALLED. (SEE FIGURES 1&2)

