SL610 STEM MOUNT

INSTALLATION INSTRUCTIONS





WARNING: TO AVOID FIRE, SHOCK OR DEATH, TURN OFF AND LOCKOUT POWER BEFORE PERFORMING ANY MAINTENANCE.



THIS FIXTURE MUST BE WIRED IN ACCORDANCE WITH THE NATIONAL ELECTRIC CODE AND ALL APPLICABLE LOCAL CODES, PROPER GROUNDING IS REQUIRED. ALL WORK SHOULD BE DONE BY A QUALIFIED ELECTRICIAN.

- 1. Pull supply wires through the center opening of the mounting plate.
- 2. Secure mounting plate to the ceiling over the ceiling supply wire box (supplied by others) with four 1/4" bolts (supplied by others).
- 3. Slide the canopy cover over the fixture stem. Let the canopy cover rest on top of the fixture until the fixture is completely installed.
- 4. Pull the fixture wires through the wire way hole located in the support bracket.
- 5. Place the ez hang ball into the EZ Hang cup. Align the key slot in the ball with the tab in the cup.
- 6. Attach the EZ Hang cover to the EZ Hang cup with the two screws provided.
- 7. Tighten the set screw located in the EZ Hang cup to secure the fixture/stem assembly in place.
- 8. Make the connections between the supply wires and fixture wires.
- 9. Slide the canopy cover over the EZ Hang cup and into the mounting plate. Secure the cover to the mounting plate with the two screws provided.

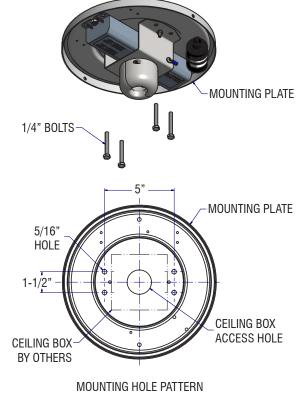

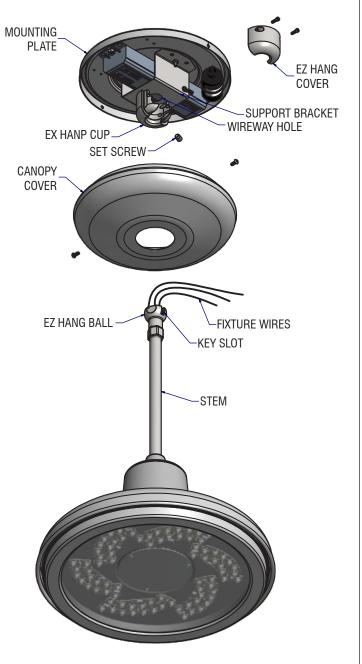



800-621-3376 555 Lawrence Ave., Roselle, IL 60172 info@sternberglighting.com www.sternberglighting.com