

Mara and Spur Ceiling

700FMMRA, 700FMSPR 1.2



CEILING

GENERAL PRODUCT INFORMATION:

This product is suitable for damp locations.

These fixtures are intended to be installed utilizing NEC compliant junction boxes.

This product can be dimmed with most ELV an TRIAC dimmers.

This instruction shows a typical installation.



CAUTION - RISK OF FIRE
This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.
Use minimum 90°c supply conductors.




7400 Linder Ave, Skokie, IL 60077

847.410.4400

www.techlighting.com


© 2020 Tech Lighting, L.L.C. All rights reserved.
Visual Comfort Group

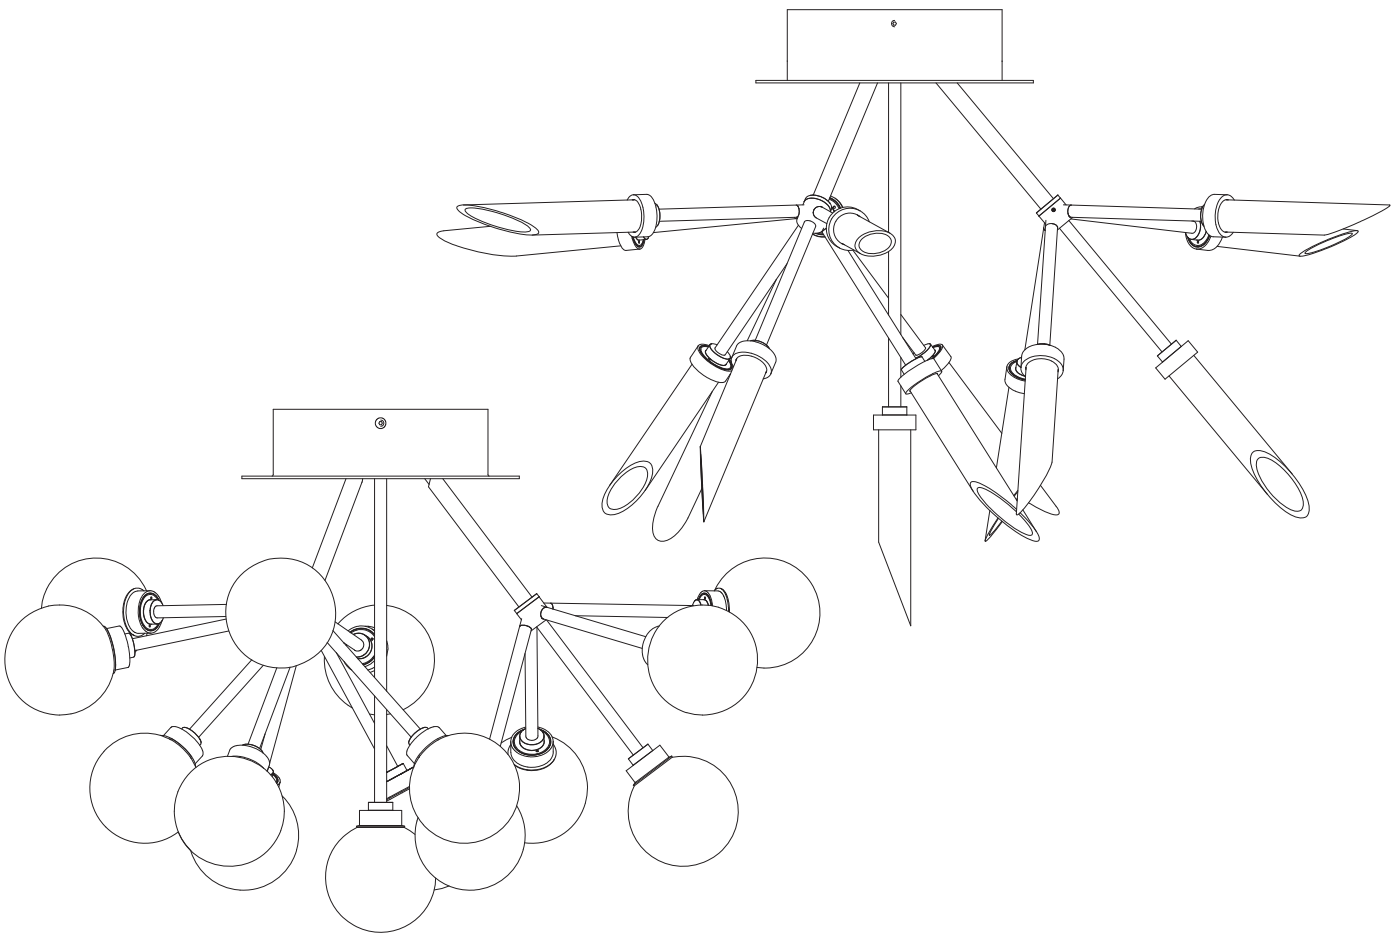

SAVE THESE INSTRUCTIONS!

Install the Fixture

1A

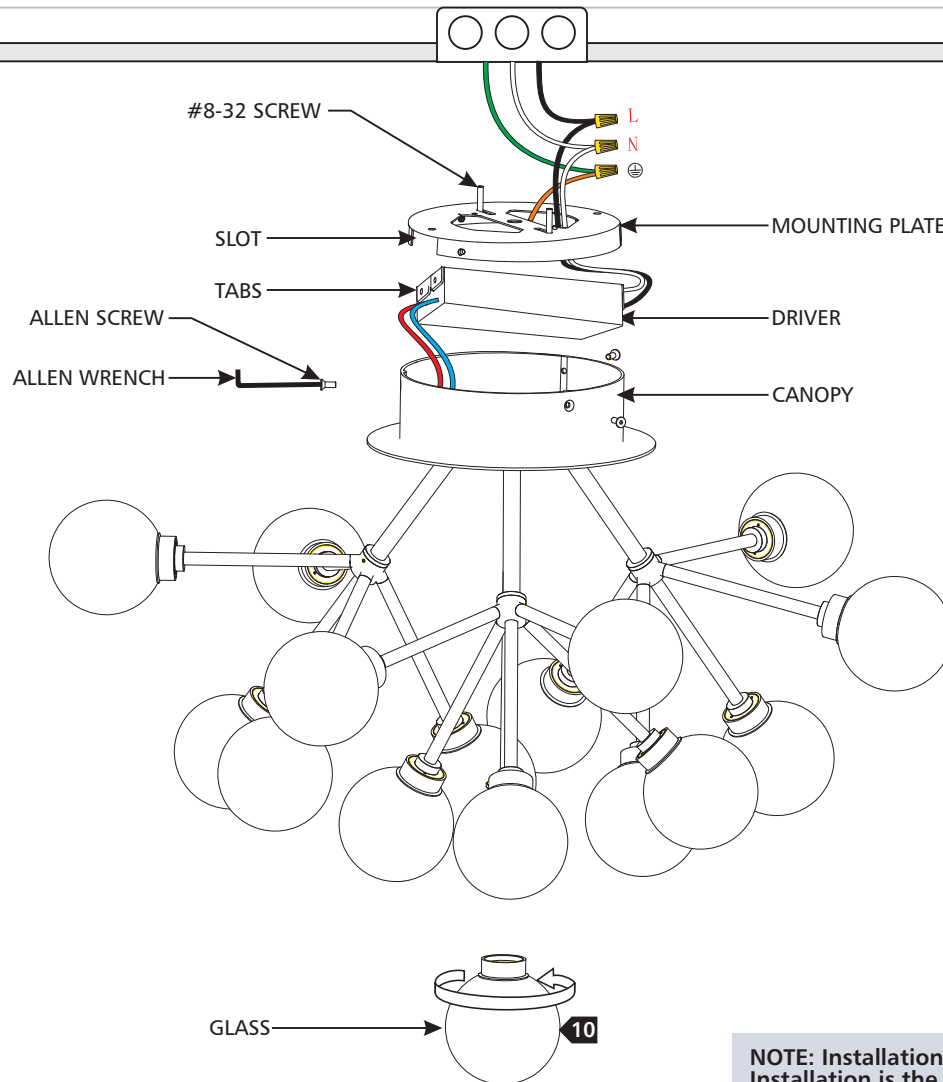

NOTE: Installation for the Mara shown. Installation is the same for the Spur.

- 1 Remove all the Allen screws around the canopy using the provided Allen Wrench.
- 2 Remove the mounting plate from the canopy.
- 3 Secure the mounting plate to the electrical box with the #8-32 screws.
- 4 Connect the blue driver wire to the black fixture wire with a wire nut.
- 5 Connect the red driver wire to the red fixture wire with a wire nut.
- 6 Connect the fixture to a suitable ground in accordance with local electrical codes.
- 7 Connect the white driver wire to the neutral power line wire with a wire nut.
- 8 Connect the black driver wire to the hot power line wire with a wire nut.
- 9 Neatly place the drivers, all wires, and wire nut connections inside the canopy, align the canopy holes with the mounting plate holes, and secure the canopy in place by tightening the Allen screws using the provided Allen Wrench. **NOTE: The driver must be oriented in the canopy so that the tabs align with the slots on the mounting plate when installing the canopy to the mounting plate.**
- 10 Install the glass by carefully screwing it into the base. **Do not over tighten.** Repeat for remaining glass.