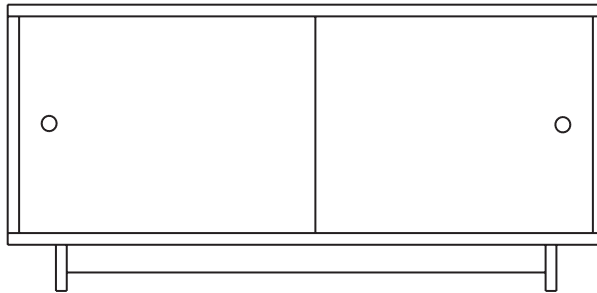
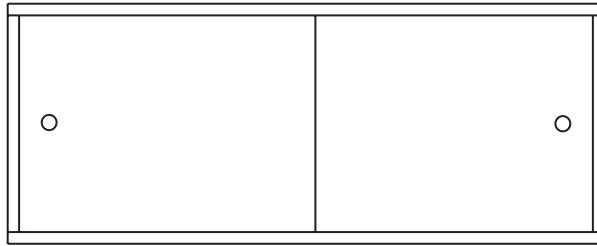


oeuf[®]

PERCH TWIN BUNK BED CONSOLE

ITEM # 1PB-C



ek66210

Oeuf LLC 234 Underhill Ave | Brooklyn, NY 11238 | USA +1 (718) 965-1216 | www.oefnyc.com

Distributed internationally by:

Canada

Monte Distribution Inc.
270 Belfield Rd
Toronto, Ontario
M9W 1H5
Canada
Tel: +1 866 604 6755
info@oefcanada.com

UK

Kids At Home Distrb.
Newick Business Centre
Church Road
Newick, BN8 4NA
England
Tel: +01825 724160
kahdistribution@gmail.com

EU

Suede Import
20 Bis Rue des Champs
92600 Asnières-sur-Sein
France
Tel: +33 (0)1 40 86 06 03
suedeimport@yahoo.fr

Korea

J2 International Inc.
(주) 제이투인터내셔널
서울시 강남구 도산대로 506
재정빌딩 304호
Tel: +82 70 8247 7576
oefkorea.igt@gmail.com

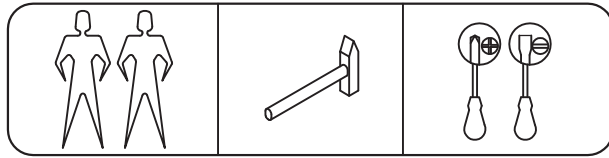
China

Arketype Limited
7F Metro Loft, 38 Kwai Hei St.
Kwai Chung, N.T.,
Hong Kong
+852 2110 9400
www.arketype.com

Australia








Kido Agencies
Postal: PO Box 6039
Alexandria NSW 2015
Australia
Tel: +61 2 9045 7799
info@kidoagencies.com








Made in Latvia

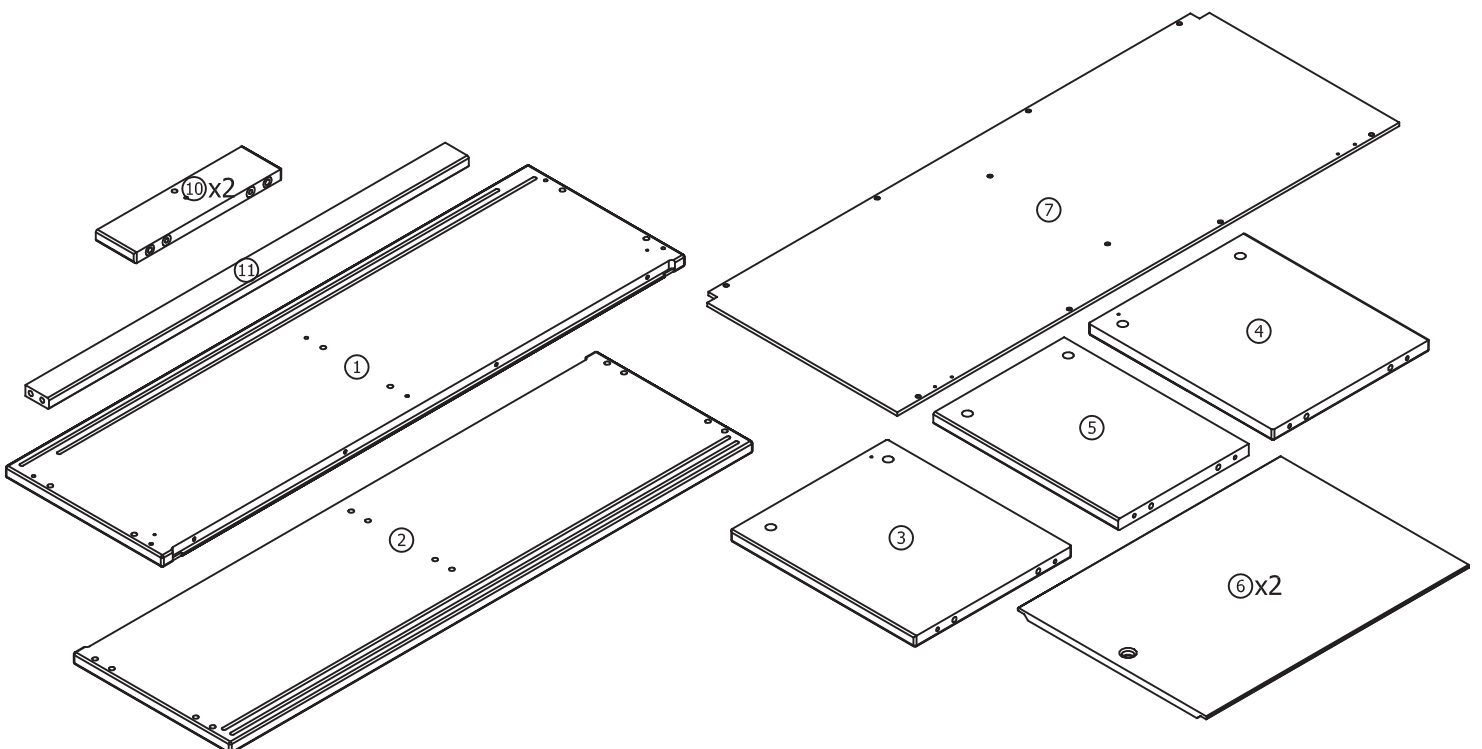



Fittings List - Bunkbed

Liste des Pièces

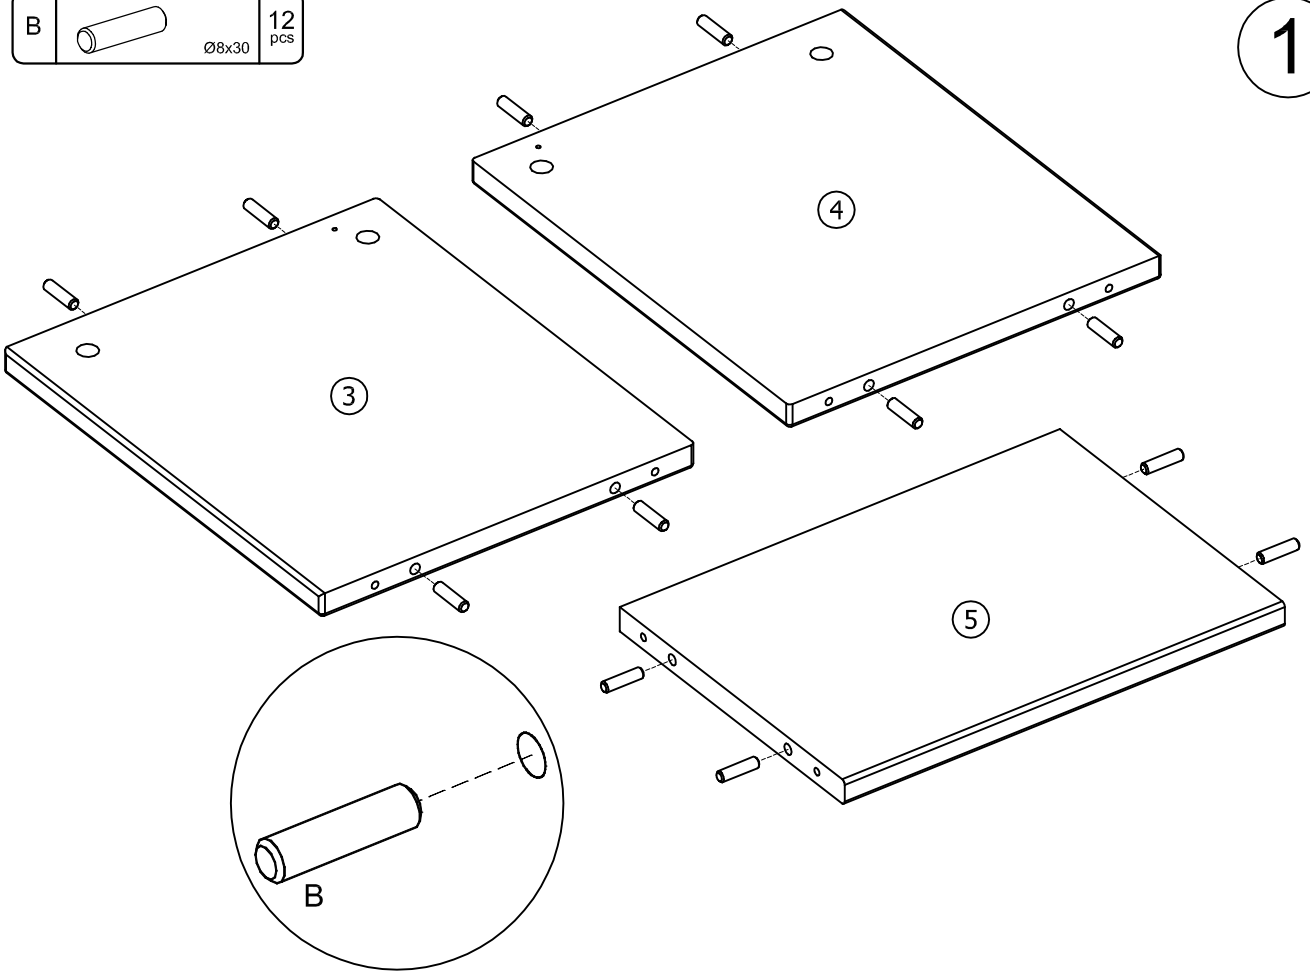
A	 Ø5/11x34	8 pcs
B	 Ø8x30	18 pcs
C	 Ø7x50	6 pcs
D	 4mm	1 pc
E	 Ø15x13,5	8 pcs
F	 Ø4x16	4 pcs
G	 Ø5x40	10 pcs


H	 3mm	1 pc
J	 Left	1 pc
K	 Right	2 pcs
L	 Right	1 pc
M	 Ø4x16	4 pcs
N	 Ø15 M6x22	4 pcs
P	 M6x80	4 pcs




B  Ø8x30 12 pcs

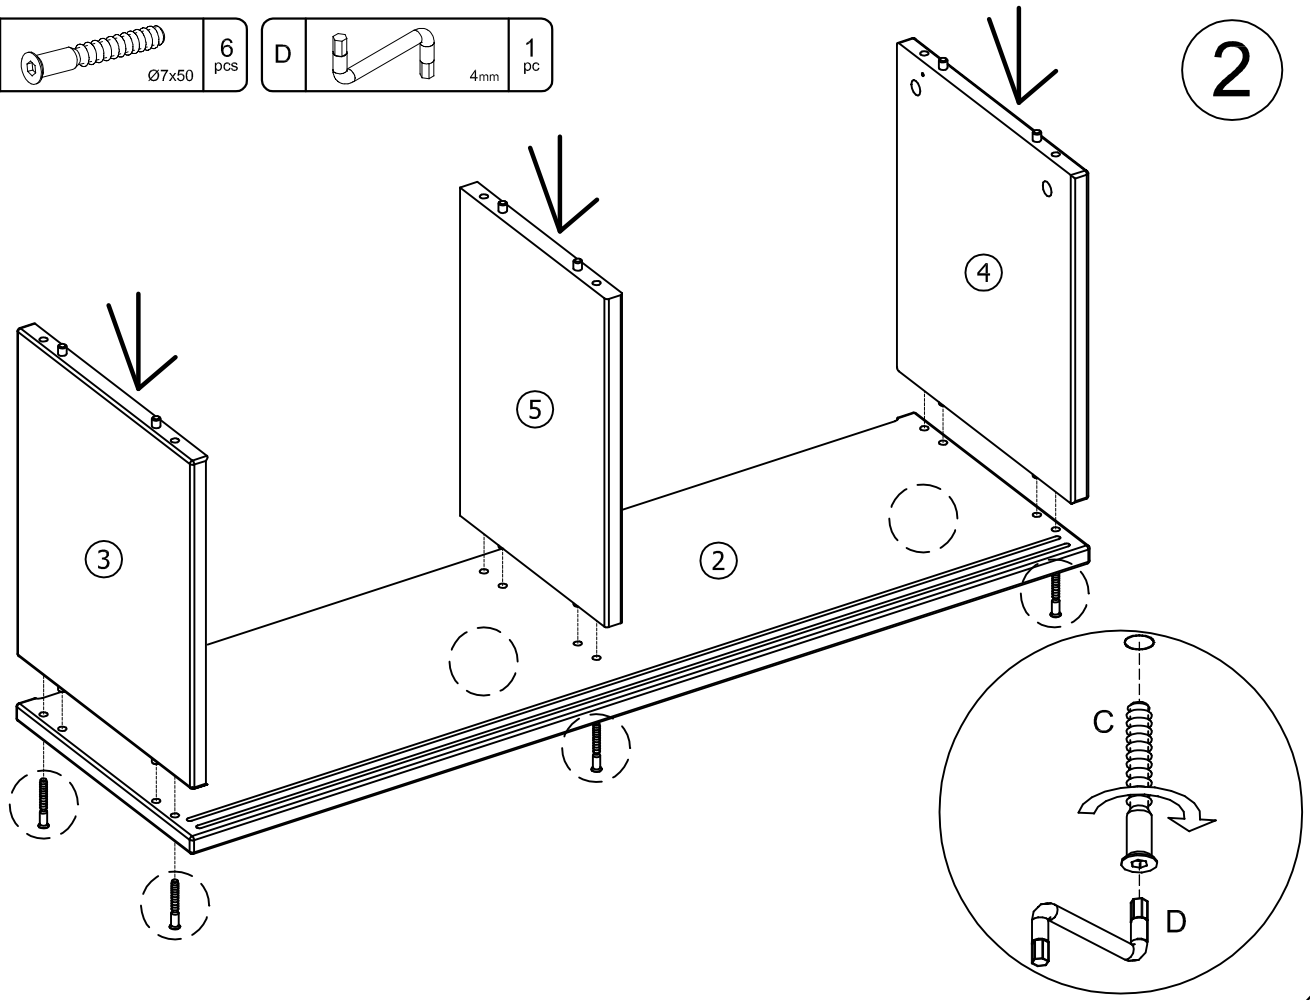
1



C  Ø7x50 6 pcs


D  4mm 1 pc


2



A		6 pcs
Ø5/11x34		

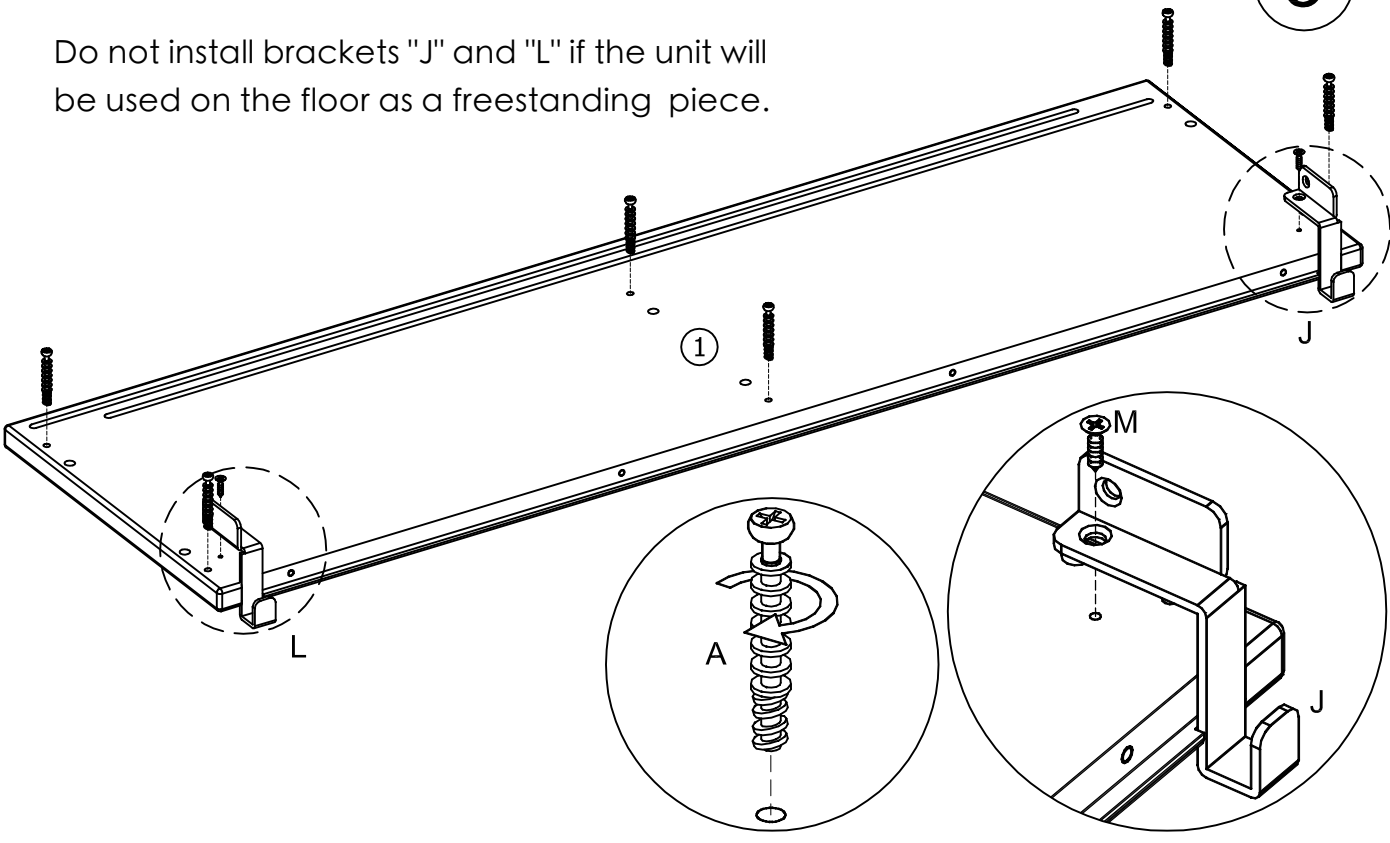
M		2 pcs
Ø4x16		

J		1 pc
Left		

L		1 pc
Right		

3

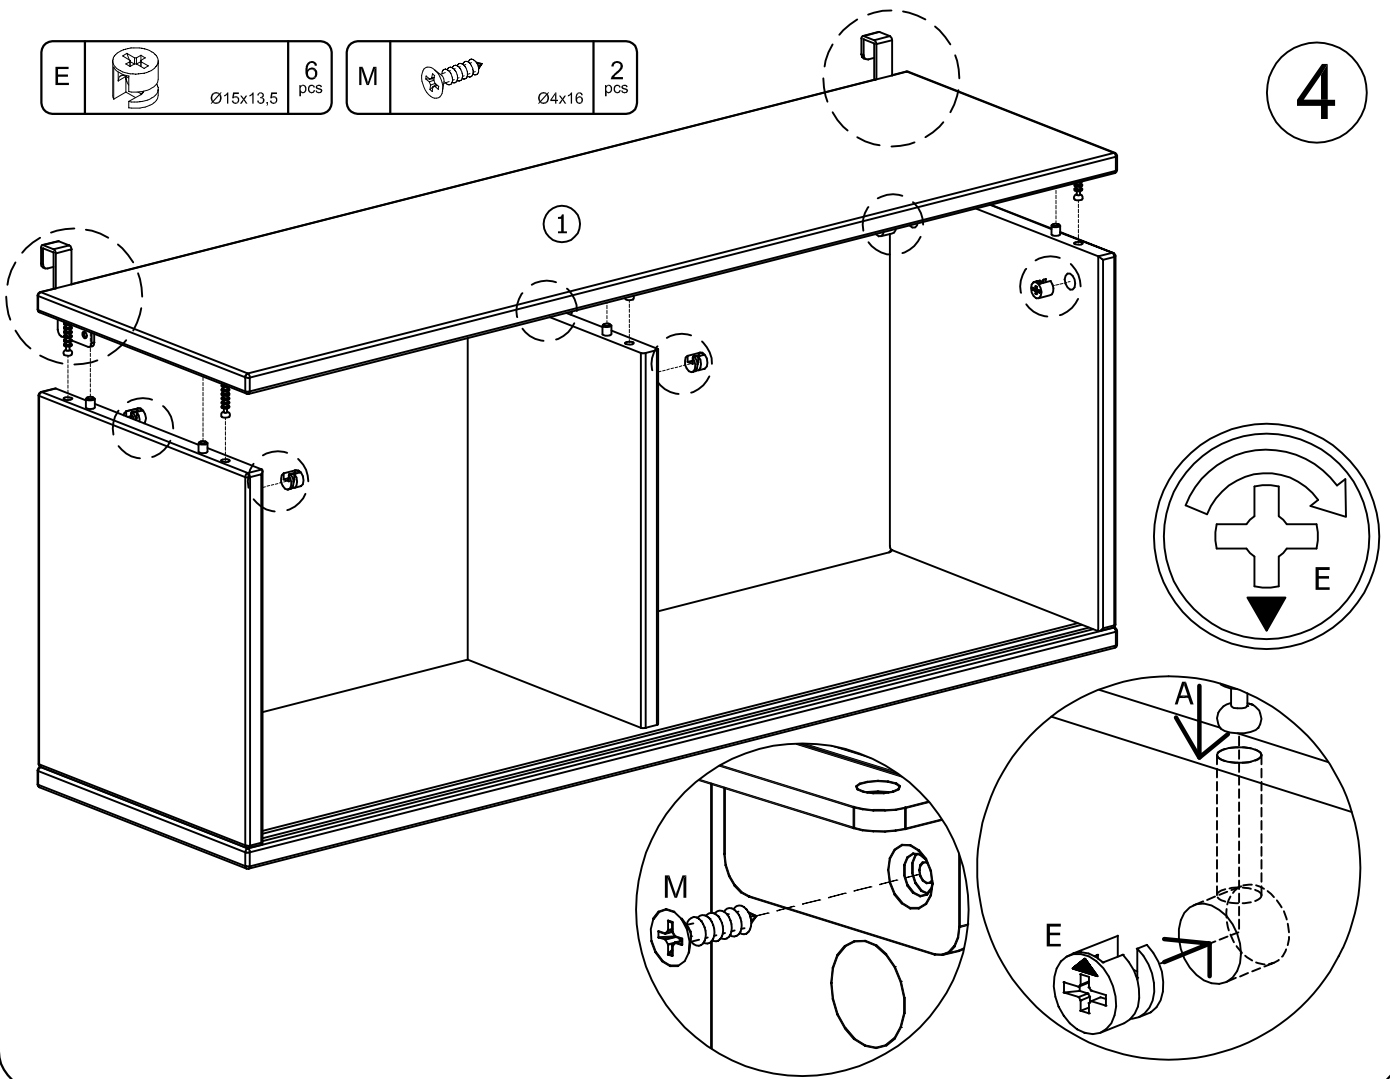
Do not install brackets "J" and "L" if the unit will be used on the floor as a freestanding piece.



E		6 pcs
Ø15x13,5		

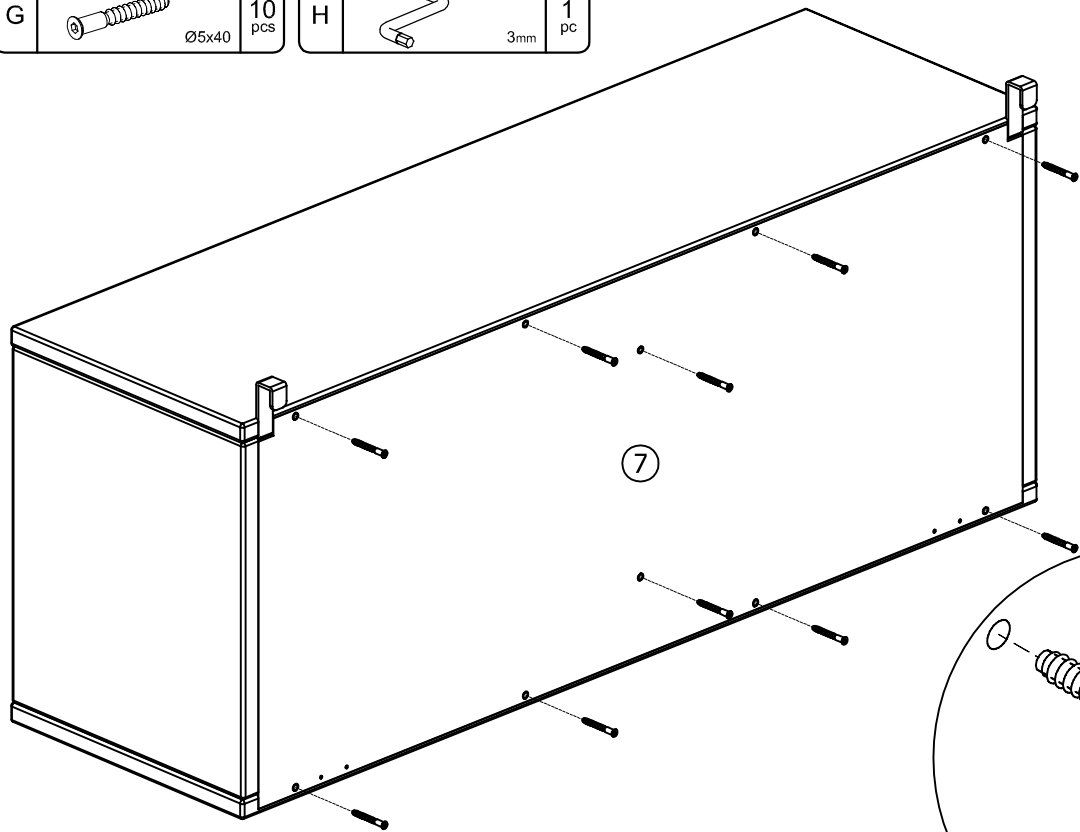
M		2 pcs
Ø4x16		

4

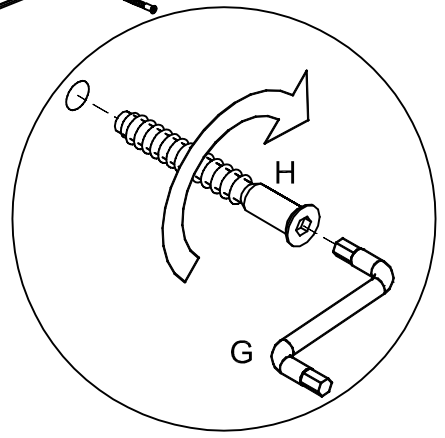


G	 Ø5x40 10 pcs	H	 3mm 1 pc
---	--	---	--

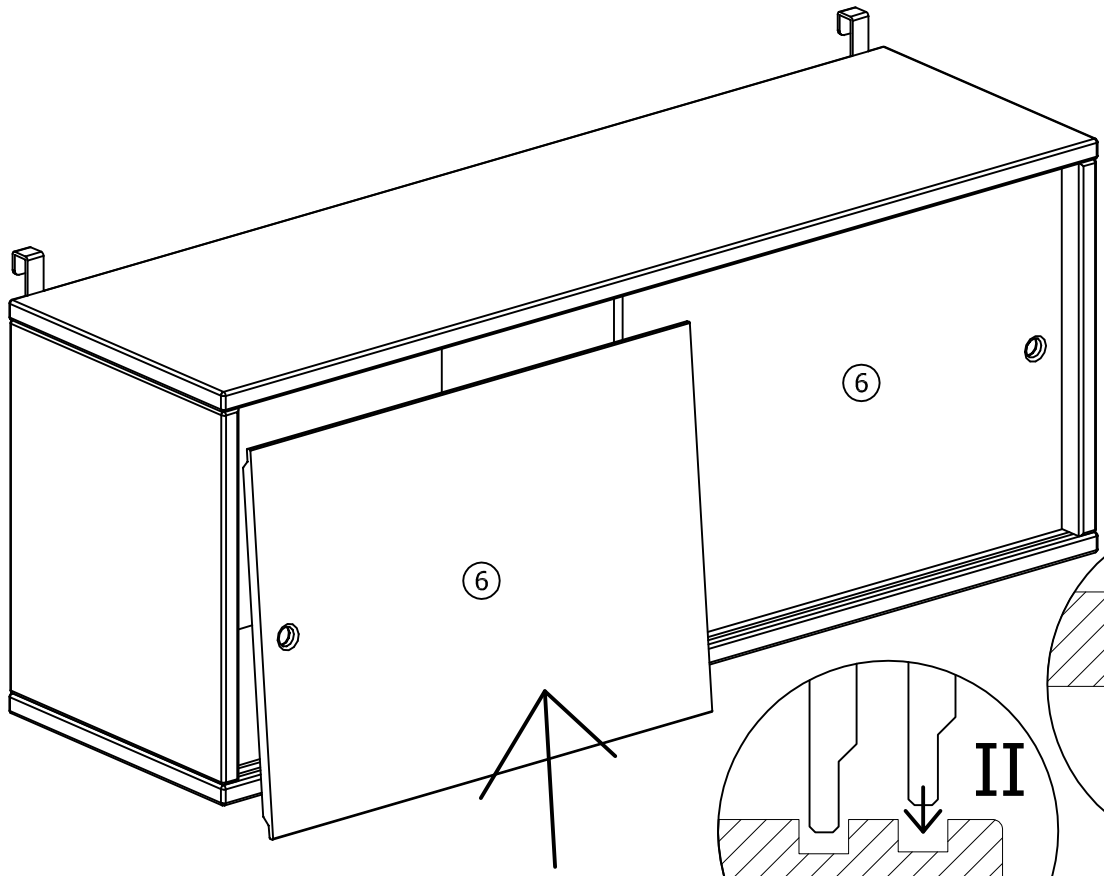
5



7

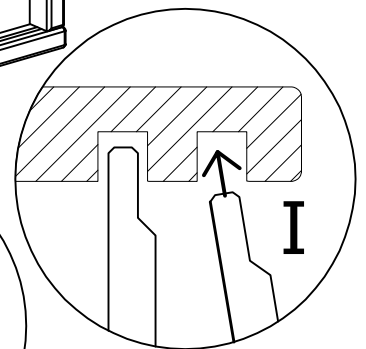
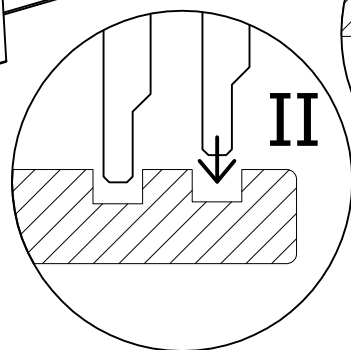


6

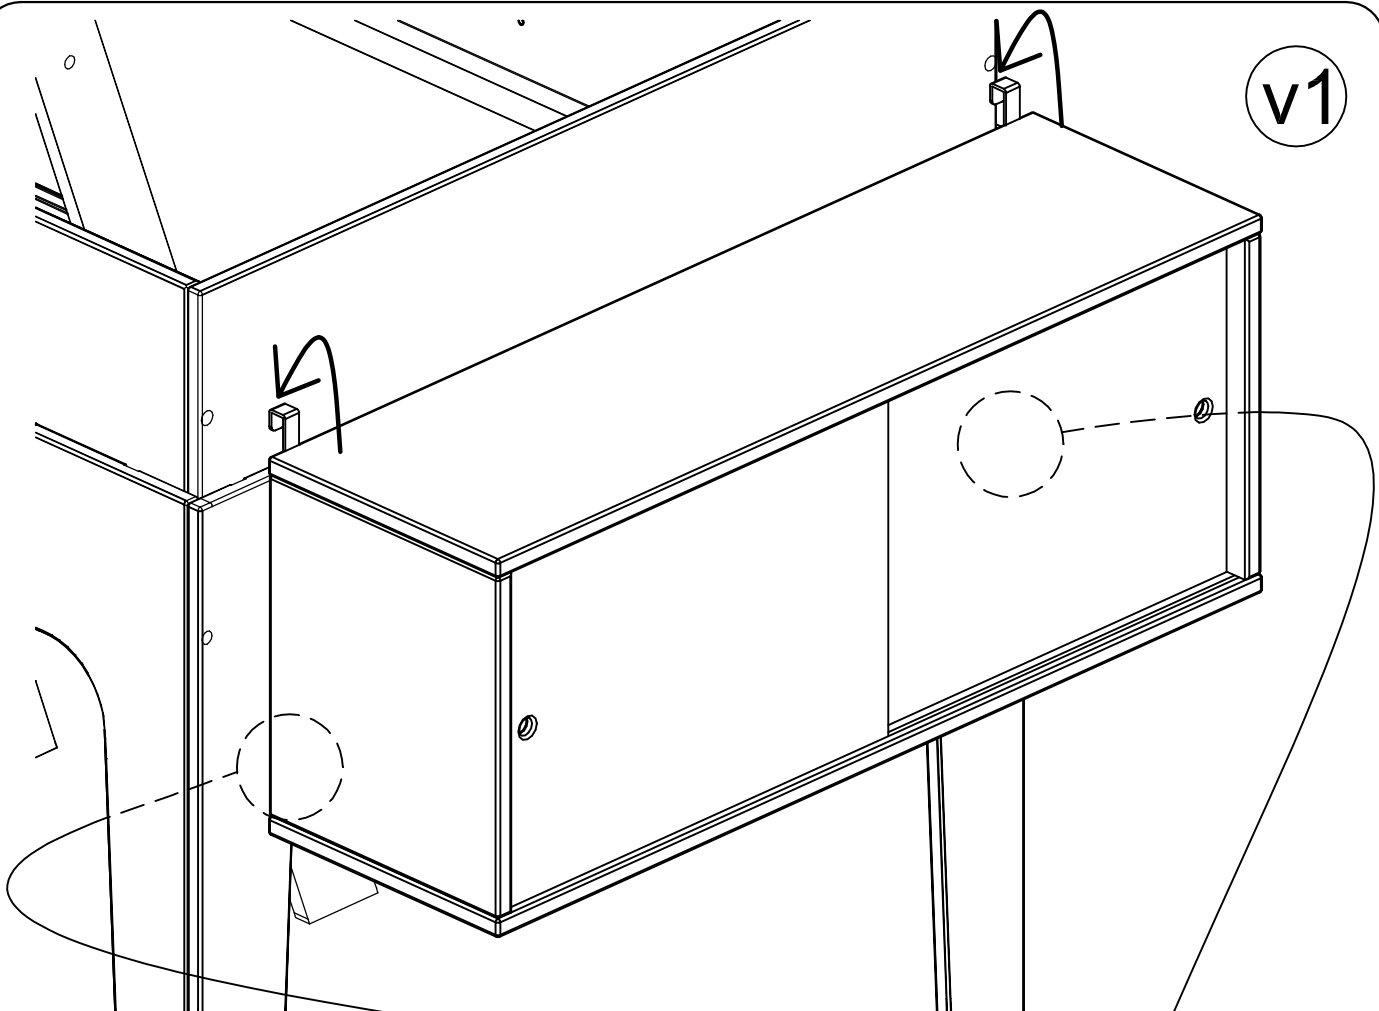


6

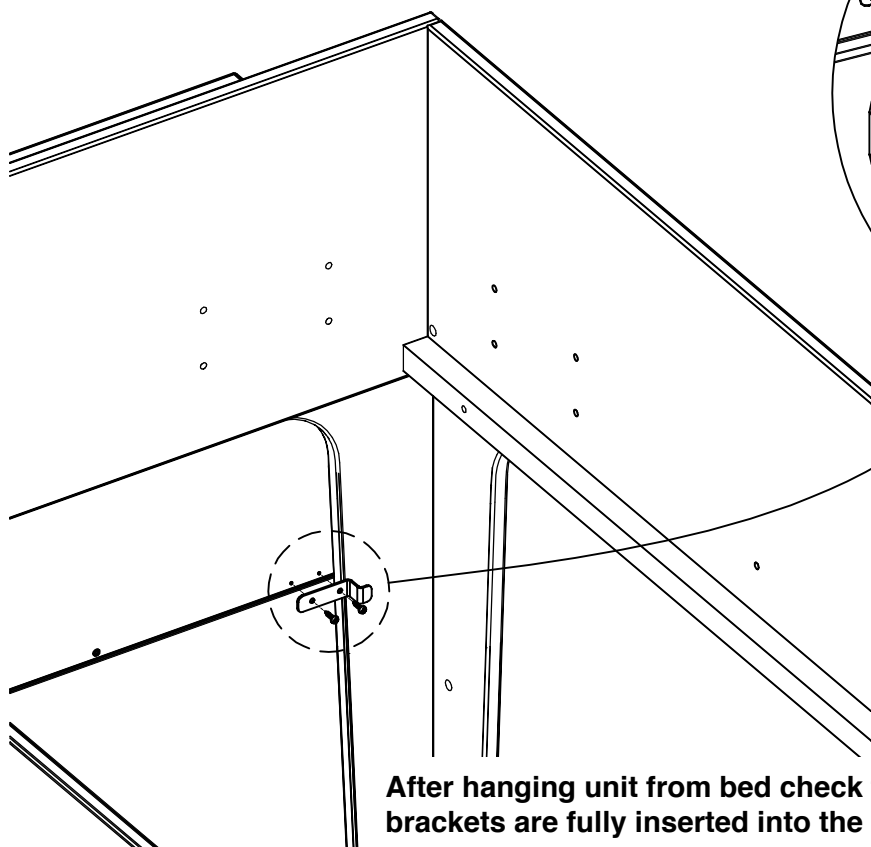
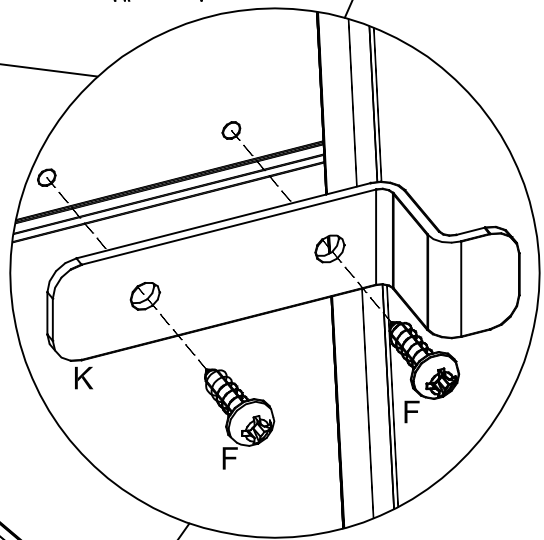
6



V1




K		2 pcs	F		4 pcs Ø4x16
---	---	----------	---	---	-------------------



After hanging unit from bed check that the unit is secure and the brackets are fully inserted into the slots of the Perch before use.

A		2 pcs
Ø5/11x34		

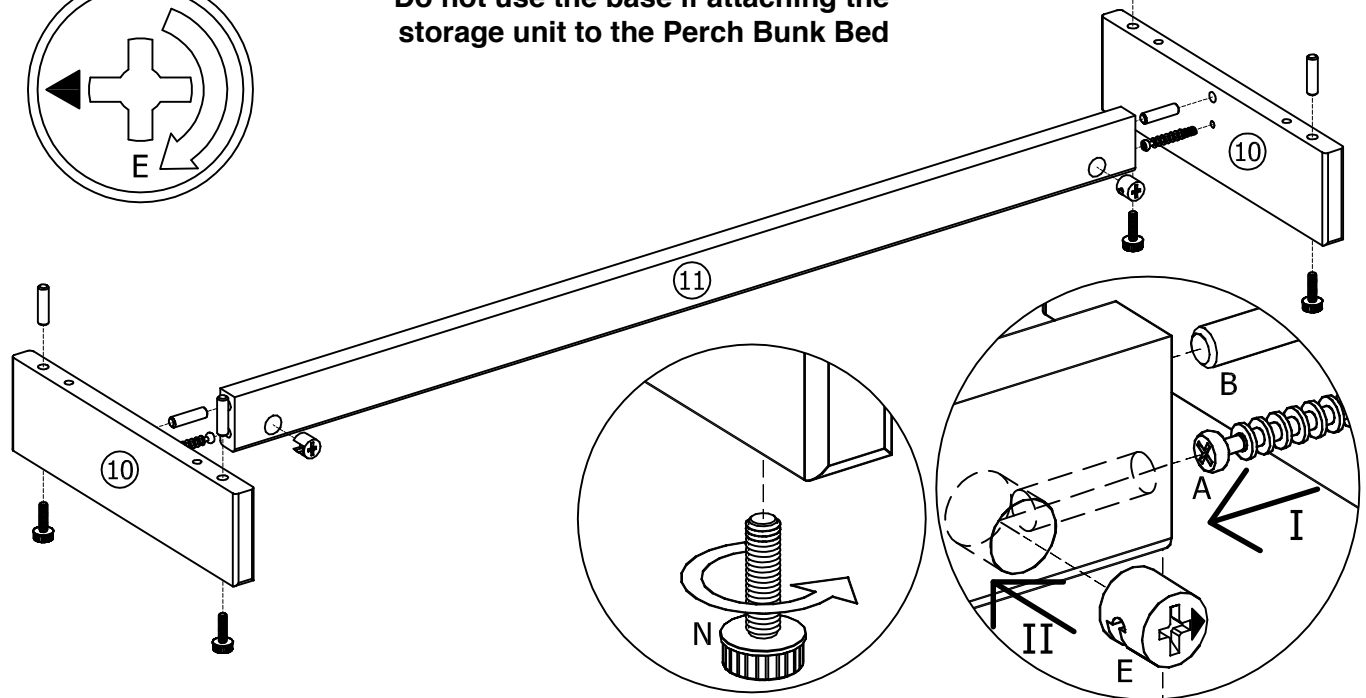
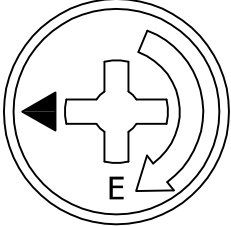
B		6 pcs
Ø8x30		


E		2 pcs
Ø15x13,5		


N		4 pcs
Ø15 M6x22		

v2

Do not use the base if attaching the storage unit to the Perch Bunk Bed



P		4 pcs
M6x80		

D		1 pc
4mm		

