

CAMPBOSS®
4x4



BOSS SHADOW

Set up and care instructions



BOSS SHADOW 180

BOSS SHADOW 270 XL

BOSS SHADOW 270 XL RTT

Get acquainted with your Boss Shadow

Get to know your Boss Shadow vehicle awning and check that you have all the components prior to first use:



BOSS SHADOW 180

180° vehicle awning with 1000GSM PVC bag

Parts list

- 2 x 3m cables with USB plugs
- 2 x quick release rope ratchets to tension your awning
- 2 x 304 stainless steel L- bracket (black)
- 4 x 304 stainless steel clips
- 16 x each M8 bolts, nuts, and washers (all 304 stainless steel)
- 4 x storm ropes
- 4 x pegs
- 2 x wrenches



BOSS SHADOW 270 XL

270° vehicle awning with 1000GSM PVC bag
AUS DSN NO 202311036

Parts list

- 1 x 3m tri-split cable with USB plug
- 2 x quick release rope ratchets to tension your awning
- 2 x 304 stainless steel L- bracket (black)
- 4 x 304 stainless steel clips
- 16 x each M8 bolts, nuts, and washers (all 304 stainless steel)
- 6 x storm ropes
- 6 x pegs
- 2 x wrenches



BOSS SHADOW 270 XL RTT

270° vehicle awning with zippered manhole allowing access to a rooftop tent with 1000GSM PVC bag
AUS DSN NO 202311036

Parts list

- 1 x 3m tri-split cable with USB plug
- 2 x quick release rope ratchets to tension your awning
- 2 x 304 stainless steel L- bracket (black)
- 4 x 304 stainless steel clips
- 16 x each M8 bolts, nuts, and washers (all 304 stainless steel)
- 6 x storm ropes
- 6 x pegs
- 2 x wrenches

Attaching your Boss Shadow to a vehicle


CampBoss recommends using an experienced and qualified aftermarket 4X4 accessories fitter to mount your Boss Shadow awning to your vehicle. CampBoss doesn't accept any responsibility for the fitment of a Boss Shadow awning to any vehicle, roof rack, or roof tray.

ATTACHING THE L-BRACKETS TO A VEHICLE

- Using two people, temporarily lift the closed awning into position to check the fitting location. Things to check for include clearance of side doors, tailgates, snorkels, and any other vehicle attachments. Take note of the appropriate mounting locations for the L-brackets.
- Attach the two black stainless steel L-brackets to the roof rack or roof tray using the included M8 bolts, washers and nuts.
- The included L-brackets and stainless steel bolts will suit a variety of roof racks and roof trays, however since the designs and attachment styles of different racks and trays can be considerably different, additional specific attachments may be needed to secure the Boss Shadows properly. Ask your qualified 4X4 accessories fitter for advice on mounting options, and for advice on roof load capacities.


ATTACHING THE AWNING TO THE L-BRACKETS

- Insert and slide in the required number of M8 bolts into the rear metal extrusion of the awning.
- Using two people, lift the awning into position on the vehicle. Line up the sliding bolts with the locations of the L-brackets.
- Secure into place using the M8 washers and nuts, ensuring the awning is firmly mounted.
- The L-brackets and fasteners should be checked regularly on both the awning and the roof rack or roof tray to ensure it remains secure. Prolonged travelling on rough or corrugated terrain will require more frequent checking intervals.

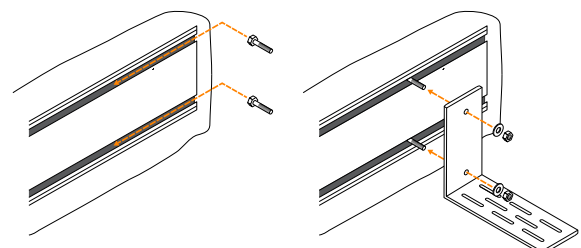


Set up your Boss Shadow

- **OPEN THE PVC BAG:** unzip the protective bag, open and fold it over the top of the awning body.
- **RELEASE THE AWNING:** release the three Velcro straps and allow the polyester cotton canvas to drape into position.
- **OPEN THE AWNING:** swing out the right arm 180° on the Boss Shadow 180, or 270° on the Boss Shadow 270 XL and 270 XL RTT, and attach the tension rope to the rear of the roof rack or roof tray using the quick release rope ratchet. Then swing out the left arm 180° and attach the tension rope to the front of the roof rack or roof tray using the quick release rope ratchet. The awning is self-supporting with full A-frame style arms for added strength.
- **DROP THE POLES INTO POSITION:** for extra stability undo the Velcro straps that secure each pole in position, swing down each leg, and adjust the pole height using the snap-lock lever on each one. Use the included storm ropes and pegs to secure each pole, positioning each rope out 45° from the top of the pole.
- **CONNECT THE LEDS:** plug the supplied cable(s) into the LED light strips, and plug the other end(s) into a USB power source.
- **ADVERSE WEATHER:** rain tie-down points are located between each pole location, and can be used to create run-off gutters in adverse weather conditions. Simply use additional guy ropes and pegs to lower the tie-down points.

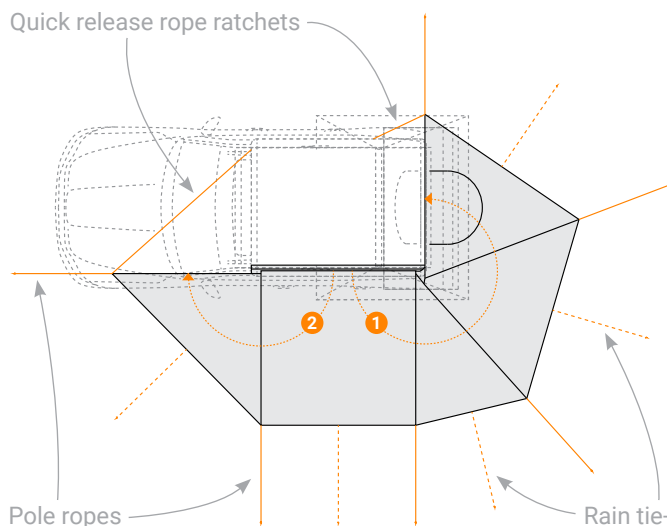

Boss Shadow 270 XL and Boss Shadow 270 XL RTT

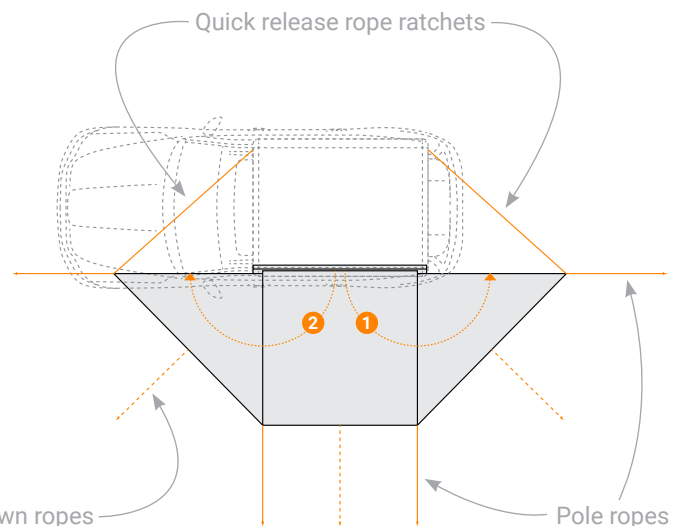

Boss Shadow 180

Pack up your Boss Shadow

- **UNPLUG THE LEDS:** unplug all the LED light strips and store the cable(s) away in your vehicle.
- **REMOVE PEGS AND ROPES:** undo all pegs, storm ropes, and guy ropes.
- **RETURN POLES INTO STORED POSITION:** minimise the height of each pole using the snap-lock levers on each, and swing them back up into position securing each with the Velcro straps.
- **CLOSE THE AWNING:** release the front tension rope using the quick release rope ratchet and swing the left arm back into the closed position. Then release the rear tension rope using the quick release rope ratchet and swing the right arm back into the closed position. The canvas should be draped down in a triangular shape.
- **SECURE THE AWNING:** roll the canvas neatly up into position and secure using the three Velcro straps.
- **CLOSE THE PVC BAG:** position the protective bag back over the top of the awning body, and zip up to cover the awning.
- **KEEP THE AWNING DRY IN STORAGE:** ideally the Boss Shadow should only be packed up when completely dry ... however this isn't always possible when getting off the beaten track. In cases where the awning has to be packed up wet, the awning should be reopened and thoroughly dried as soon as possible.

Boss Shadow care instructions

- **CLEANING:** clean with cold water and a soft bristle brush when required. Do not use soaps or detergents, and avoid exposure to chemicals, fuels and oils.
- **STORAGE:** to ensure the longevity of your Boss Shadow it should always be stored away clean and dry. On occasions where the awning ends up being wet during pack up, it is essential that it is set up and dried as soon as possible. Incorrect storage including while wet will void the warranty.
- **ADVERSE WEATHER:** while the Boss Shadow features pole ropes and rain tie-down points, in general the awning should only be used in calm conditions. To avoid the chances of personal injury and damage to the vehicle and property, CampBoss recommends the Boss Shadow should not be set up in high winds or stormy conditions. Damage caused by wind or adverse weather will not be covered under warranty.
- **ROPES AND PEGS:** always ensure all storm ropes and guy ropes are anchored correctly with the appropriate style of peg (additional types of pegs may need to be purchased separately). It is recommended to check and readjust storm and guy ropes at regular intervals to maintain the structural integrity of the Boss Shadow.
- **WATER AND UV:** the Boss Shadow is made from 280GSM polyester cotton canvas which is waterproof (rated to 3000mm) and has a UV rating of 50++. Some water ingress may occur around the zippered manhole on the Boss Shadow 270 XL RTT, however the cover flaps on the rooftop tent will help to minimise this.

SAFETY WARNINGS

- CampBoss recommends using an experienced and qualified aftermarket 4X4 accessories fitter to mount your Boss Shadow awning to your vehicle. CampBoss doesn't accept any responsibility for the fitment of a Boss Shadow awning to any vehicle, roof rack, or roof tray. Additional hardware may be required for proper fitment to your particular vehicle setup.
- Fasteners and fixing connections should be checked on a regular basis to ensure the Boss Shadow remains securely fastened to the vehicle. These connections should be checked more frequently when travelling across rough and corrugated terrain.
- Keep all flame and heat sources away from the Boss Shadow, including naked flames and campfires.
- If a campfire is nearby keep a constant lookout for airborne burning embers that may come into contact with the awning. Keep a fire extinguisher or water bucket nearby.
- Exercise caution around the poles, storm ropes, and guy ropes to prevent personal injury.
- Ensure children are supervised around the awning at all times to prevent injury, and damage to the awning.

IMPORTANT: DO NOT LEAVE YOUR AWNING UNATTENDED WITHOUT FIRST SECURING IT DOWN USING THE BUILT-IN POLES, STORM ROPES, AND PEGS.

WINDY CONDITIONS: ALWAYS SECURE DOWN YOUR AWNING IN WINDY CONDITIONS USING THE BUILT-IN POLES, STORM ROPES, AND PEGS.

NUDIE BOSS SHOWER AWNING

Set up and care instructions



Get acquainted with your Nudie Boss

Get to know your Nudie Boss vehicle shower awning and check that you have all the components prior to first use:

Vehicle shower awning

- 1000GSM PVC bag
- 280GSM polyester cotton canvas, waterproof 3000mm, UV50++
- Open size:
100cm x 100cm x 200cm
- Closed size:
104cm x 10cm x 13cm
- Package size:
110cm x 16cm x 16cm
- Net weight: 7.5kg
- Gross weight: 9.85kg
- Aluminum laser engraved frame

Parts list

- 1 x top cover
- 1 x dual-color dimmable LED strip with switch control;
1 x 2m cable with USB plug
- 2 x 304 stainless steel L-bracket spray black
- 2 x 304 stainless steel clips
- All bolts, nuts, washers, clips are 304 stainless steel
- 8 x each M8 bolts, nuts, and washers
- 4 x pegs and 1 x carabiner
- 2 wrenches



Attaching your Nudie Boss to a vehicle


CampBoss recommends using an experienced and qualified aftermarket 4X4 accessories fitter to mount your Nudie Boss awning to your vehicle. CampBoss doesn't accept any responsibility for the fitment of a Nudie Boss awning to any vehicle, roof rack, or roof tray.

ATTACHING THE L-BRACKETS TO A VEHICLE

- Using two people, temporarily lift the closed awning into position to check the fitting location. Things to check for include clearance of side doors, tailgates, snorkels, and any other vehicle attachments. Take note of the appropriate mounting locations for the L-brackets.
- Attach the two black stainless steel L-brackets to the roof rack or roof tray using the included M8 bolts, washers and nuts.
- The included L-brackets and stainless steel bolts will suit a variety of roof racks and roof trays, however since the designs and attachment styles of different racks and trays can be considerably different, additional specific attachments may be needed to secure the Nudie Boss properly. Ask your qualified 4X4 accessories fitter for advice on mounting options, and for advice on roof load capacities.

ATTACHING THE AWNING TO THE L-BRACKETS

- Insert and slide in the required number of M8 bolts into the rear metal extrusion of the awning body.
- Using two people, lift the awning into position on the vehicle. Line up the sliding bolts with the locations of the L-brackets.
- Secure into place using the M8 washers and nuts, ensuring the awning is firmly mounted.
- The L-brackets and fasteners should be checked regularly on both the awning body and the roof rack or roof tray to ensure it remains secure. Prolonged travelling on rough or corrugated terrain will require more frequent checking intervals.

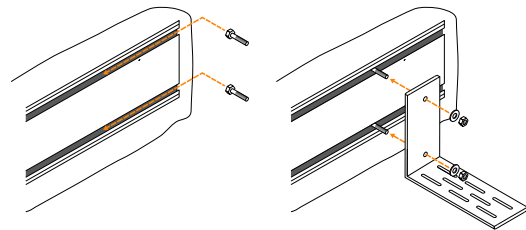

Set up your Nudie Boss

- **OPEN THE PVC BAG:** unzip the protective bag, open and fold it over the top of the awning body.
- **RELEASE THE AWNING:** release the three Velcro straps and allow the polyester cotton canvas to drape into position.
- **FLIP THE ROOF BACK:** grab the outermost section which is the roof, and flip it over the top of the awning body while you set up the rest of the Nudie Boss.
- **OPEN THE ARMS:** swing out the first arm from right to left about 180°. Then grab the hinged join in the centre and pull it back across to the right 90° to form a square shape. At rear right corner there's a small hole in the arm and one in the awning body frame; align these holes, insert and clip in the included carabiner to lock the awning arms into position.
- **PEG THE BASE INTO POSITION:** using four pegs, peg each corner to form a rectangular awning shape with a square base.
- **CONNECT THE LEDS:** plug the cable from the LED light strip into a USB power source.
- **ZIPPERS:** there are full-height access zippers front and back, allowing you to access the Nudie Boss from outside or through the vehicle. There is an additional small zipper at the top for feeding through a shower head.
- **ATTACH THE ROOF (OPTIONAL):** while the roof isn't required for use, to gain additional privacy flip the roof panel over the top of the Nudie Boss and secure it using the Velcro straps.

Pack up your Nudie Boss

- **REMOVE THE ROOF (IF ATTACHED):** undo the Velcro straps and flip the roof over the top of the awning body while you pack up the rest of the Nudie Boss.
- **UNPLUG THE LEDS:** unplug the LED light strip cable and leave it hanging ready to store at the end of pack-up.
- **REMOVE PEGS:** undo all pegs from around the base.
- **CLOSE THE ARMS:** unclip and remove the carabiner from the rear right corner. Push the front right hinged join in towards the awning body, continuing until the frame forms a straight edge while sticking out to the left. Then grab the left arm and swing it 180° back into the awning body. The canvas should be draped directly below the frame.
- **FLIP THE ROOF OVER:** grab the roof and flip it back over the front of the frame so it hangs in front of the main awning.
- **SECURE THE Awning:** roll the canvas neatly up into position and secure using the three Velcro straps.
- **CLOSE THE PVC BAG:** position the protective bag back over the top of the awning body, insert and store the LED light strip cable, and zip up to cover the awning.
- **KEEP THE AWNING DRY IN STORAGE:** ideally the Nudie Boss should only be packed up when completely dry ... however this isn't always possible when getting off the beaten track. In cases where the awning has to be packed up wet, the awning should be reopened and thoroughly dried as soon as possible.

Nudie Boss care instructions

- **CLEANING:** clean with cold water and a soft bristle brush when required. Do not use soaps or detergents, and avoid exposure to chemicals, fuels and oils.
- **STORAGE:** to ensure the longevity of your Nudie Boss it should always be stored away clean and dry. On occasions where the awning ends up being wet during pack up, it is essential that it is set up and dried as soon as possible. Incorrect storage including while wet will void the warranty.
- **ADVERSE WEATHER:** while the Nudie Boss features pegged tie-down points, in general the awning should only be used in calm conditions. To avoid the chances of personal injury and damage to the vehicle and property, CampBoss recommends the Nudie Boss should not be set up in high winds or stormy conditions. Damage caused by wind or adverse weather will not be covered under warranty.
- **PEGS:** always ensure the Nudie Boss is anchored correctly with the appropriate style of peg (additional types of pegs may need to be purchased separately). It is recommended to check the pegs at regular intervals to maintain the structural integrity of the Nudie Boss.
- **WATER AND UV:** the Nudie Boss is made from 280GSM polyester cotton canvas which is waterproof (rated to 3000mm) and has a UV rating of 50+-. Some water ingress may occur around the zippered sections.

SAFETY WARNINGS

- CampBoss recommends using an experienced and qualified aftermarket 4X4 accessories fitter to mount your Nudie Boss awning to your vehicle. CampBoss doesn't accept any responsibility for the fitment of a Nudie Boss awning to any vehicle, roof rack, or roof tray. Additional hardware may be required for proper fitment to your particular vehicle setup.
- Fasteners and fixing connections should be checked on a regular basis to ensure the Nudie Boss remains securely fastened to the vehicle. These connections should be checked more frequently when travelling across rough and corrugated terrain.
- Keep all flame and heat sources away from the Nudie Boss, including naked flames and campfires.
- If a campfire is nearby keep a constant lookout for airborne burning embers that may come into contact with the awning. Keep a fire extinguisher or water bucket nearby.
- Exercise caution around the pegs and between the zippers to prevent personal injury.
- Ensure children are supervised around the awning at all times to prevent injury, and damage to the awning.

IMPORTANT: DO NOT LEAVE YOUR AWNING UNATTENDED WITHOUT FIRST SECURING IT DOWN USING THE INCLUDED OR APPROPRIATE PEGS.

WINDY CONDITIONS: ALWAYS SECURE DOWN YOUR AWNING IN WINDY CONDITIONS USING THE INCLUDED OR APPROPRIATE PEGS.