

Thank you for your interest in our made to measure curtains & blinds. All our curtains and blinds are carefully made by hand and are designed and made in the United Kingdom.

Please use our measuring guide to easily calculate the sizes required to enter into our system. Once you have measured your windows simply add them to the table below.

Window Name	Width (cm)	Drop (drop)	Style (Curtain or Blind)

# How To Measure For Curtains

Measuring for your made to measure curtains is so easy. All you need are two measurements - the width and the drop. We will calculate the rest.

Please note, to obtain the most accurate measurements, we advise you to use a metal tape measure, since plastic and cloth tape measures are flexible and can stretch or bend which may result in inaccurate measurements and therefore not allowing your curtains to fit as well as they could.

If you require a single curtain panel please follow the same instructions and contact us directly as our made to measure curtains online are sold as pairs.

*Tip: Your sizes should be entered in centimetres. We have a handy Inches to CM converter on each made to measure listing if you need help converting your sizes.*

## Curtain width

### Eyelet Curtains


Simply measure the entire width of your pole between the finials or decorative ends.




### Pencil & Pinch Pleat Curtains

For curtain poles please measure the same way you would for Eyelet Curtains.

If you have a standard curtain track already in place - please measure the full width of the track.

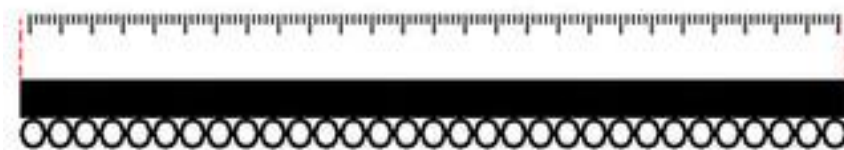

For overlapping tracks, you would measure the full length of the track (A) and the length of the overlap (B) and add these together.

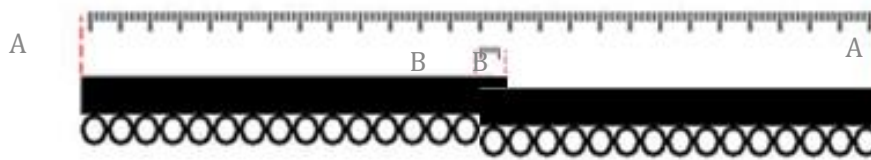

If you do not have a track or pole already in place - please measure the window recess and add 30cm = 12" (thus allowing for overhanging on either side).

Please note with Pinch Pleat curtains the final hook is approximately 10cm from the edge so if you have a curtain track with a mechanism and set hook at the edge you may need to consider extra width to make sure these meet in the middle.

## **Curtain drop**

First decide where you want your finished curtains to sit - for example - the same height as the window sill; or perhaps you would prefer to have them floor length?

We would recommend that you allow a small space at the bottom of your curtains so that they will not fray or get marked from dragging on the floor.

## **Eyelet Heading**

Next, measure from the top of the pole to where you want the curtains to finish.




## **Pencil & Pinch Pleat Heading**

For this style of curtain, when using a track, measure from the top of the track to where you want your curtains to finish.



## **Curtain Drop (using curtain pole rings)**

If you choose to hang your taped curtains on a pole - measure from the bottom of the ornamental ring to wherever you wish your curtains to finish.

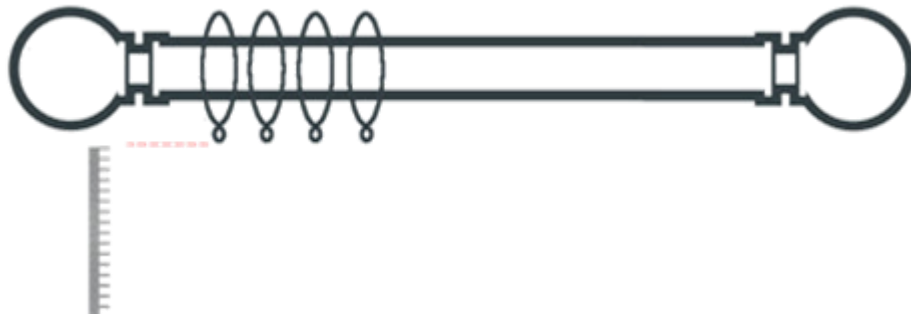

*3" pencil pleat curtains will have 3 levels on the tape that you can hang these from. If you are choosing to hang from one of the lower levels please take this measurement into consideration as all of our curtains are made presuming you are hanging from the top level.*

# How To Measure For Roman Blinds

Firstly decide if you wish your blind to sit Inside or Outside of your window recess.

## Inside Recess Measurement (Width)




We ask you to take 3 different width measurements within your window recess - going right into the corners and taking account of any protruding tiles or window latches / handles. You should send us the **SMALLEST** of the 3 measurements.

## Inside Recess Measurement (Drop)

Again we ask you to take 3 measurements from the top of the recess to the sill and send us a note of the smallest / narrowest one.

## Outside Recess Measurement (also called Exact)

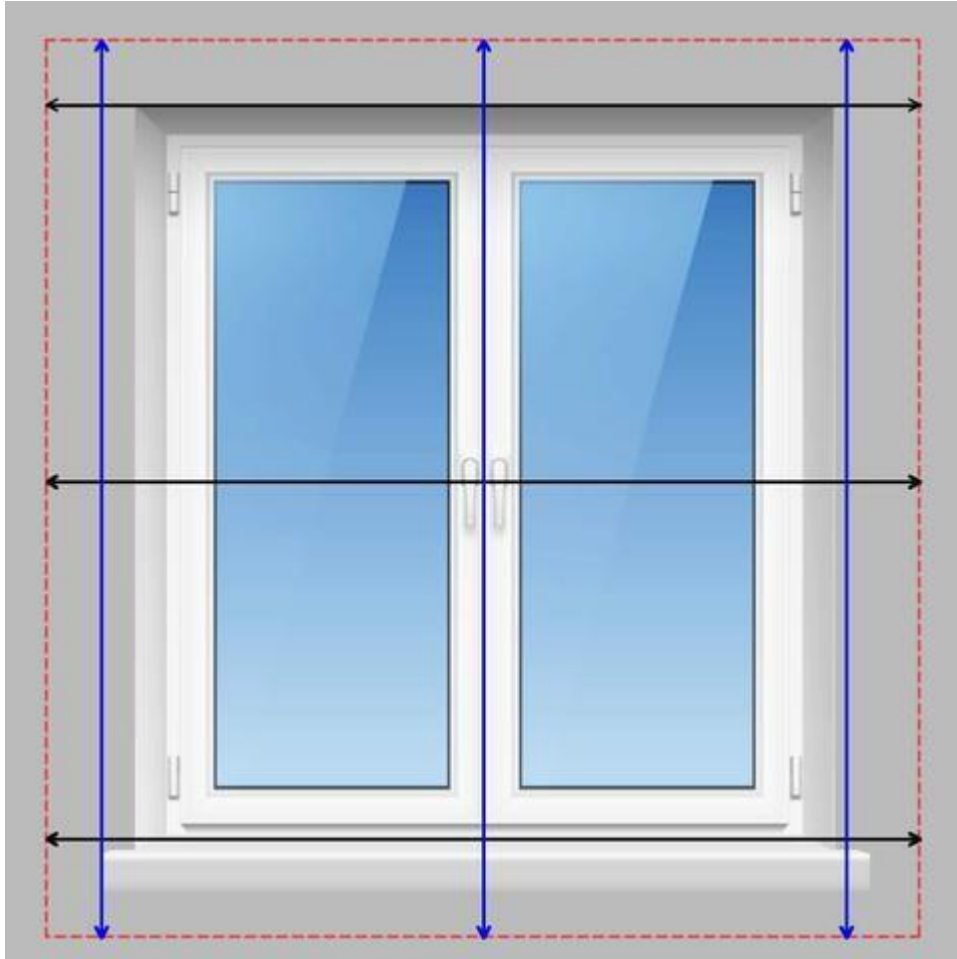

It is a personal preference to choose whether to have blinds inside or outside the recess ( with the exception of windows that open inwards - in this instance blinds would be required to be fitted on the outside of the recess).

Measure the size of the recess then add the extra amounts listed below to ensure full coverage.

To minimize light leakage we recommend the blind overlaps the window by 5cm each side and 7cm at the top. The overlap at the bottom should take into account any obstacles such as a radiator.