

DAKOTA TIN

INSTALLATION NEEDS: Screw Gun, Tape Measure, Level, Chalk Line, Drill

HANDLING: Metal edges are sharp! Cut resistant gloves required.



STORAGE: Avoid moisture and direct sunlight.

INSTALLATION INSTRUCTIONS

1. Remove any shipping wrapping
2. Place screws (roofing screws recommended) every 12-16 inches
3. Be sure to cover top edges with J-track or other border material to prevent injury.

IF CUTTING PANELS TO FIT

- Use tin snips or nibbler to cut small pieces. Use a circular saw with a ferrous metal blade for larger pieces.
- Remove any shavings from panel(s) to prevent damage to other areas.
Be sure not cut panels on top of existing panels.
- Wear cut resistant gloves, hearing and eye protection when using saws to cut metal.
When using a circular saw, always cut from the back side panel to keep metal shavings from marring the finish.

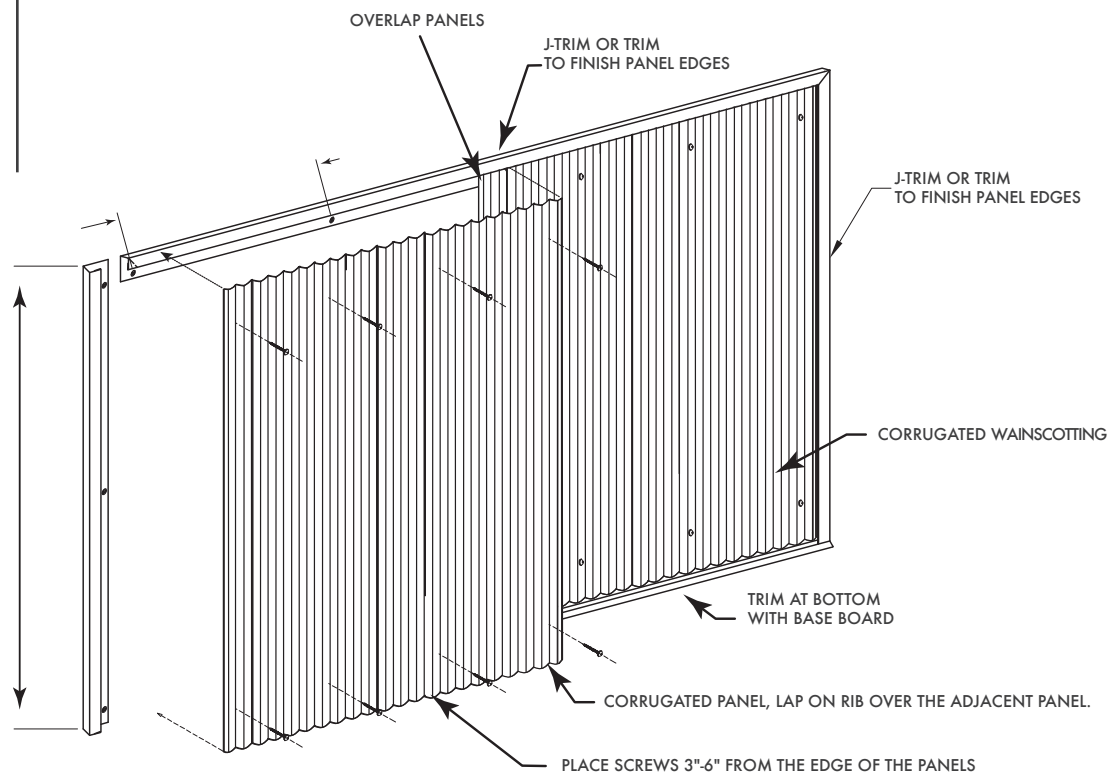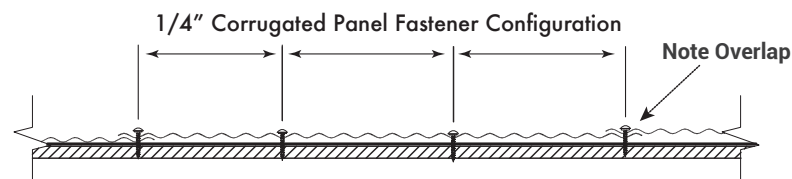

Questions? Visit us online at www.dakotatin.com or call 1-800-670-5798