STEP: 1


Assemble Main Panel

Carefully place Fin 1 and Fin 2 onto the Main Piece

(Match the number on the Fin to the number on the Main Piece)

Secure with Black Bolt and Black Nut

Attach and secure Mounting Bracket FD-9 to the Main Panel with provided M6 25mm Bolt, Finishing Washer, Washer, and Nut

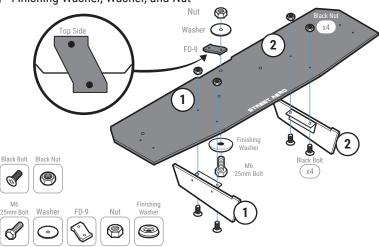


STEP: 2

Remove Push Pins

Remove the two OEM Bolts located under the Bumper

NOTE: (Mark where the OEM Bolts are located this is where the Main Panel will be mounted)

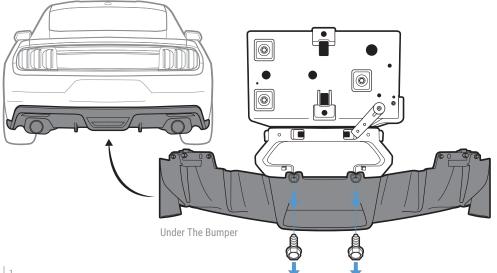

STEP: 3

Main Panel OEM Mounting


Place Nut into Nut Assist FD-8

NOTE: Push the nut all the way into the socket to prevent it from falling out

Slide Nut Assist FD-8 into designated mounting socket (shown in the diagram below)

Mount the Main Panel by securing Mounting Bracket FD-9 (from **STEP: 1**) to the designated mounting socket with M6 25mm Bolt and Finishing Washer

Use M6 25mm Bolt and Finishing Washer for OEM mounting holes (from STEP: 2)

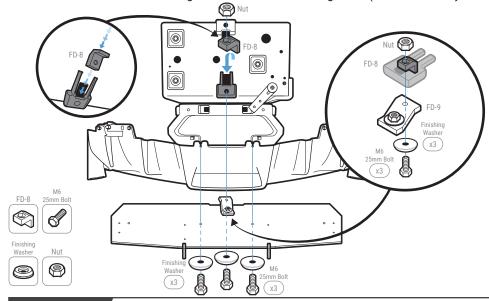


STEP: 4

Continue Mounting Main Panel

Align the Main Panel to the bumper and Pre-Drill where the mounting holes are located

Secure the Main Panel to the bumper with provided M6 25mm Bolt, Finishing Washer, Washer, and Nut

NOTE: Use the sides near the wheels or reach under the Diffuser to place the Washer and Nut inside the bumper

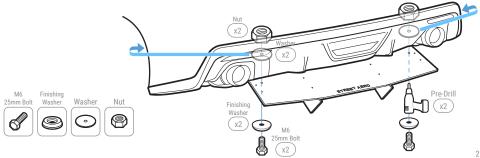

Attach and secure Mounting Bracket FD-44 and FD-45 to the Side Panel with M6 16mm Bolt, Finishing Washer, and Nut

NOTE: Push the bolt all the way into the socket to prevent it from falling out

Attach the Side Panel to the Main Panel with Black Bolt and Black Nut

NOTE: Do Not tighten Black Bolt on the Side Panel to the Main Panel

(you will need to remove the Side Panel to pre-drill)

Mark and pre-drill where Mounting Bracket FD-44 and FD-45 will be mounted to the bumper


NOTE: Use the hole on top of Mounting Bracket to mark the drill location

(Side Panel may need to be removed before pre-drilling)

Install the Side Panel to the Main Panel and Bumper by securing Mounting Bracket FD-44 and FD-45 with provided M6 25mm Bolt, Washer, and Nut


NOTE: Use the sides near the wheels to secure the Washer and Nut inside the bumper

Repeat to install Passenger Side Panel to the Main Panel and Bumper

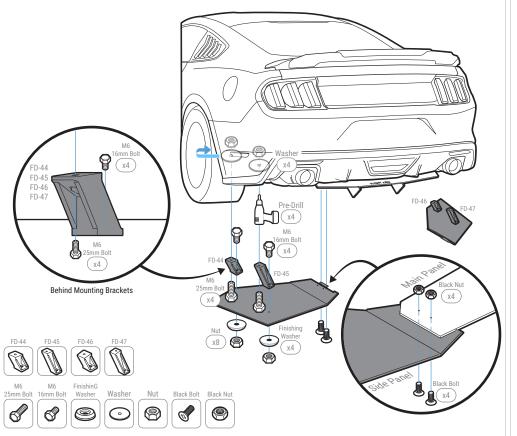

A STREET AERO

INSTALLATION GUIDE 2015-2017 Ford Mustang GT ACM Rear Diffuser

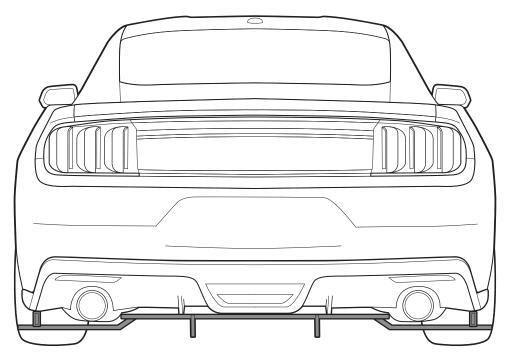

s-rda-frd-02-e1 www.streetaero.com