
## STEP: 1

Assemble Main Panel

# Carefully place Fin 1 and 2 onto the Main Panel

(Match the number on the Fin to the number on the Main Panel)

### Secure with Small Bolt and Small Nut

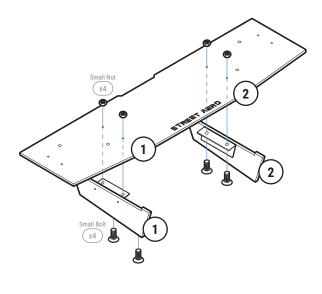


STEP: 2

Remove OEM Push Pins

# Remove the two OEM Push Pins located under the bumper

NOTE: (Mark where the OEM Push Pins are located this is where the Main Panel will be mounted)

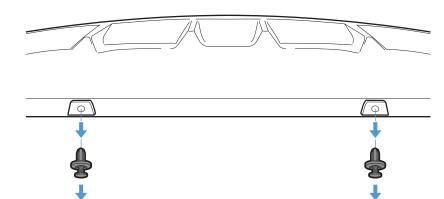


STEP: 3

Mount Main Panel

Mount the assembled Main Panel to the bumper by securing M6 25mm Bolt, Finishing Washer, Washer, and Nut to the OEM mounting hole on STEP: 2 NOTE: Reach under the bumper to place the Washer and Nut inside the bumper

Continue by securing Mounting Bracket KA-1 to the Main Panel and bumper with M6 55mm Bolt, Finshing Washer, Washer, and Nut

NOTE: Reach under the bumper to place the Washer and Nut inside the bumper

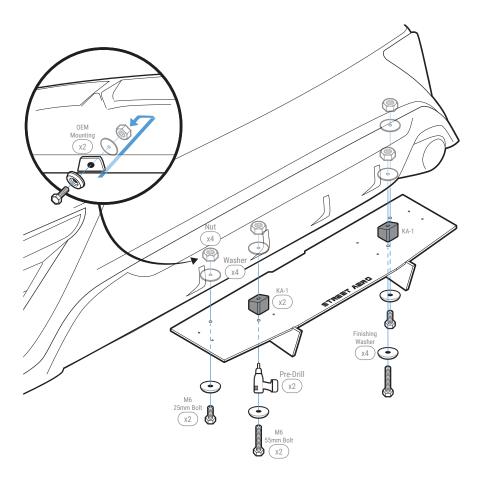











### STEP: 4

Mount Side Panel

Remove the four OEM Push Pins located under the bumper on the Driver Side and Passenger Side

NOTE: (Mark where the OEM Push Pins are located this is where the Side Panel will be mounted)


Mount Mounting Bracket KA-2 to the bumper by using the OEM Mounting location and secure with M6 25mm Bolt, Washer, and Nut

NOTE: Reach under or to the side of the bumper to place the Washer and Nut inside the bumper

Attach the Side Panel to the Main Panel with Small Bolt and Small Nut


Secure Mounting Bracket KA-2 to the Side Panel with M6 16mm Bolt, Finishing Washer, and Nut

Mount the Side Panel to the bumper by securing Mounting Bracket KA-4 to the OEM Mounting Location with M6 40mm Bolt, Finishing Washer, Washer, and Nut NOTE: Reach under or to the side of the bumper to place the Washer and Nut inside the bumper

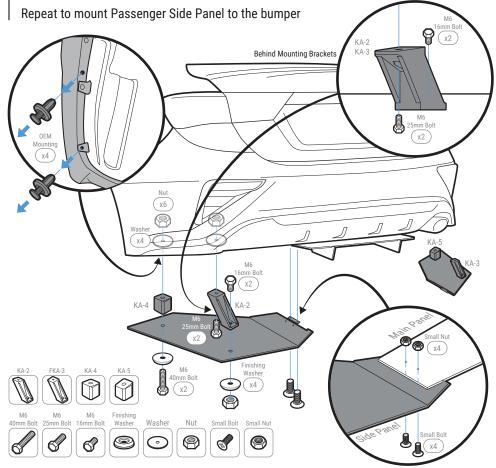



# INSTALLATION GUIDE 2020-2022 Kia Forte GT-Line (Single Exhaust) AGM Rear Diffuser

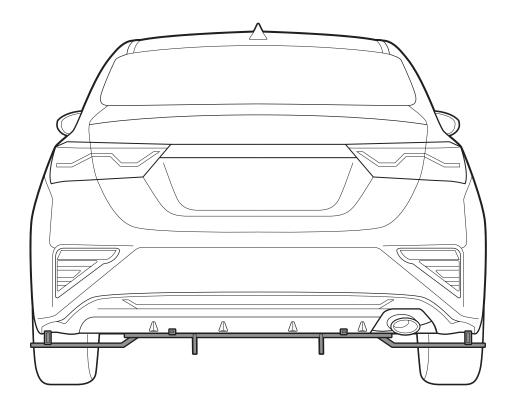

s-rda-kia-03-e1