




THE DECORATORS SUPPLY CORPORATION

PHONE: 800/792-2093 | FACSIMILE: 773/847-6357 | www.DECORATORSSUPPLY.com

MANUFACTURERS OF CUSTOM BUILT MANTELS, CAPITALS & BRACKETS, CAST PLASTER & COMPOSITON ORNAMENTS

TERMINATING TRACERY CEILING UNITS INTO WALLS USING TRIM #1591C

For use with: 2964 | 2964-30 | TRA100 | TRA101

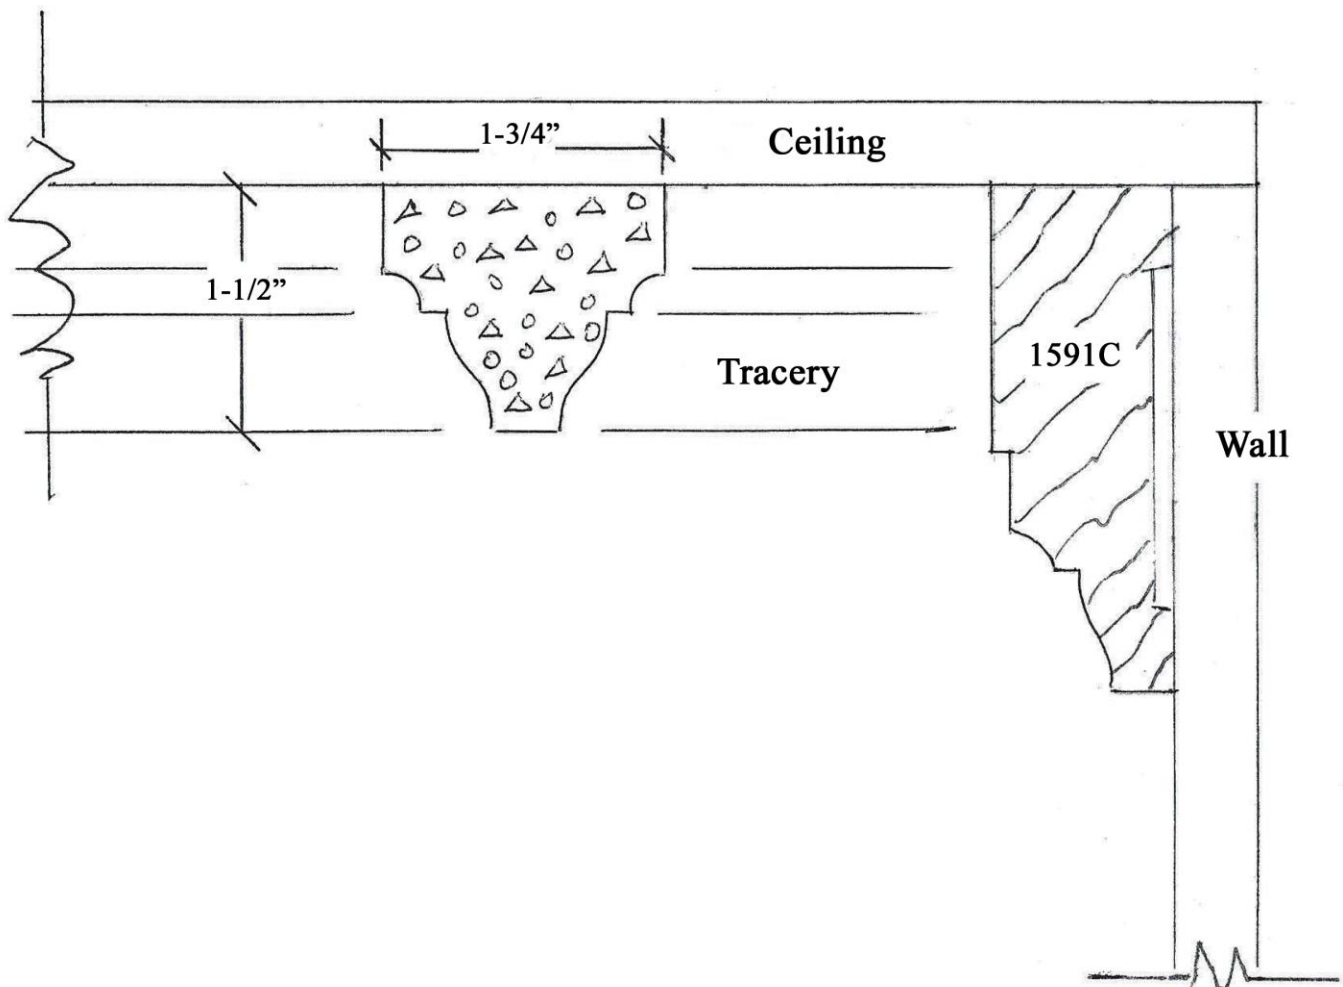

This sketch illustrates how custom wood trim, #1591C, becomes the perfect solution for terminating our tracery patterns into the walls of a room. Of course, this works only in rooms that don't have crown mouldings already in them.

