




# THE DECORATORS SUPPLY CORPORATION

PHONE: 800/792-2093 | FACSIMILE: 773/847-6357 | [www.DECORATORSSUPPLY.com](http://www.DECORATORSSUPPLY.com)

MANUFACTURERS OF CUSTOM BUILT MANTELS, CAPITALS & BRACKETS, CAST PLASTER & COMPOSITON ORNAMENTS

## TERMINATING TRACERY CEILING UNITS W/ CROWN MOULDINGS ADDED

*For use with: 2964 | 2964-30 | TRA100 | TRA101*

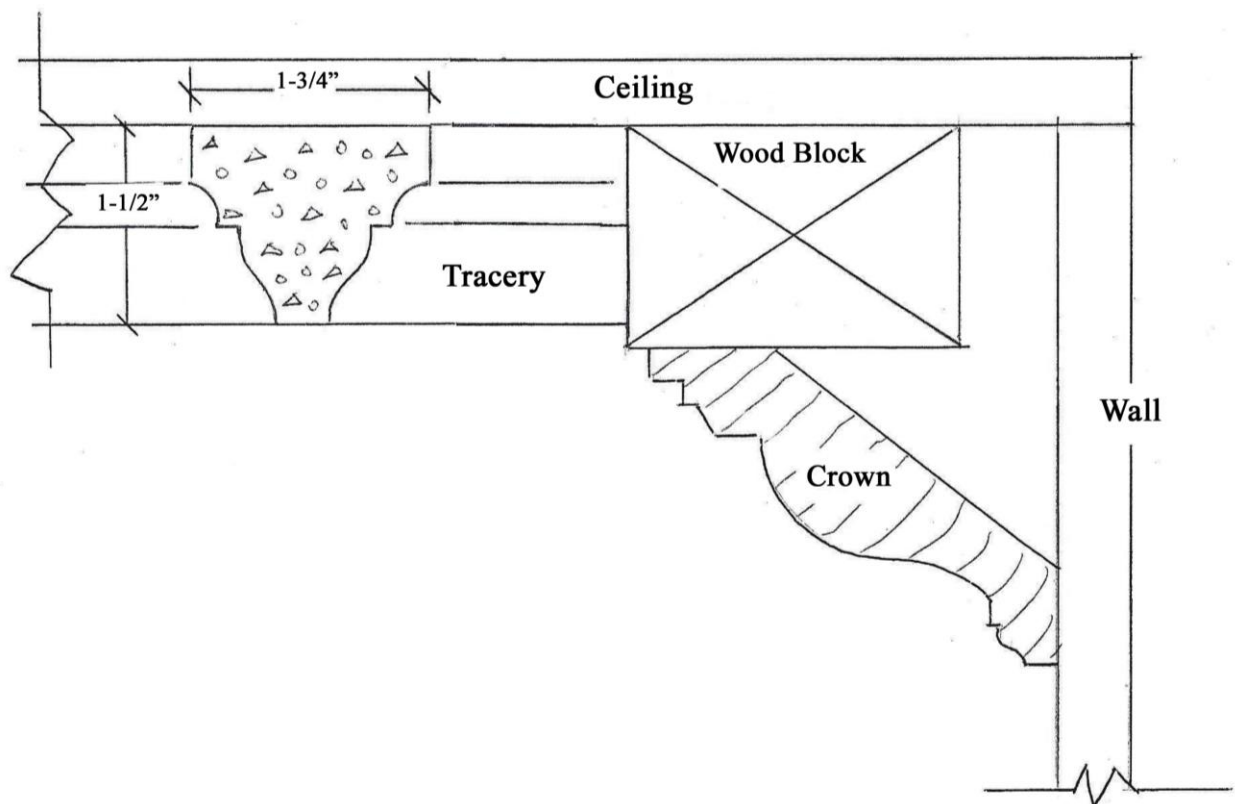

This sketch illustrates how a wooden block can be placed on the ceiling to serve as a soffit to receive the tracery units as well as the upper part of the crown moulding. The result will be a very finished look. We recommend a block that's 1-5/8" x 1-5/8" for these tracery patterns. For our Old English and Italian coffered ceiling panels, a block of the appropriate depth would be used as a soffit. Of course, this works only in rooms that don't have crown mouldings already in them.

