

Installation Guide for 14-21 Toyota Tundra LUXX-Series LED Tail lights

ALPHAREX specializes in designing and producing superior and uniquely stylish aftermarket automotive performance lighting with unrival innovative technology. The following installation guide we take you through the installation of your new **ALPHAREX TAIL LIGHTS** for your 14-21 Toyota Tundra step by step.



Table of Contents



PART I REMOVE TAIL LIGHTS

- **INSTALLATION TOOLS**
- **STEP 1.** Remove tail lights screws
- **STEP 2.** Unplug the sockets and remove tail lights


PART II INSTALL ALPHAREX TAIL LIGHTS

- **STEP 1.** Plug the sockets and install tail lights
- **STEP 2.** Complete Installation

PART I REMOVE TAIL LIGHTS

INSTALLATION TOOLS

PREPARE THESE TOOLS FOR INSTALLATION



Torx
Screwdriver



1/4 Ratchet



1/4 Extension

T30
Star Torx



Socket

NOTE: Whenever using a power tool, please make sure do not overtighten the screws.

Whenever working on your vehicle always make sure your vehicle is parked with the ignition off.



STEP 1. REMOVE TAIL LIGHTS SCREWS

Open the trunk gate and start by removing the tail light's screws.



Use Torx screwdriver to remove the top and bottom T30 screws from each side of the tail lights.



Gently remove the tail lights by pulling outward.




STEP 2. UNPLUG THE SOCKETS AND REMOVE TAIL LIGHTS

To remove the tail light, unplug the light sockets completely.





Repeat the same steps for the other side of the tail light for the removal.


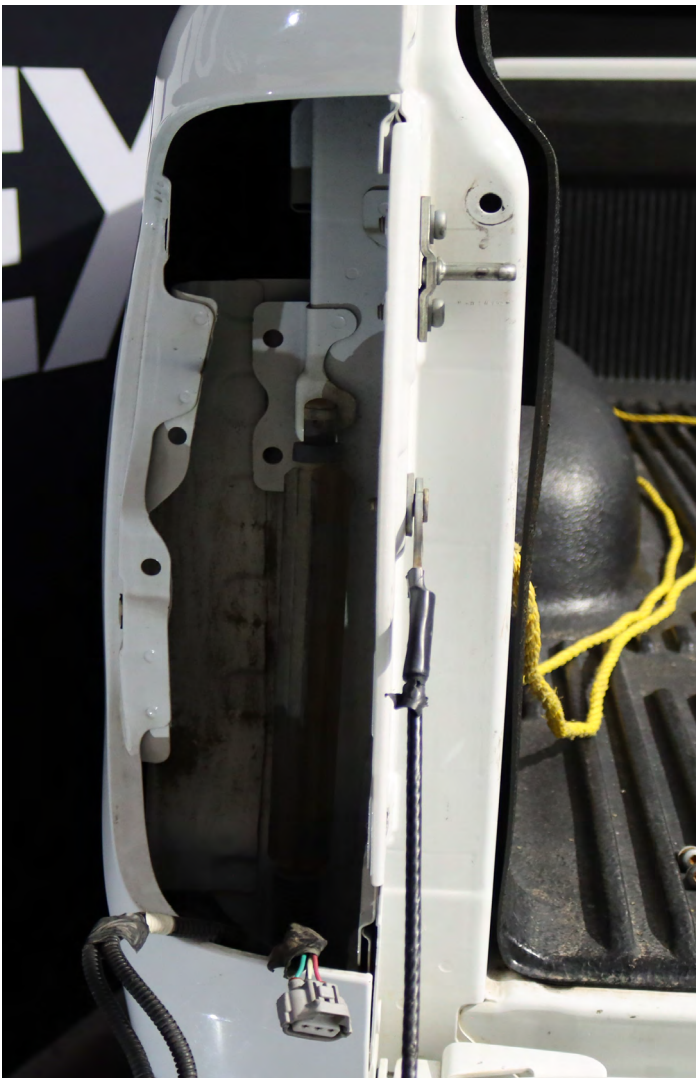


PART II INSTALL ALPHAREX TAIL LIGHTS




STEP 1. PLUG THE SOCKETS AND INSTALL TAIL LIGHTS

First, plug the REVERSE light bulb socket directly to the bottom of the new ALPHAREX tail light.

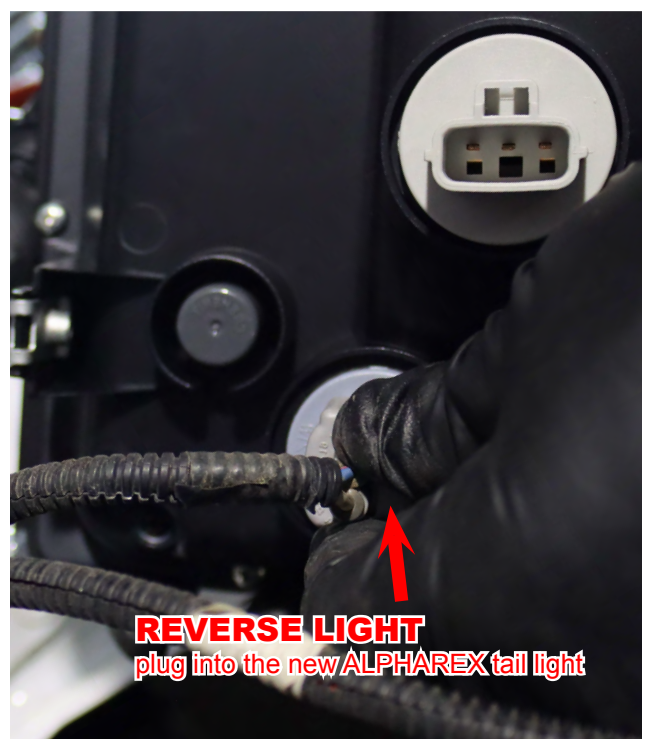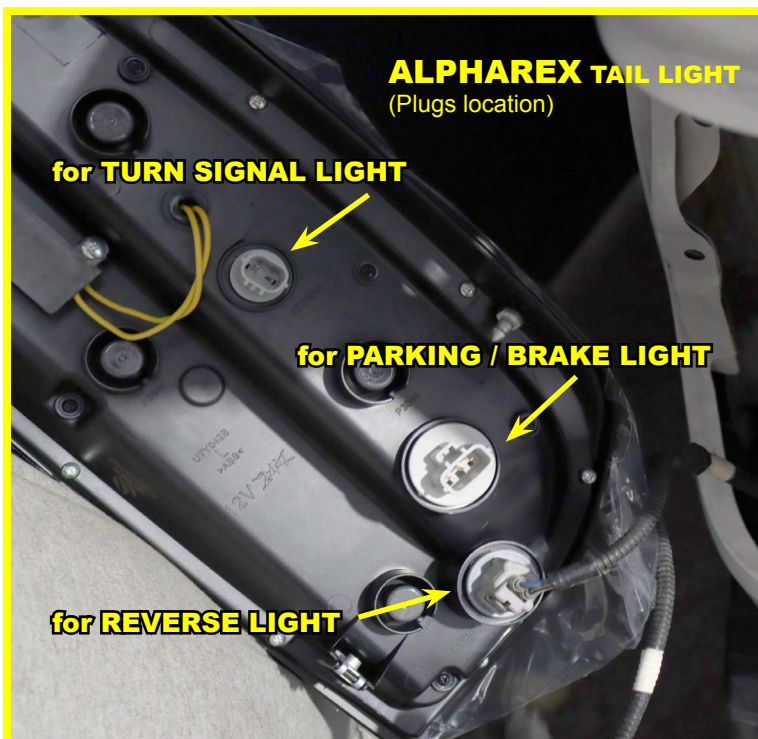

Second, plug the PARKING / BRAKE light socket directly into the new tail lights. Then, plug the TURN SIGNAL light socket at the top.

Please follow the same steps for the other side of the tail light.

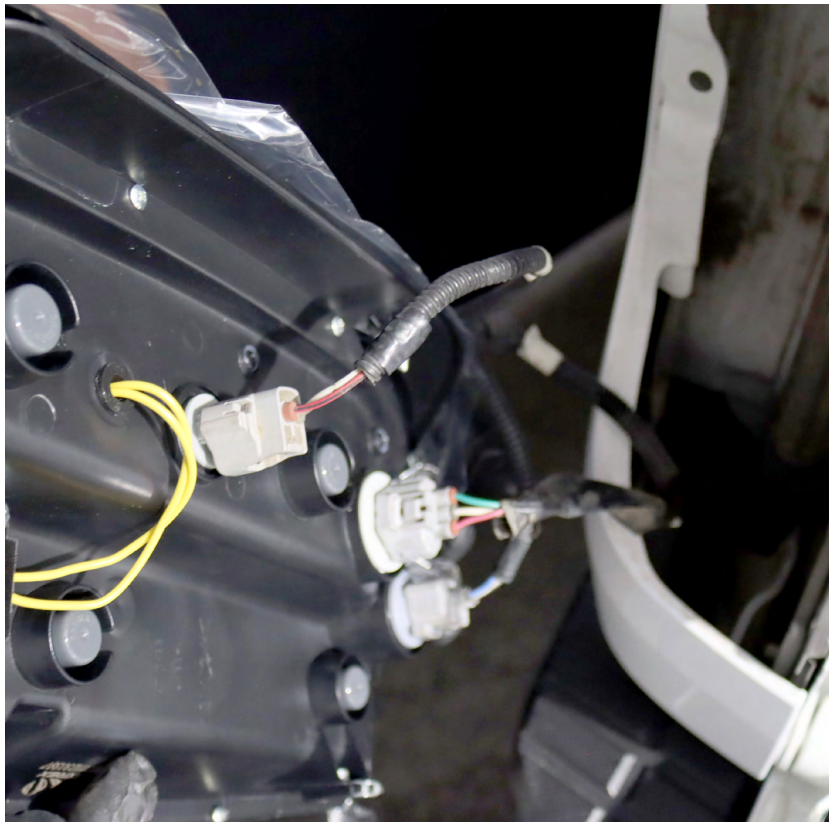

After the sockets are plugged into the new ALPHAREX tail lights, reverse the removal process to install the new tail lights into the vehicle.



Use Torx screwdriver to tighten the 2 X T30 screws for each side.



STEP 2. COMPLETE INSTALLATION

Congratulations! You have completed the installation for ALPHAREX 14-21 Toyota Tundra LUXX-Series LED tail lights.

