




SPRINTER VAN 144 HIGH TOP ROOF RACK

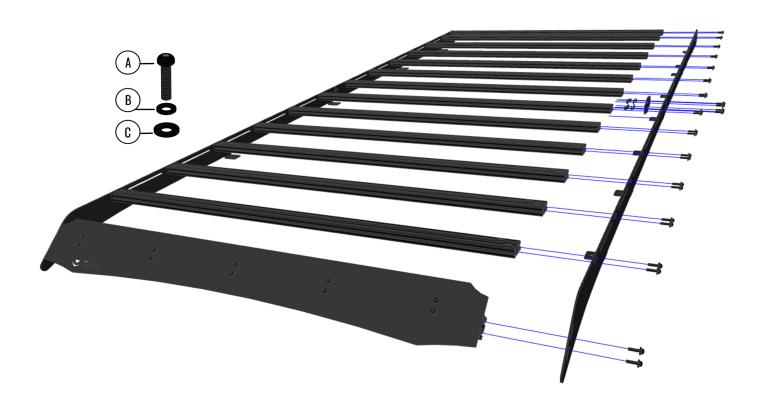


CROSSBAR HARDWARE DIAGRAM



PART	DESCRIPTIONS	QUANTITY
A	1/4" - 20 x 1" TORX MACHINE SCREW	56
В	1/4" SPLIT LOCK WASHER 56	
C	1/4" FLAT WASHER 56	
	54" CROSS BAR - BLACK 1 X 2 13	
	54" CROSS BAR - CLEAR 1 X 2	1




CONNECTOR BRACKET HARDWARE DIAGRAM

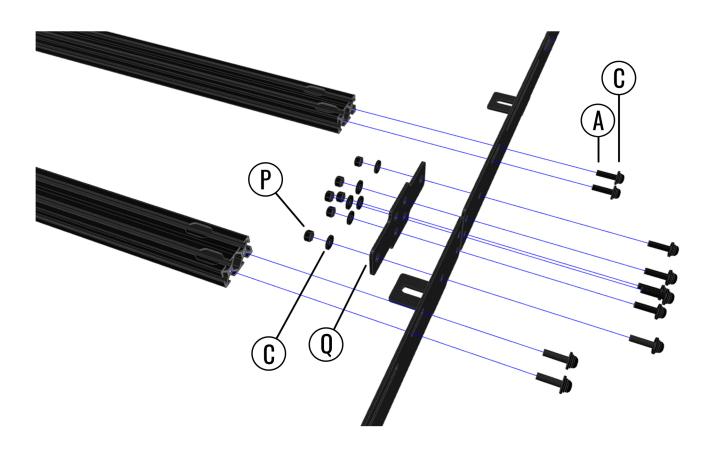

PART	DESCRIPTIONS	QUANTITY
A	1/4" - 20 x 1" TORX MACHINE SCREW	12
C	1/4" FLAT WASHER	12
P	1/4" NLYLON LOCK NUT	12
Q	CONNECTOR PLATE	2




WIND DEFLECTOR HARDWARE DIAGRAM

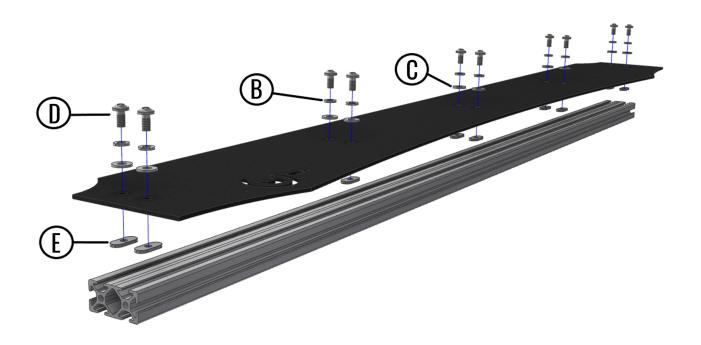

PART	DESCRIPTION	QUANTITY
В	1/4" LOCK WASHER	10
С	1/4" FLAT WASHER	10
D	1/4" - 20 x 1/2" PAN HEAD SCREW	10
E	1/4" - 20, 10 SERIES T-NUT	10



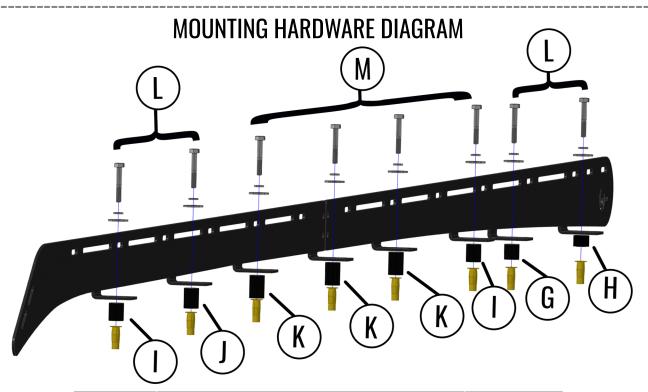

PART	DESCRIPTION	QUANTITY
F	1/4" - 20 PLUS NUT	16
G	3/4" LONG SPACER 2	
Н	5/8" LONG SPACER 2	
I	7/8" LONG SPACER	4
J	1" LONG SPACER	2
K	1-1/8" LONG SPACER	6
L	1/4" - 20 x 1-3/4" HEX CAP SCREW	8
М	1/4" - 20 x 2-1/2" HEX CAP SCREW	8
N	1/4" x 1" FENDER WASHER	16
0	1/4" LOCK WASHER	16



WIND DEFLECTOR ATTACHMENT



STEPS

- 1. INSTALL THE WIND DEFLECTOR HARDWARE AS SHOWN IN THE DIAGRAM ON PAGE 3. THREAD THE SCREWS JUST BARELY INTO THE T-NUTS TO BEGIN WITH.
- 2. LAY THE WIND DEFLECTOR ON A FLAT SURFACE IN THE ORIENTATION SHOWN ABOVE.
- 3. FROM ONE END START SLIDING THE EXTRUSION BAR SO THAT THE T-NUTS FEED INTO THE CHANNEL.
- 4. ONCE EVERYTHING IS LINED UP PROPERLY THEY WILL SLIDE RIGHT TOGETHER.
- 5. NOW WITH ALL THE T-NUTS FED INTO THE CHANNEL AND THE EXTRUSION BAR AND WIND DEFLECTOR LINED UP FLUSH AT BOTH ENDS, TURN THE ASSEMBLY OVER AND TIGHTEN THE SCREWS UNTIL THE LOCK WASHERS ARE FULLY COMPRESSED.
- 6. THE WIND DEFLECTOR ASSEMBLY CAN NOW BE BOLTED TO THE ROOF RACK.



ROOF RACK INSTALLATION INSTRUCTIONS

*If you do not feel comfortable with the process outlined in this manual please seek professional installation assistance

*Please read all instruction prior to beginning installation. Various steps may relate directly to previous or future parts of the installation process. Prinsu Design Studio is not liable for damages caused to your vehicle during the installation process



Drill out the small plastic plugs in the roof gutter in the locations that will be under the mounting feet then pop away the remaining portion with a flat head screw driver



With the plugs removed you can now insert the plus nuts into the roof



Compress the plusnut by using a 1/2" wrench to hold the coupler & tighten with an 7/16" wrench



Apply more silcone to insure a water tight seal and place the spacers on the roof



Attach your roof rack and before your 1st drive double check all fasteners to insure they are fully secured ...



... and periodically check them for tighness thereafter to ensure full functionallity




WARRANTY

PRINSU DESIGN STUDIO will warranty all PRINSU DESIGN STUDIO manufactured parts for a LIFETIME of use. This limited Lifetime Warranty is effective for as long as the original retail purchaser owns the product. This warranty terminates when the original retail purchaser sells or otherwise transfers the product to any other person. Each manufactured product must be installed following PRINSU DESIGN STUDIO'S recommended fitment and installation procedures. Any customization or modification to the original product design, functionality, or use, either by said customer or by PRINSU DESIGN STUDIO voids all warranty eligibility. It is the sole discretion of CBI Offroad to determine warranty eligibility. Subject to the limitations and exclusions described in this warranty, PRINSU DESIGN STUDIO will remedy defects in materials or workmanship by repairing or replacing, at its option, a defective product without charge for parts. In addition, PRINSU DESIGN STUDIO may elect, at its option, not to repair or replace a defective product but rather issue to a purchaser a refund equal to the purchase price paid for the product or a credit to be used toward the purchase of a new PRINSU DESIGN STUDIO product.No warranty is given for defects caused by normal wear and tear, cosmetic rust scratches, accidents, unlawful vehicle operation, products used for racing or competition, or modification of, or any types of repair of, a PRINSU DESIGN STUDIO manufactured product. The PRINSU DESIGN STUDIO Warranty does not include the powder coated finish. No warranty is given for defects resulting from conditions beyond PRINSU DESIGN STUDIO'S control including, but not limited to, misuse, neglect, overloading, improperly maintained or failure to assemble, mount or use the product in accordance with PRINSU DESIGN STUDIO'S written instructions or guidelines included with the product or implied use made available to the purchaser.

DISCLAIMER OF LIABILITY REPAIR OR REPLACEMENT OF A DEFECTIVE PRODUCT OR THE ISSUANCE OF A REFUND OR CREDIT (AS DETERMINED BY PRINSU DESIGN STUDIO) IS A PURCHASER'S EXCLUSIVE REMEDY UNDER THIS WARRANTY. DAMAGE TO A PURCHASER'S VEHICLE, CARGO AND/OR TO ANY OTHER PERSON OR PROPERTY IS EXCLUDED. THIS WARRANTY IS EXPRESSLY MADE IN LIEU OF ANY AND ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. PRINSU DESIGN STUDIO'S SOLE LIABILITY TO ANY PURCHASER IS LIMITED TO THE REMEDY SET FORTH ABOVE. IN NO EVENT WILL PRINSU DESIGN STUDIO BE LIABLE FOR ANY LOST PROFITS, LOST SALES, OR FOR ANY CONSEQUENTIAL, DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR PUNITIVE DAMAGES OR FOR ANY OTHER DAMAGES OF ANY KIND OR NATURE



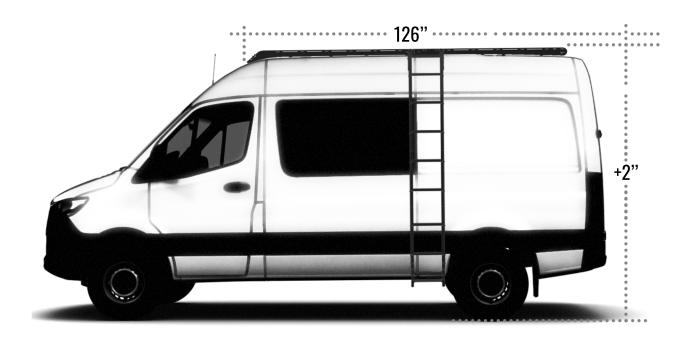

FEATURE	MEASUREMENT/QUANTITY
OVERALL LENGTH	132"
SIDE RAIL HEIGHT*	2.50"
HEIGHT ADDED **	2.50"
CLEARANCE BETWEEN ROOF AND RACK	1.50"
WEIGHT	~80 LBS
54" CROSS BARS - BLACK - (1X2)	13
54" CROSS BAR - CLEAR - (1X2)	1

*AS MEASURED AT THE CENTER OF THE SIDE RAIL

**AS MEASURE FROM THE CENTER POINT OF THE ROOF