

GOBI TOYOTA FJ FARRING INSTALLATION

Step 1



Prior to install make certain all farring brackets are positioned so that the bend of the brackets are set equal to the top of the farring as shown to the left

farring bracket bend set to top of farring

Step 2




Place your farring onto the vehicle roof top then centered onto the Gobi roof rack light bar as shown to the left

Roof rack light bar

Farring centered to roof rack

Step 3

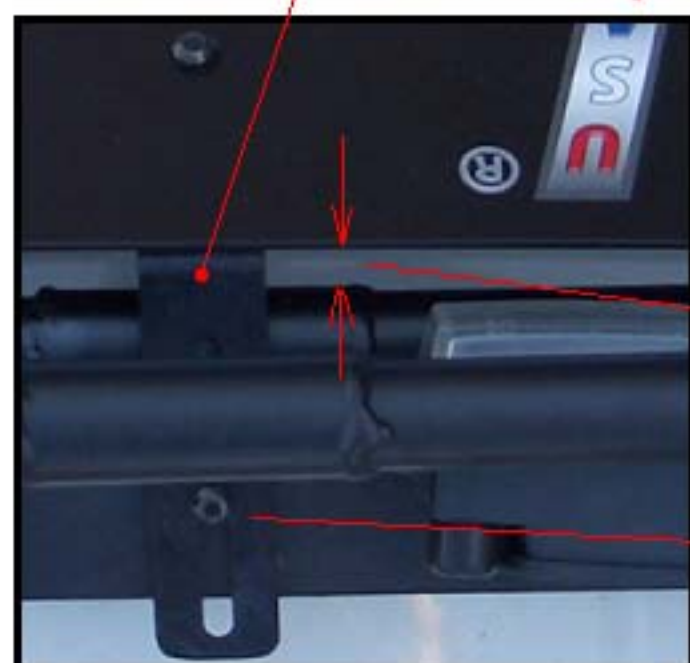

Press down firmly while tightening

Provide approximately 1 to 2 inches of space between the lower front roof rack tubing and the farring and tighten down the farring bracket bolt. Press down firmly on the center bracket while tightening the bolt as this will provide a good tight seal between the farring and roof top

1 to 2 inch gap

Farring bracket bolt

GOBI TOYOTA FJ FARRING INSTALLATION

Step 4

Apply pressure down while tightening



Pull both sides of the farring back against or close to roof rack tubing one side at a time. While holding the farring close to the roof rack press down firmly on the farring bracket while tightening. You may need assistance during this procedure.

Pull each side of the farring towards the roof rack and tighten

Step 5



When completed the full length of the farring must be in contact with the vehicle roof top. If necessary you can bend a farring bracket or pull down on the rubber molding to achieve the final result.



Full contact with roof