



Installation Instructions
SRC OFF ROAD ROOF RACK
 87-95 Wrangler, 97-06 Wrangler, 04-06 Unlimited
 Part #'s 76711, 76713, 76715)

NOTE: Please read this information entirely before installing. To obtain correct installation, we recommend you follow these step-by-step instructions carefully. Please take care when installing this product to protect the finish and your investment.

INCLUDED COMPONENTS

Qty	Description	Qty	Description
2	Front Rack Uprights	4	3/8 x 1" Bolts (Rear Upright)
4	Front Upright Gaskets	8	1 1/4" Fender Washers (Rear Upright)
2	Front Overhead Bars (straight)	4	3/8" Lock Nuts (Rear Upright)
2	Rear Overhead Bars (curved)	6	Crossbar Knobs (76715 Contains 8)
2	Rear Uprights	6	Knob Rubber Plugs (76715 comes with 8)
3	Cross Bars	6	1/4" x 3 3/8" Knob Bolts (76715 comes/w 8)
6	Cross Bars Gaskets	1	Allen Key
8	1/4/20 Allen Head Bolts (front Uprights)	2	1" Body Lift Spacer (optional)
8	3/4" Flat Washers (front Uprights)	2	2" Body Lift Spacer (optional)
6	1/4/20 x 2.5" Allen Head Bolts (Overhead Bars)	2	3" Body Lift Spacer (optional)
6	3/8" Lock Washers (Overhead Bars)		
12	1/2" Flat Washers (Overhead Bars)		
6	1/4"x20 Lock Nuts (Overhead Bars)		



For Technical Support/Warranty Information please call 310-762-9944

Smittybilt, 400 W. Artesia Blvd, Compton, CA 90220



Installation Instructions

SRC OFF ROAD ROOF RACK




87-95 Wrangler, 97-06 Wrangler, 04-06 Unlimited
Part #'s 76711, 76713, 76715)

We recommend that two people install the SRC Roof Rack. The following instructions show a TJ, but each step can be used on the Unlimited as well.


IMPORTANT- You are going to have to remove the bolts from your door hinge. **DO NOT OPEN THE DOOR WHILE THE BOLTS ARE REMOVED! YOUR DOOR WILL GO OUT OF ALIGNMENT.**

Front Upright INSTALATION INSTRUCTIONS

1. Place the adhesive backed gaskets on the front uprights to protect the vehicle from scratches.
2. Remove factory windshield hinge and lower door hinge bolts (only work on one door at a time) It is important that you can enter the Jeep through the opposite door to tighten the lower door hinge without the door moving. (Figure 1).
3. When you remove the lower door hinge a backing plate (figure 2) will come loose. Enter the Jeep from the opposite side to access the plate. You will need it in step 4.

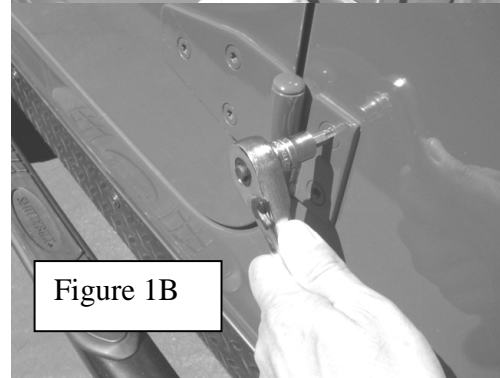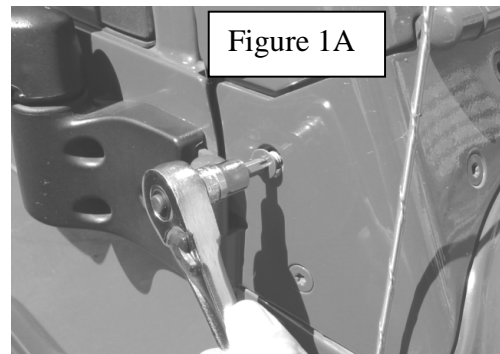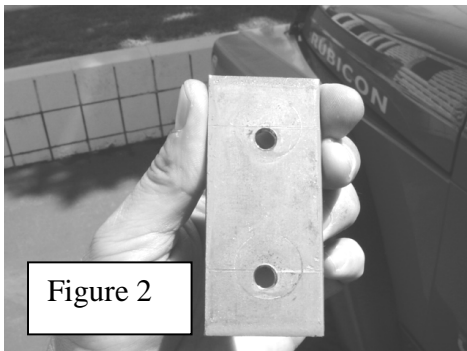

4. Using the supplied front upright 1/4x20 allen bolts and a 3/4" flat washer, attach the front upright to the Jeep. You will need a partner to place the factory backing plate (Figure 2) for the lower door hinge in location for you to attach the lower door bolts. (Do not open the door you are working on! Enter from the opposite side). Tighten the bolts for the upright and repeat the process for the opposite side. (Figure 3)

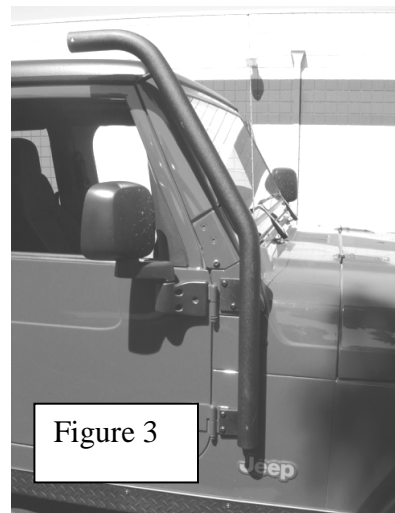

For Technical Support/Warranty Information please call 310-762-9944

Smittybilt, 400 W. Artesia Blvd, Compton, CA 90220



Installation Instructions
SRC OFF ROAD ROOF RACK
87-95 Wrangler, 97-06 Wrangler, 04-06 Unlimited
Part #'s 76711, 76713, 76715)

5. Remove the factory rear bumper and bolts. (If re-installing factory bumper proceed to step 16 before moving on.)
6. Insert the bolts with flat washers through the rear bumper. Do not install the nuts at this time. Just use the bolts to hold the bumper in place.
7. Insert the front overhead bar (straight bar) into the front upright. Insert a 1/4/20 x 2.5" Allen Head Bolt with a flat washer, through the bar and the upright. Then place another flat washer, a lock washer and the locking nut on the bar. **DO NOT TIGHTEN**. Have an assistant hold the bar in place for steps 8&9 (important or you vehicle may get scratched) (Figure 4)
8. Repeat step 5 for the rear overhead bar (curved bar). Do not tighten. (Figure 5)
9. Insert the rear upright into the rear overhead bar. Then position the rear upright on the backside of the bumper bolts. Install a flat washer and locking nut on the rear upright bolts. **DO NOT TIGHTEN**. Install the 1/4/20 x 2.5" Allen Head Bolt with a flat washer, through the upright as in steps 7 & 8. Do not tighten (Figure 6)
10. (Option – Body Lift Spacers) – If your vehicle has a body lift use the supplied spacers to separate the lower upright from the rear overhead bar. 1", 2" and 3" spacers are provided.
11. Repeat steps 7-9 for the opposite side.

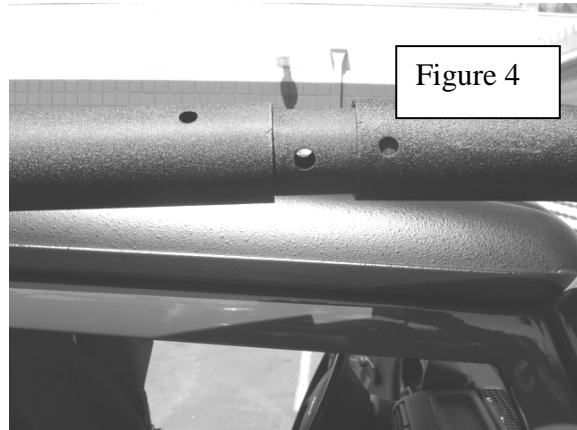


Figure 4

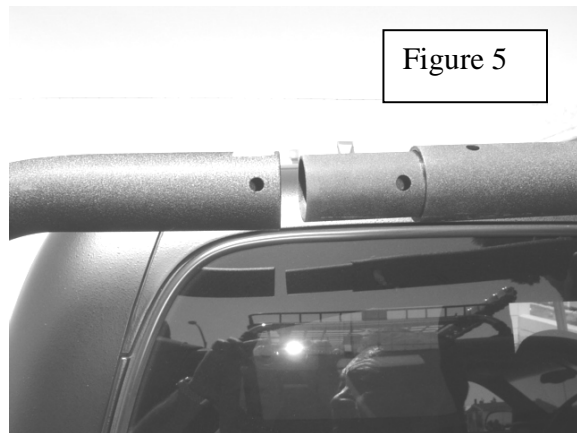


Figure 5

Figure 6 – Uprights installed but not tightened – Important, do not tighten until the cross bars are installed.



For Technical Support/Warranty



Installation Instructions
SRC OFF ROAD ROOF RACK
87-95 Wrangler, 97-06 Wrangler, 04-06 Unlimited
Part #'s 76711, 76713, 76715)

12. Locate the front cross bar. The front crossbar is shorter than the middle and rear crossbars. Install the foam gasket to the crossbar ends.

13. Place the front crossbar on the upright. Insert the 1/4" x 3 3/8" Knob Bolt through the bottom of upright and through the cross bar. Tighten the bolt with the plastic crossbar knob and allen key supplied. (Figure 7) Repeat on the opposite side. It may be necessary for an assistant to put pressure on the uprights to get them in the proper location for the cross bars to attach. (Figure 8)

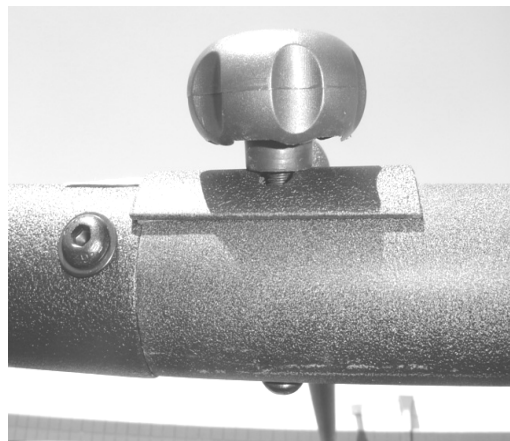


Figure 7

14. Repeat the crossbar installation procedure for the middle and rear crossbars.

15. After all of the crossbars have been attached, center the rack on the vehicle and tighten all of the bolts. (Double check to make sure all hardware is tight)

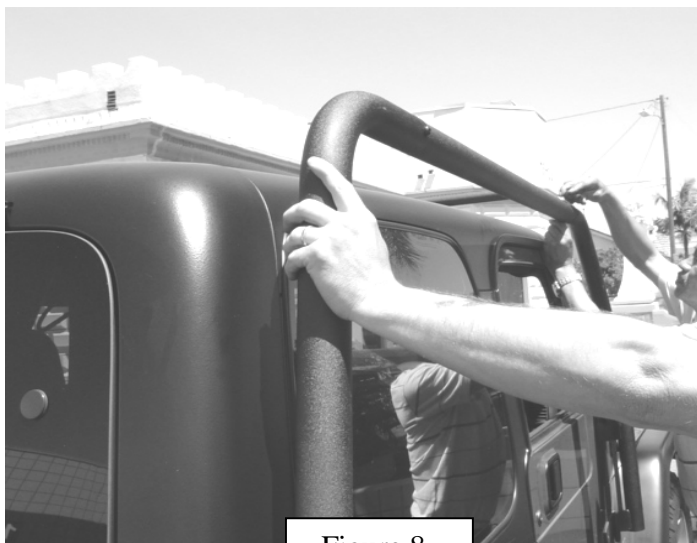


Figure 8

For Technical Support/Warranty Information please call 310-762-9944

Smittybilt, 400 W. Artesia Blvd, Compton, CA 90220



Installation Instructions
SRC OFF ROAD ROOF RACK
87-95 Wrangler, 97-06 Wrangler, 04-06 Unlimited
Part #'s 76711, 76713, 76715)

16. If re-using the factory rear bumper, due to the size of the bolts on the factory bumper you may be required to open up the slots on the rear lower uprights slightly. (Fig 9) You will need to remove the plastic end caps as well and you will not be able to re-mount them.

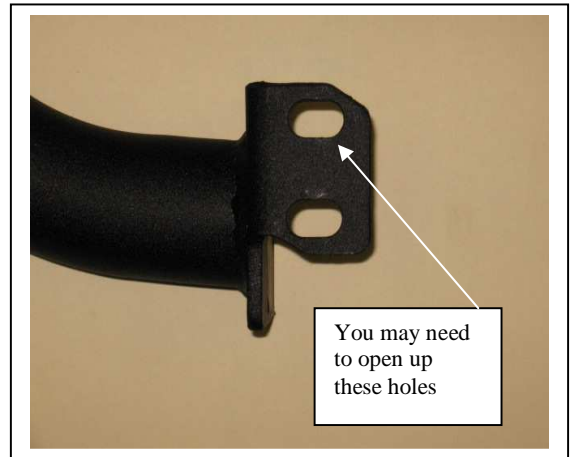


Fig 9

17. Installation is now complete. **Note: After driving the vehicle with the rack a few days it is recommended to check all of the bolts for proper tightness. If loose, retighten.**



For Technical Support/Warranty Information please call 310-762-9944

Smittybilt, 400 W. Artesia Blvd, Compton, CA 90220



Installation Instructions
SRC OFF ROAD ROOF RACK
87-95 Wrangler, 97-06 Wrangler, 04-06 Unlimited
Part #'s 76711, 76713, 76715)

NOTE: To protect your investment, wax this product after installing. Regular waxing is recommended. Do not use any type of polish/wax that contains abrasives that could damage the finish.

LIMITED WARRANTY

Smittybilt (The Company) warrants to the original purchaser of this product that should the product or any part thereof, under normal use and conditions, be proven defective in material or workmanship within 5 years from the original date of purchase, such defect(s) will be repaired or replaced (At the Company's option) without charge for parts or labor.

To obtain repair or replacement within the terms of the warranty, the product is to be delivered with proof of warranty coverage (e.g. dated bill of sale, receipt), specification of defect, freight pre-paid with Returns Good Authorization Number from Smittybilt to place of purchase. Items returned to Smittybilt without a Returns Authorization Number will be refused and returned to sender at the sender's expense.

This warranty does not apply to any product or part thereof which, in the opinion of the Company, has suffered or been damaged through alteration, improper installation, mishandling, misuse, neglect accident or acts of nature. **THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY THE PURCHASER FOR THIS PRODUCT.**

This warranty is in lieu of all expressed warranties and liabilities. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY HEREUNDER INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY MUST BE BROUGHT WITHIN A PERIOD OF 90 DAYS FROM DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESSED OR IMPLIED, WHATSOEVER. No person or representative is authorized to assume for the company any liability other than expressed herein in connection with the sale of this product.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage, therefore above limitations may not apply to you. This warranty gives the purchaser specific legal rights. The purchaser may have additional rights, which vary from state to state.

For Technical Support/Warranty Information please call 310-762-9944

Smittybilt, 400 W. Artesia Blvd, Compton, CA 90220



Installation Instructions

SRC OFF ROAD ROOF RACK

*87-95 Wrangler, 97-06 Wrangler, 04-06 Unlimited
Part #'s 76711, 76713, 76715)*

For Technical Support/Warranty Information please call 310-762-9944

Smittybilt, 400 W. Artesia Blvd, Compton, CA 90220



Installation Instructions

SRC OFF ROAD ROOF RACK

*87-95 Wrangler, 97-06 Wrangler, 04-06 Unlimited
Part #'s 76711, 76713, 76715)*

For Technical Support/Warranty Information please call 310-762-9944

Smittybilt, 400 W. Artesia Blvd, Compton, CA 90220



Installation Instructions

SRC OFF ROAD ROOF RACK

*87-95 Wrangler, 97-06 Wrangler, 04-06 Unlimited
Part #'s 76711, 76713, 76715)*

For Technical Support/Warranty Information please call 310-762-9944

Smittybilt, 400 W. Artesia Blvd, Compton, CA 90220



Installation Instructions

SRC OFF ROAD ROOF RACK

*87-95 Wrangler, 97-06 Wrangler, 04-06 Unlimited
Part #'s 76711, 76713, 76715)*

For Technical Support/Warranty Information please call 310-762-9944

Smittybilt, 400 W. Artesia Blvd, Compton, CA 90220