




CM05 Stem Mount

Installation Instructions

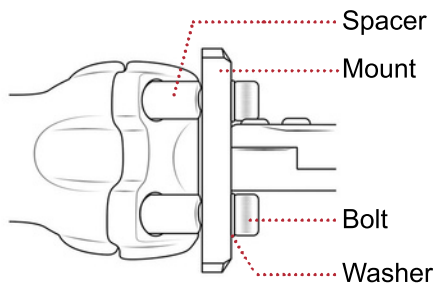


Install Stack Order

The KOM Cycling Stem Mount is an adjustable mount that attaches directly to your stem - fully replacing your bottom two stem bolts with supplied new M5 bolts.


1 Loosen/Remove Stem Bolts

Loosen the top two stem bolts while fully removing your bottom two stem bolts.

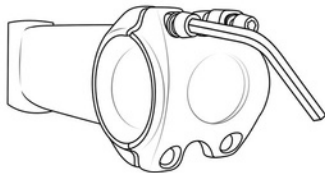


2 Determine Spacer Requirements

With the provided spacers, determine the spacer combination that best fits your stem plate to ensure the base of the stem mount DOES NOT come in contact with the stem face plate.

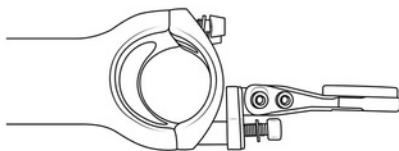


3 Install New Bolts

Alternating equally between all four bolts, tighten down stem bolts, so the spacing of the stem plate is even on top and bottom.

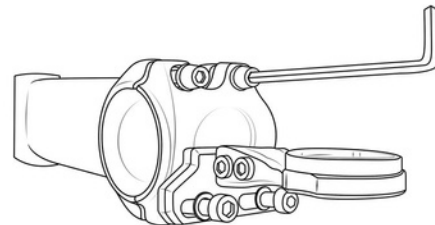


4 Tighten All Four Stem Bolts

Tighten all four stem bolts to the correct torque setting provided by the stem manufacturer.

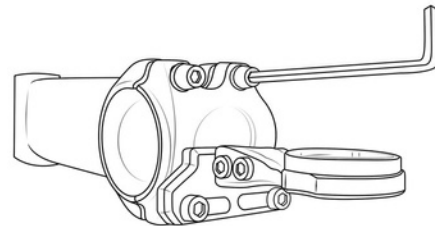

5 Adjust Vertical Angle

Loosen the rear adjustment screw to set your preferred vertical angle.

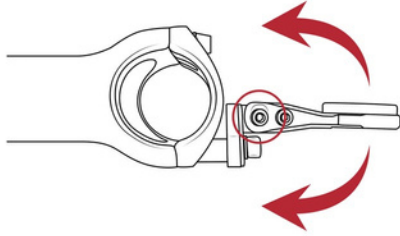

Please read these instructions and follow them for correct use. Failure to follow the warnings and instructions could result in damage to product not covered under warranty, damage to bicycle; or cause an accident resulting in injury or death. Since specific tools and experience are necessary for proper installation, it is recommended that the product be installed by a qualified bicycle technician. KOM Cycling LLC assumes no responsibility for damages or injury related to improperly installed components.

Warranty Registration



Questions?

Contact support@komcycling.com

OTHER KOM CYCLING QUICK RELEASE PRODUCTS



CM06 MOUNT



TG03 GOPRO ADAPTER