
Royal Bath & Marble


your source for luxury

Installation Manual **Petra**

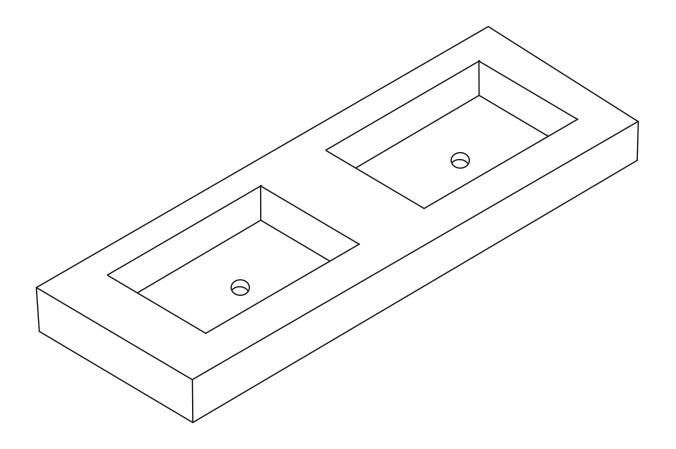



Montreal – New York info@royalbathandmarble.com Royalbathandmarble.com 1 800 413 5130

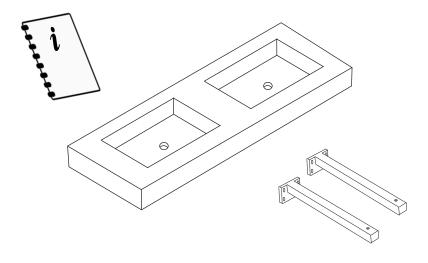


*No of units included according to washbasin's lengh.


From 27 $\frac{9}{16}$ " to 47 $\frac{1}{4}$ " - > 2 Units

From $55\frac{1}{8}$ " - \rightarrow 3 units.

NECESSARY TOOLS

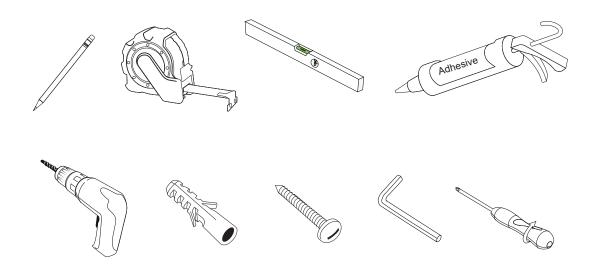


GUIDE TO INSTALL

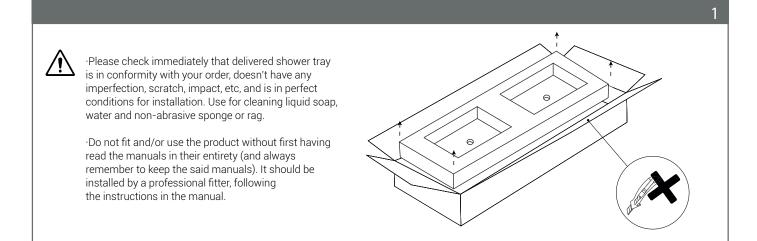









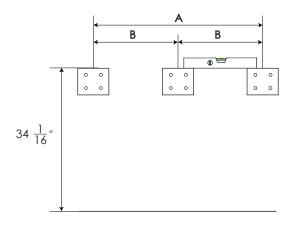


Washbasin Lengh

Lengn	A and B
27 9 "	A: 22 7 16"
31 1 "	A: 24 $\frac{4}{10}$ "
39 3 "	A: 29 4 "
47 1/4"	A: 33 4 "
55 1 "	B: 24 5 "

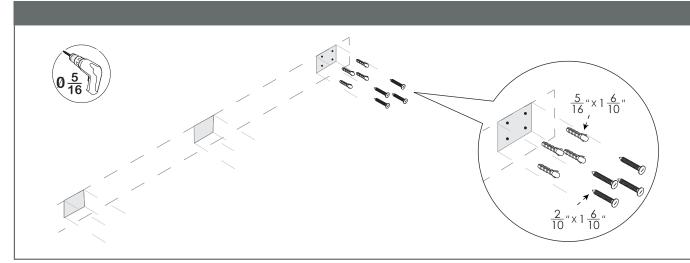

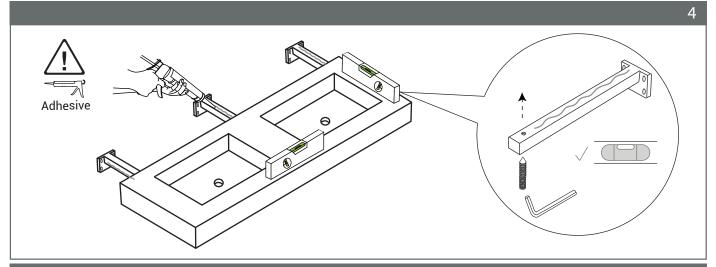

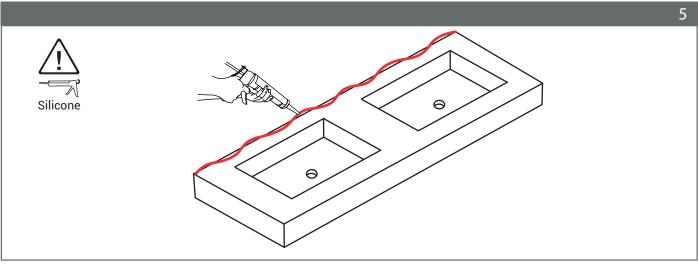

CLEANING INSTRUCTIONS

Once the product has been installed, to eliminate any cement glue residue or mortar residue that have remained in the same, use descaling for joints or cement removers. Avoid rubbing directly on the surface to avoid scratching.

For the routine cleaning, use water, liquid cleaners and soft cloths or non-abrasive sponges. Never use a scourer as they can damage the worktops surface. Don't mix different products in cleaning.

Periodically, to remove any traces of lime that may remain, use a domestic anti-lime as follows:

- 1- Apply the anti-lime with a damp cloth on the entire surface of the surface.
- 2- Let the product act for 15 minutes, after this time, rinse with water.

Avoid contact with nail polish, nail polish remover, solvents, etc. The logo can be damaged in the cleaning process, cleaned gently.