

13. Remove the headlight position bolts located on each side of the radiator support.
14. Unmount the washer fluid filler tube and hood latch cable from the driver side bracket.
15. Remove both headlight brackets.
16. Disconnect the headlight harness from both headlights.
17. Carefully remove both headlights from the vehicle.
18. Transfer the two mounting clips from each of the headlights to the new ones.
19. Mount the new headlights and follow instructions in reverse for reinstallation.

13.



14.




15.



16.



17.

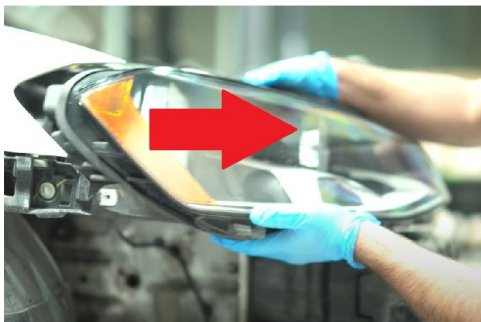

18.



BMP-HLMK7-XX  
BMP-HLMK75-XX

Rev. 1.00



## BMP Tuning MK7 Headlights Installation Guide

Tools Needed:  
T25 Torx  
T30 Torx





1. Disconnect the battery and remove the grille by unscrewing the two screws shown.
2. Remove the two screws located on the grille mounting area of the bumper cover.
3. Remove screws shown and unmount the undercarriage splash guard.
4. Remove the wheel well cover screws on both the driver and passenger side.
5. Carefully dislodge the bumper cover from the mounting brackets on both sides.
6. Disconnect the fog light plugs for both the driver and passenger side fog lights.

7. Carefully dislodge the remaining bumper cover tabs located on the mounting area.
8. Remove the bumper cover and set it aside on a soft surface.
9. Remove the headlight bracket bolts on both the driver and passenger side.
10. Remove the headlight bolts located underneath the headlight brackets on each side.
11. Remove the headlight bolts located behind the headlights on each side.
12. Remove the headlight bolts located on the bumper mounting bracket on each side.

