




TLCM-C-1

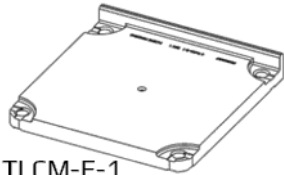


TLCM-E-1

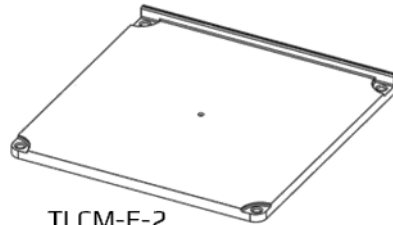


TLCM-E-2

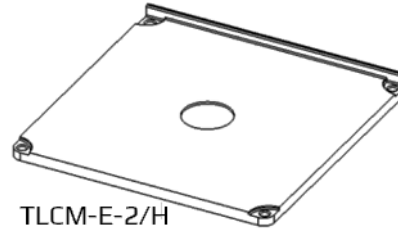


TLCM-E-2/H

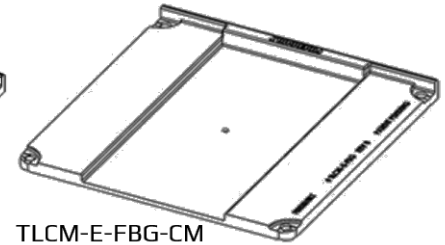

TLCM-E-FBG-CM

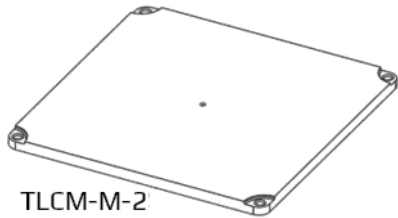

TLCM-M-2

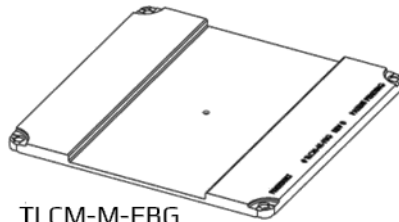


TLCM-M-FBG




P-760CUP5




TLCM-P-2
"2-PINS"

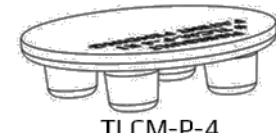

TLCM-P-4
"4-PINS"




658/621-BLK

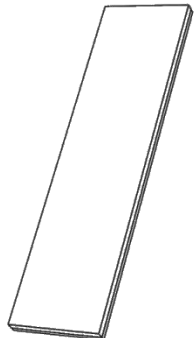


385/40-4

Fiberbuilt Grass
Hitting Panel

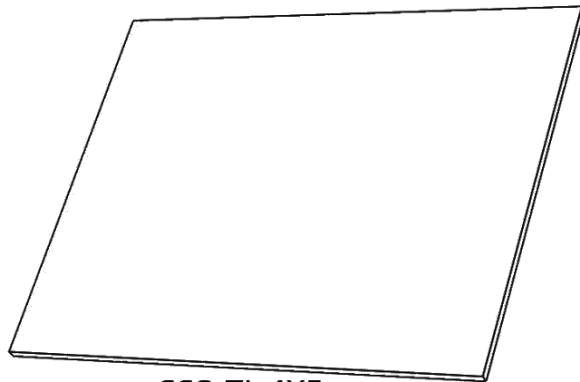


660-TL 4X5

Stance Turf

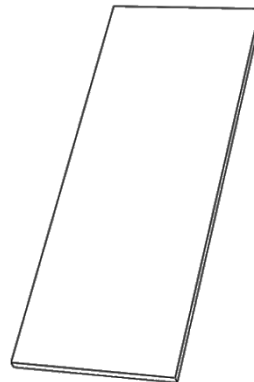

660-TL 1.5X4

Spacer Turf

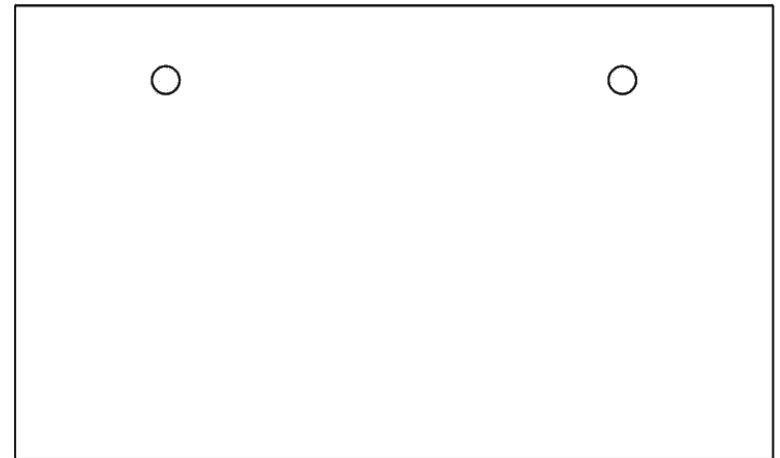

760-TL 6X10-13 DH








1

Check your shipment for accuracy. You should have received all of the following pieces.

ITEM NO.	PART NUMBER	QTY.
1	TLCM-C-1	4
2	TLCM-E-1	16
3	TLCM-E-2	4
4	TLCM-E-2/H	2
5	TLCM-M-2	10
6	TLCM-M-FBG	2
7	TLCM-E-FBG-CM	2
8	TLCM-P-4	20
9	TLCM-P-2	38
10	P-760CUPS	2
11	385/40-4	2
12	660-TL 1.5 X 4	2
13	660-TL 4 X 5	1
14	760-TL 6X10-13-DH	1
15	658/621-BLK	2


2

Lay down the rubber as shown here.

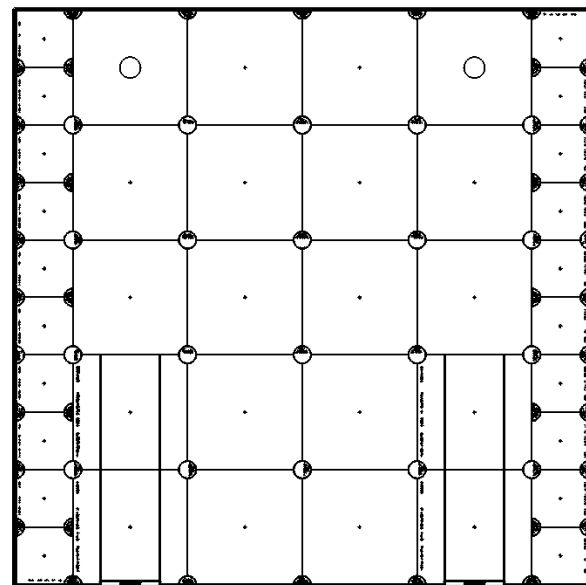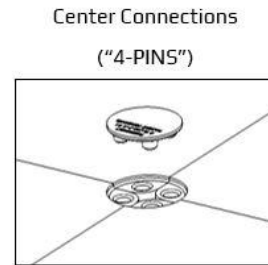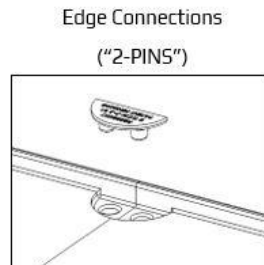



3

Insert the putting cups (P-760CUPS).

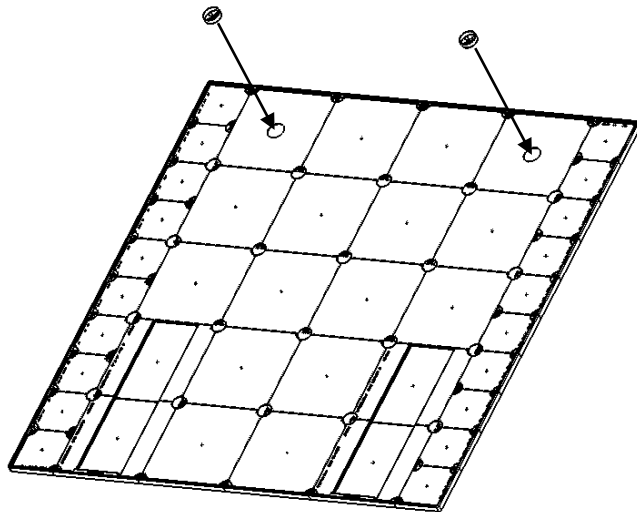

4


Insert tees into the Fiberbuilt Grass Hitting Panel (385/40-4) from underneath before laying it down.

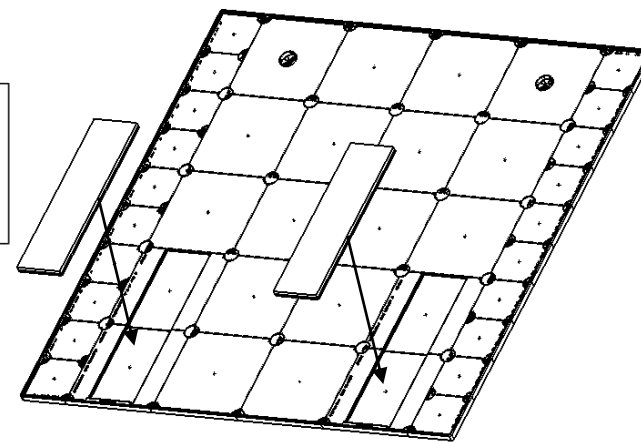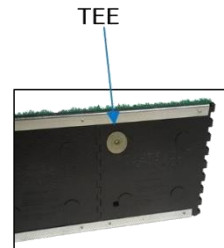




5

Lay down putting turf (760-TL 6X10-13 DH).

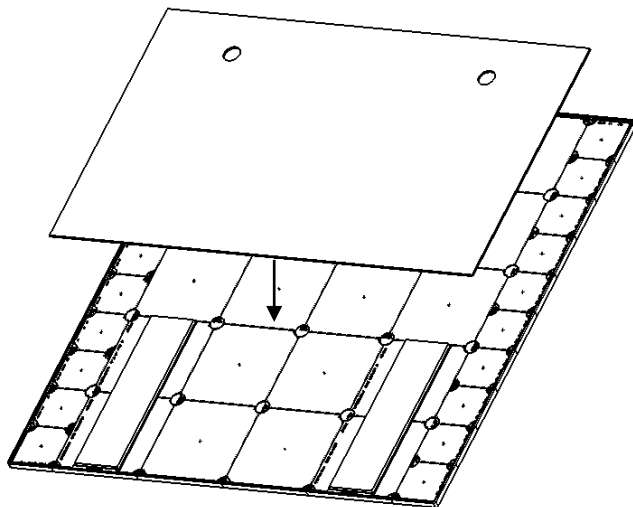

6

Lay down stance turf (660-TL 4X5) and spacer turf (660-TL 1.5X4).

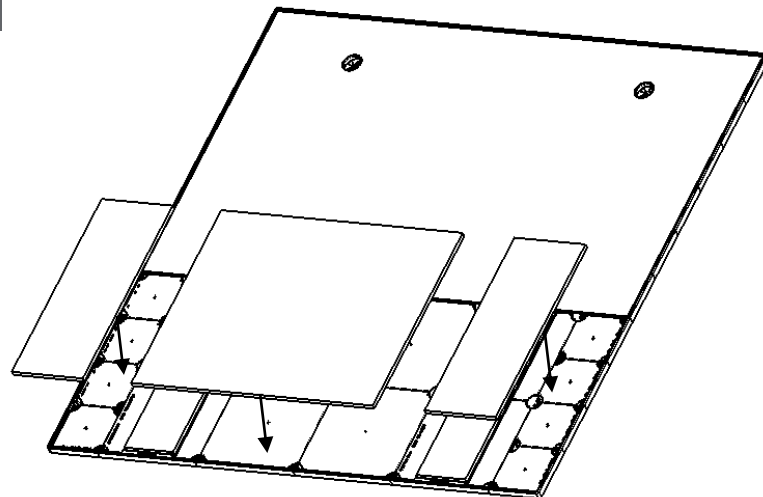

7

Finished product.

