




TLCM-C-1

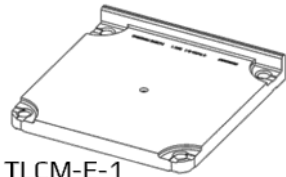


TLCM-E-1

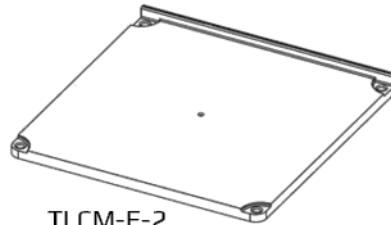


TLCM-E-2

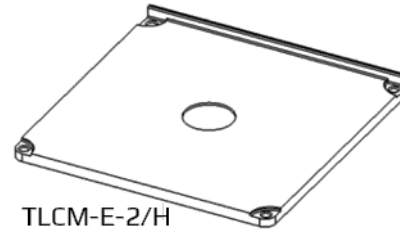


TLCM-E-2/H

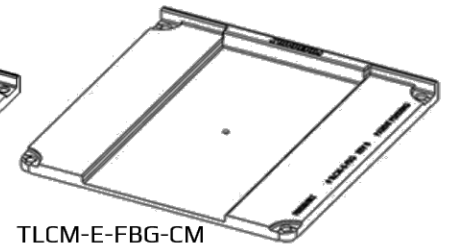

TLCM-E-FBG-CM

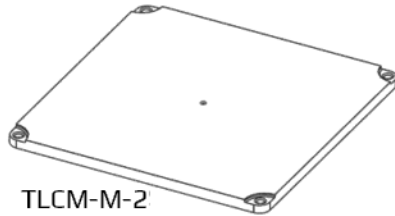

TLCM-M-2

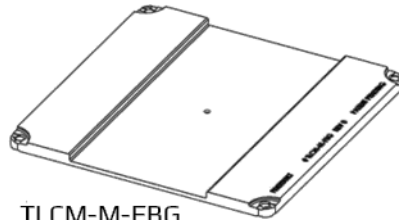


TLCM-M-FBG




TLCM-P-4
"4-PINS"




TLCM-P-2
"2-PINS"

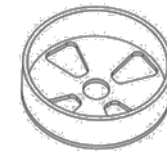

P-760CUPS




658/621-BLK

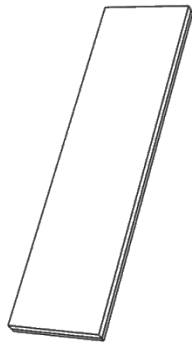


385/40-4

Fiberbuilt Grass
Hitting Panel

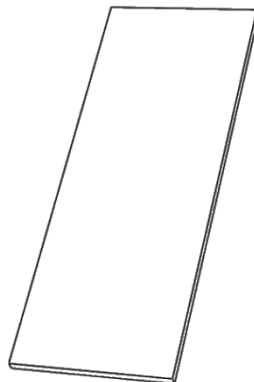


660-TL 1.5X4

Spacer Turf

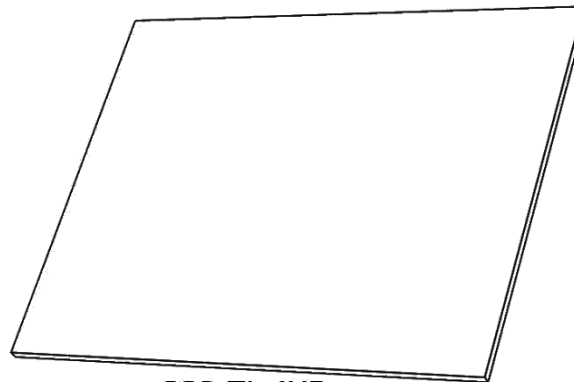

660-TL 4X5

Stance Turf

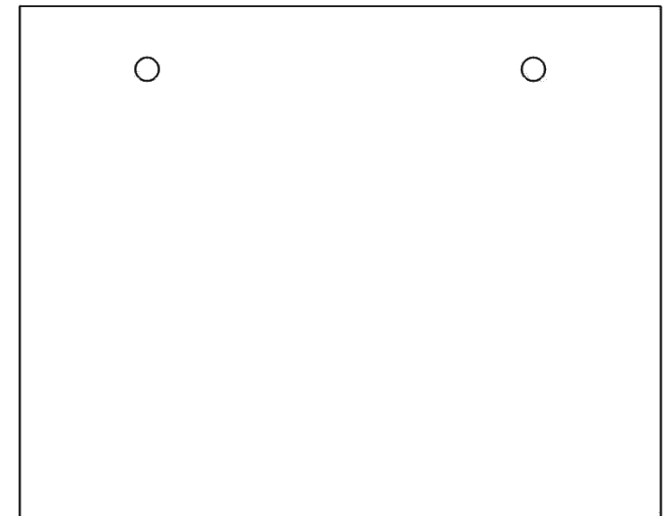

760-TL 8X10-13-DH






1

Check your shipment for accuracy. You should have received all of the following pieces.

ITEM NO.	PART NUMBER	QTY.
1	TLCM-C-1	4
2	TLCM-E-1	20
3	TLCM-E-2	4
4	TLCM-E-2/H	2
5	TLCM-M-2	14
6	TLCM-M-FBG	2
7	TLCM-E-FBG-CM	2
8	TLCM-P-4	25
9	TLCM-P-2	44
10	P-760CUPS	2
11	385/40-4	2
12	660-TL 1.5 X 4	2
13	660-TL 4 X 5	1
14	760-TL 8X10-13-DH	1
15	658/621-BLK	2

3


Insert putting cups (P-760CUPS)

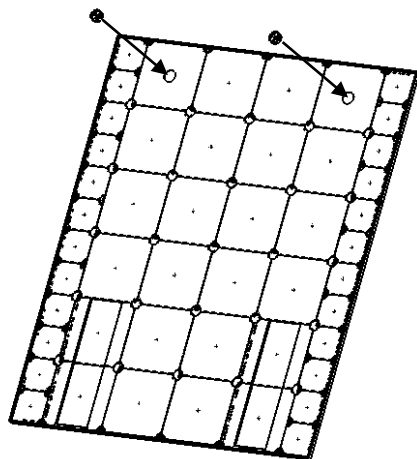



2

Lay down the rubber as shown below, inserting the pins as you go.

Center Connections
("4-PINS")


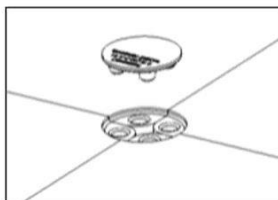


Edge Connections
("2-PINS")

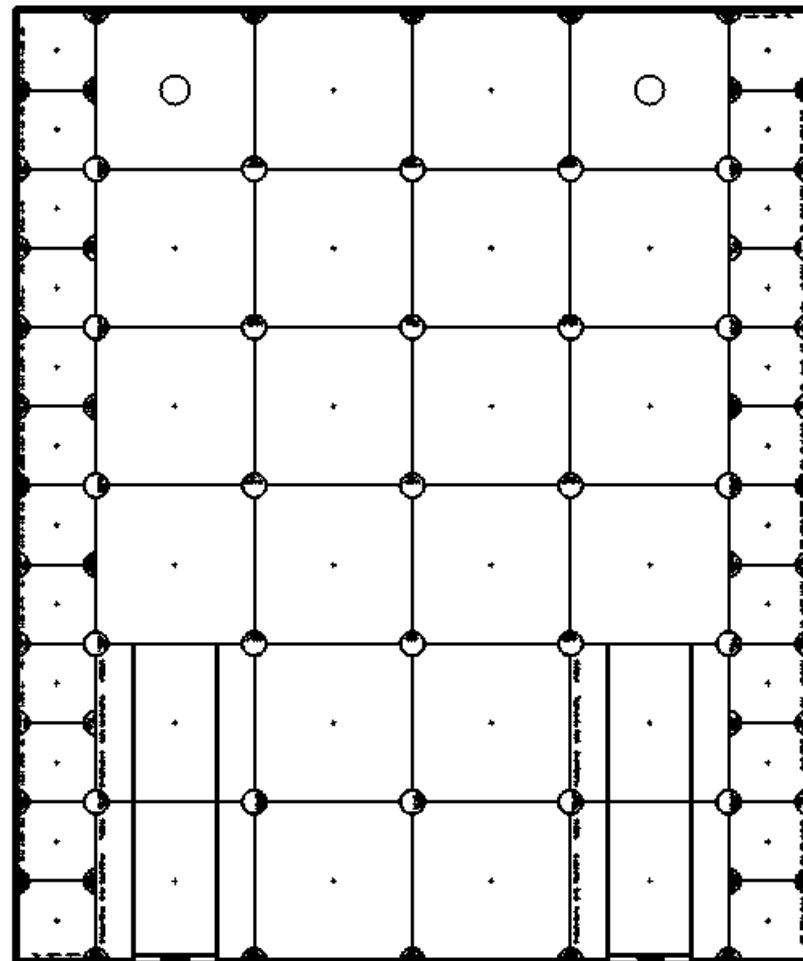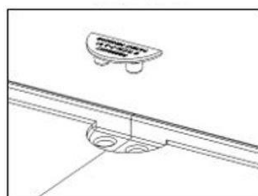





- 4** Insert tees (658/621-BLK) into Fiberbuilt Grass Hitting Panel (385/40-4) from underneath before laying it down.

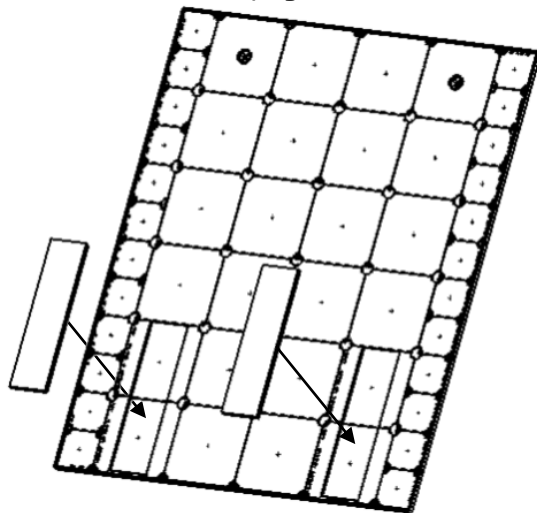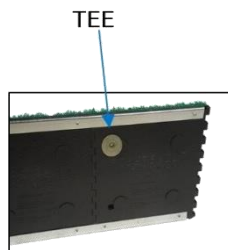

- 5** Lay down putting turf (760-TL 8X10-13 DH).

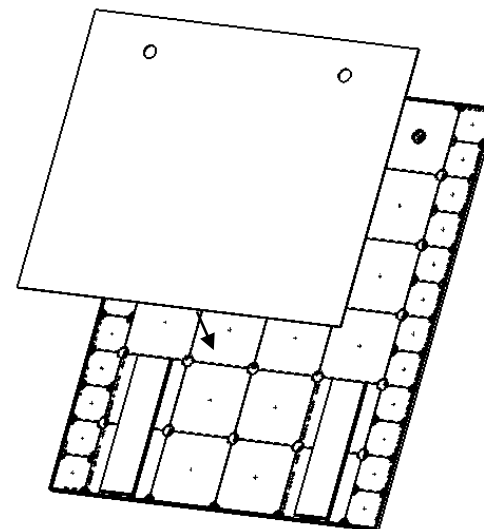

- 6** Lay down stance turf (660-TL 4X5) and spacer turf (660-TL 1.5X4).

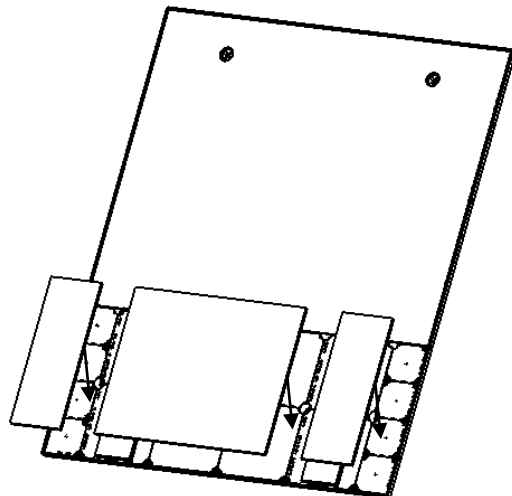

- 7** Finished product.

