

recovrTM


MATTRESS

1




Remove from box. The easiest way to remove the mattress from the carton is by placing the open end down on the floor and lifting up the carton.

2

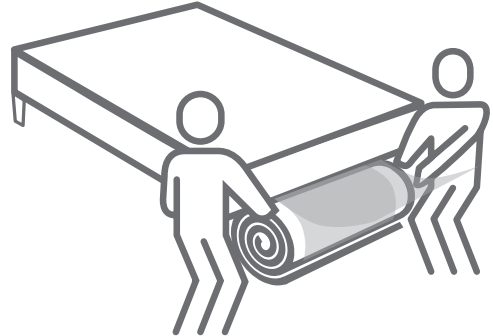


Place the compressed mattress roll on the floor at the foot of the bed. Unwrap the outer plastic.

3

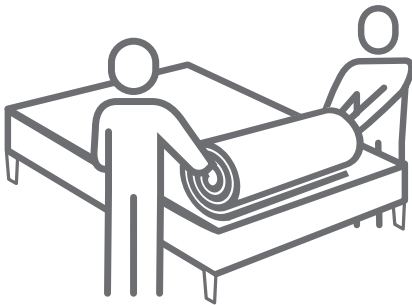


Place the rolled mattress on your existing foundation/boxspring and unroll the mattress.

4

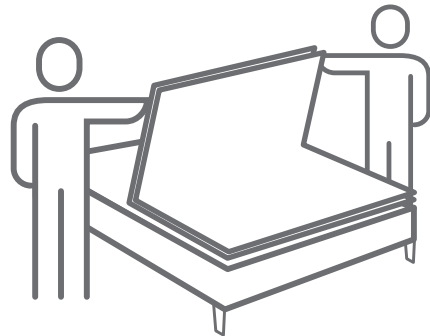


Position the mattress flat over the foundation as you unroll and unfold.

5

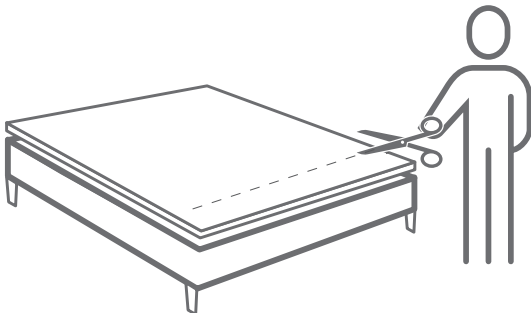

Cut the inner bag. Be sure to avoid cutting the mattress upholstery. You will hear a rush of air as the mattress expands. Completely remove the inner plastic bag.

6

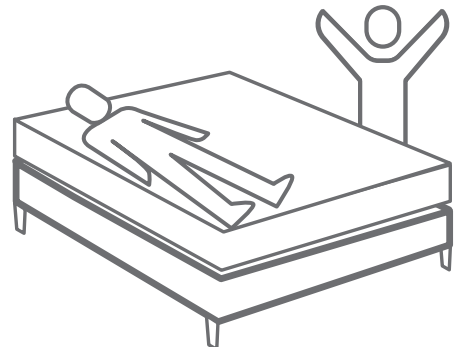

After one hour, your new mattress will be decompressed and ready to enjoy.

RecovrMattress.com

Recovr Mattress • 407 S. Pennsylvania Ave, Suite 130 • Joplin, MO 64801