



# STEP 1 – SCREEN POSTS

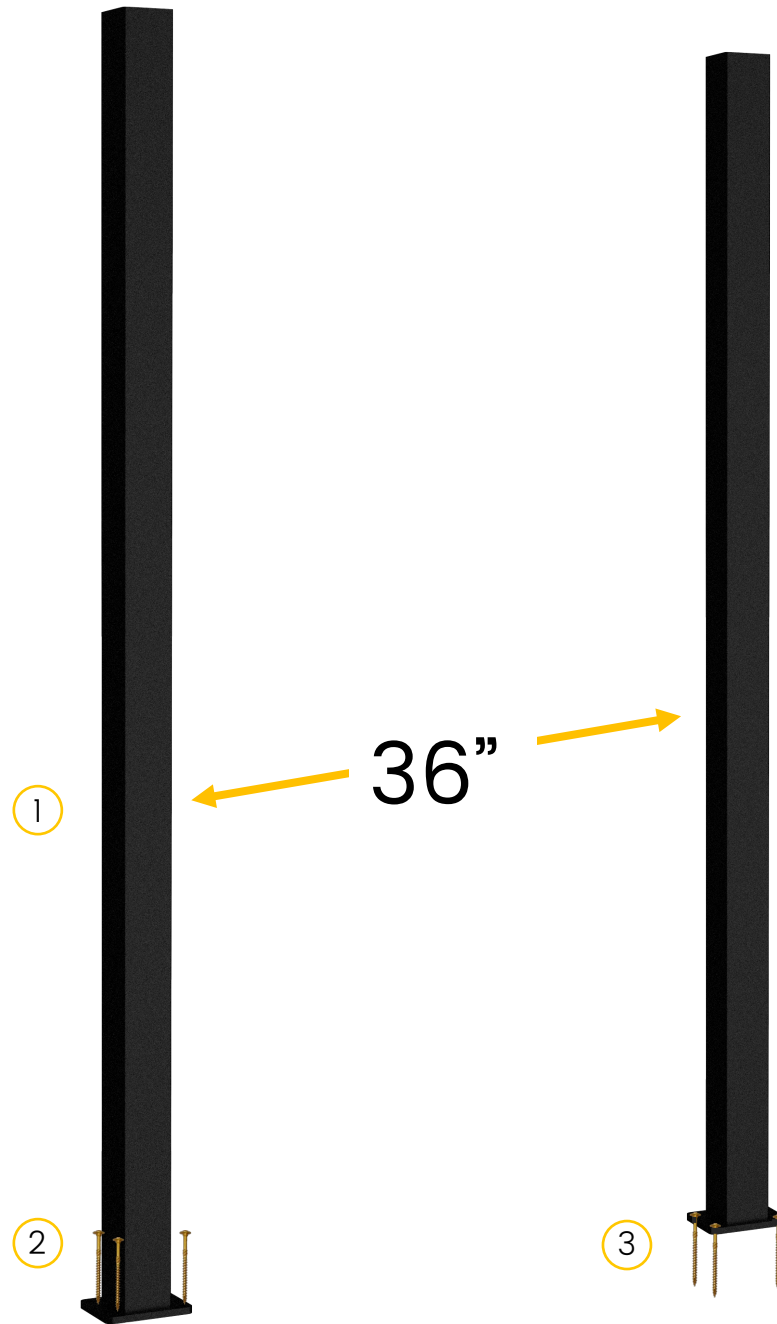


Mount Screen Posts 36" apart.  
Measure Post to Post, not base to base. Fasten to deck substructure using (4) structural deck screws / Screen Post.

# STEP 2 – POST SKIRTS

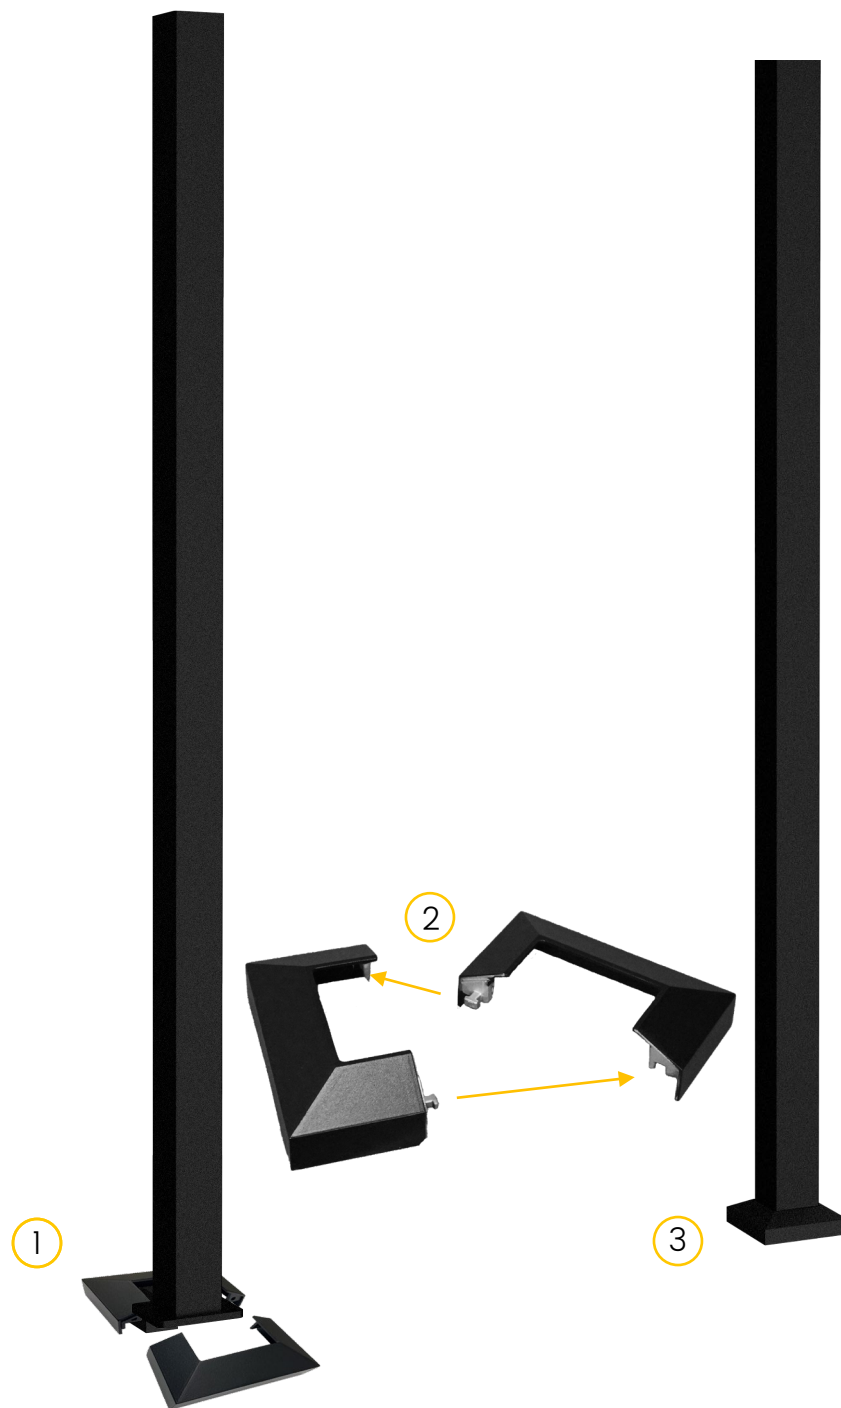


Place one half Post Skirt into place on base of Post with the seams on the sides. Place second half of Post Skirt in interlocking the male and female metal connectors.

# STEP 3 – POST CAPS

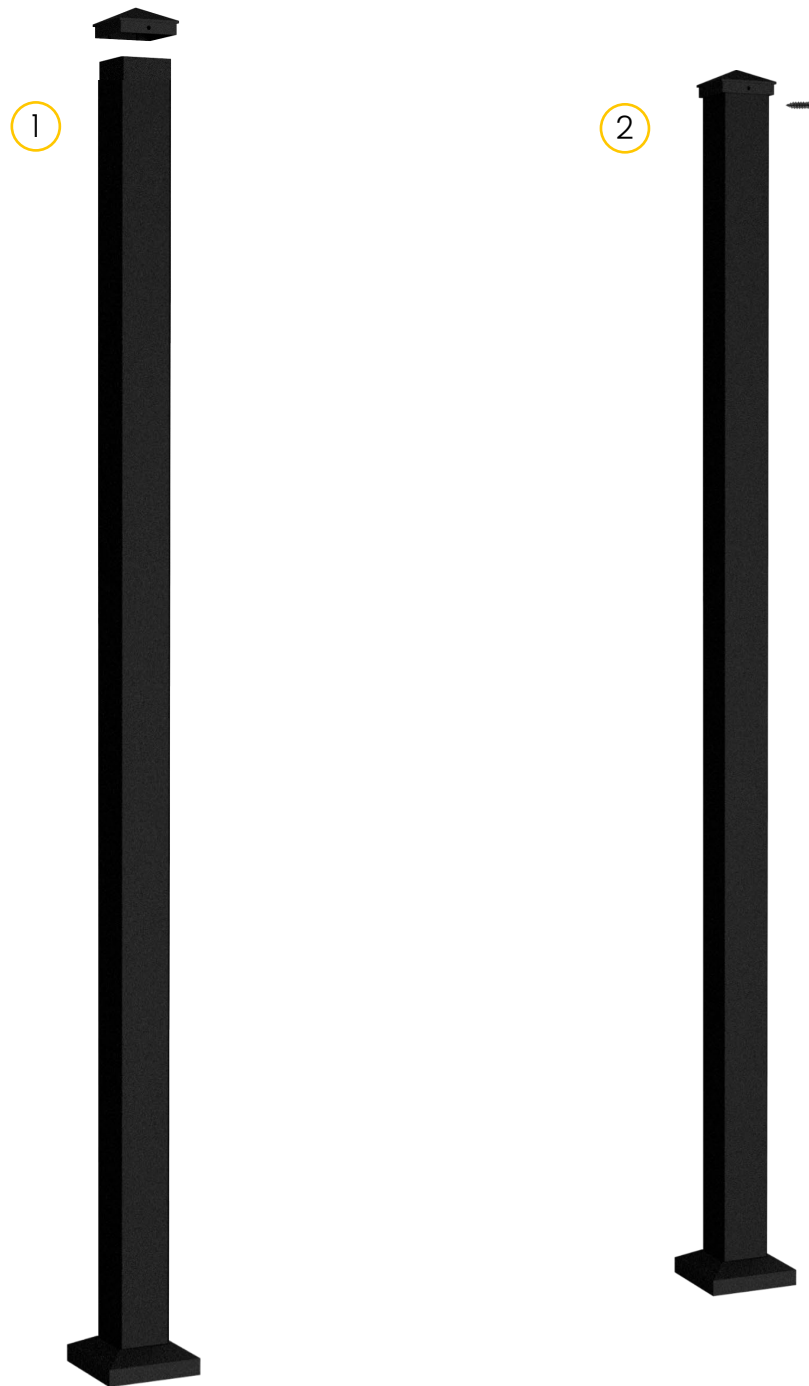


Place Post Caps on top of Post.  
Press down firmly or tap with a rubber mallet to ensure secure fit. Fasten (1) supplied screw through hole in Post Cap.

# STEP 4 – L BRACKETS

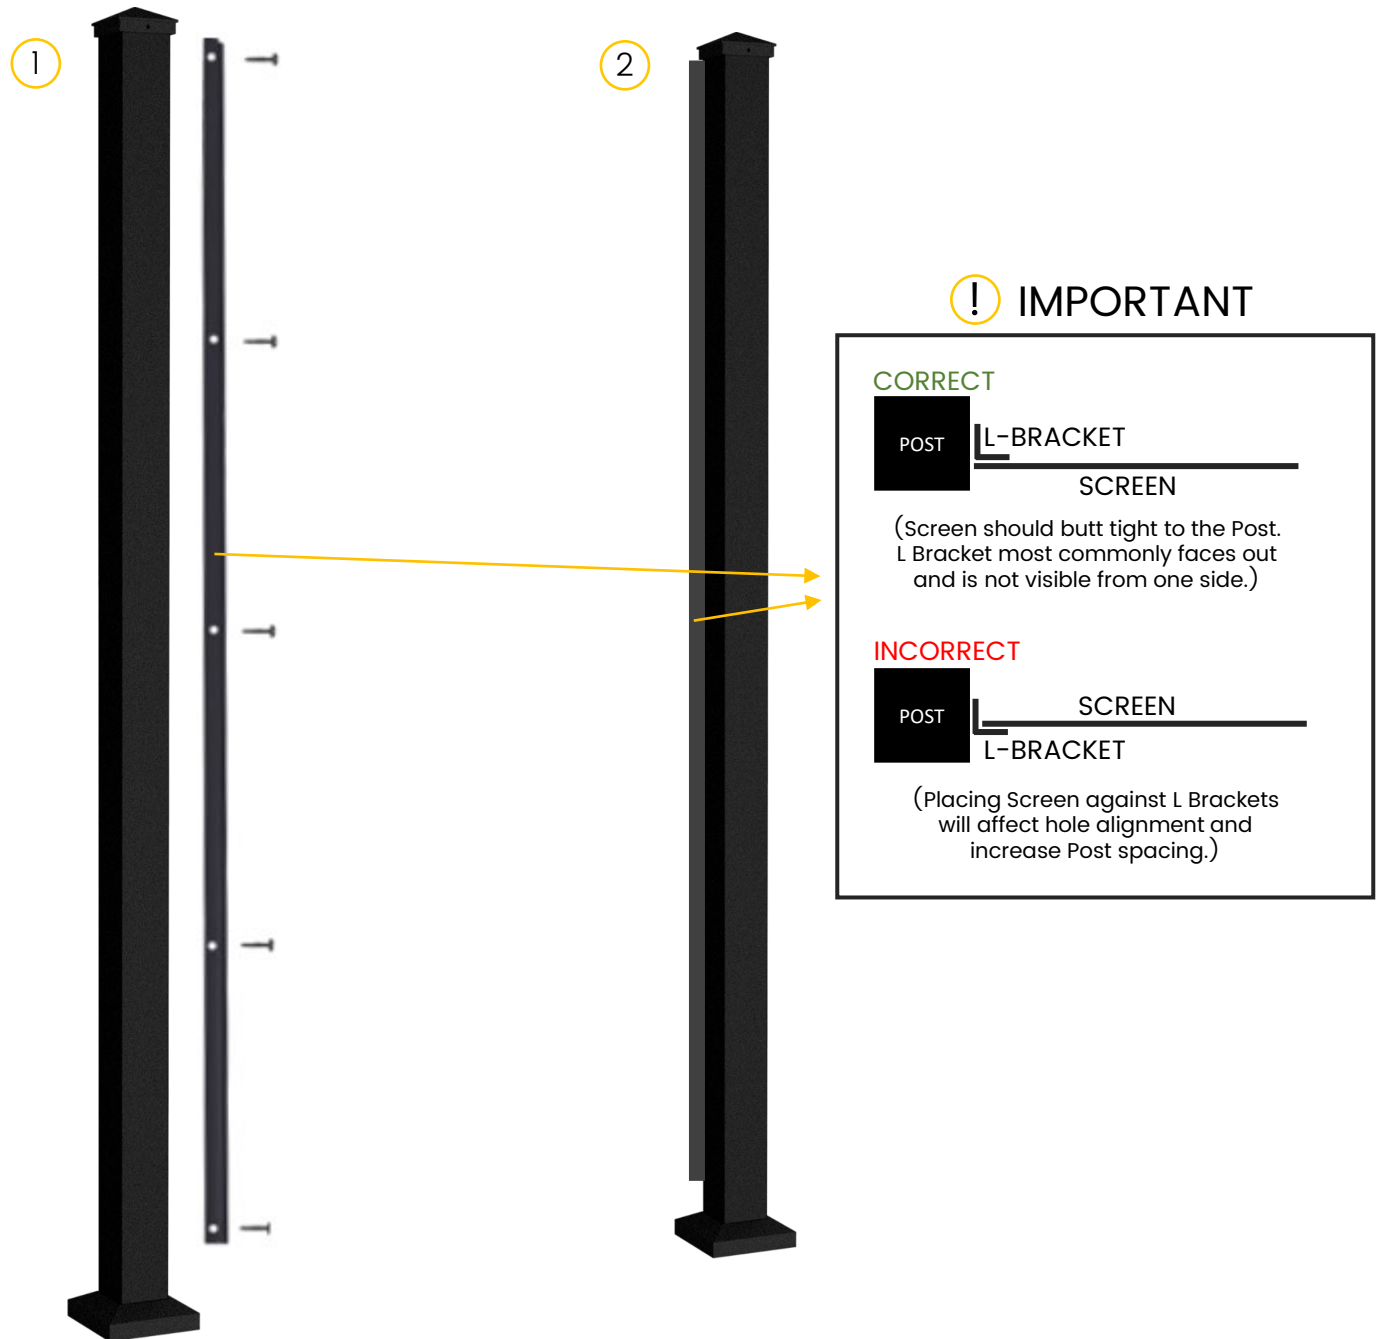


Butt L Brackets against the bottom edge of Pillar Caps and the center of each Post. Fasten (5) self-tapping screws through L Brackets and into each Post. (an awl or 1/8" metal drill bit can be used to drill pilot hole in L Bracket. We recommend drilling about 1/2" below the factory hole on the other side of the L Bracket to make fastening easier. Tape can be used to hold L Brackets in position while fastening.)

# STEP 5 – INSTALL SCREEN

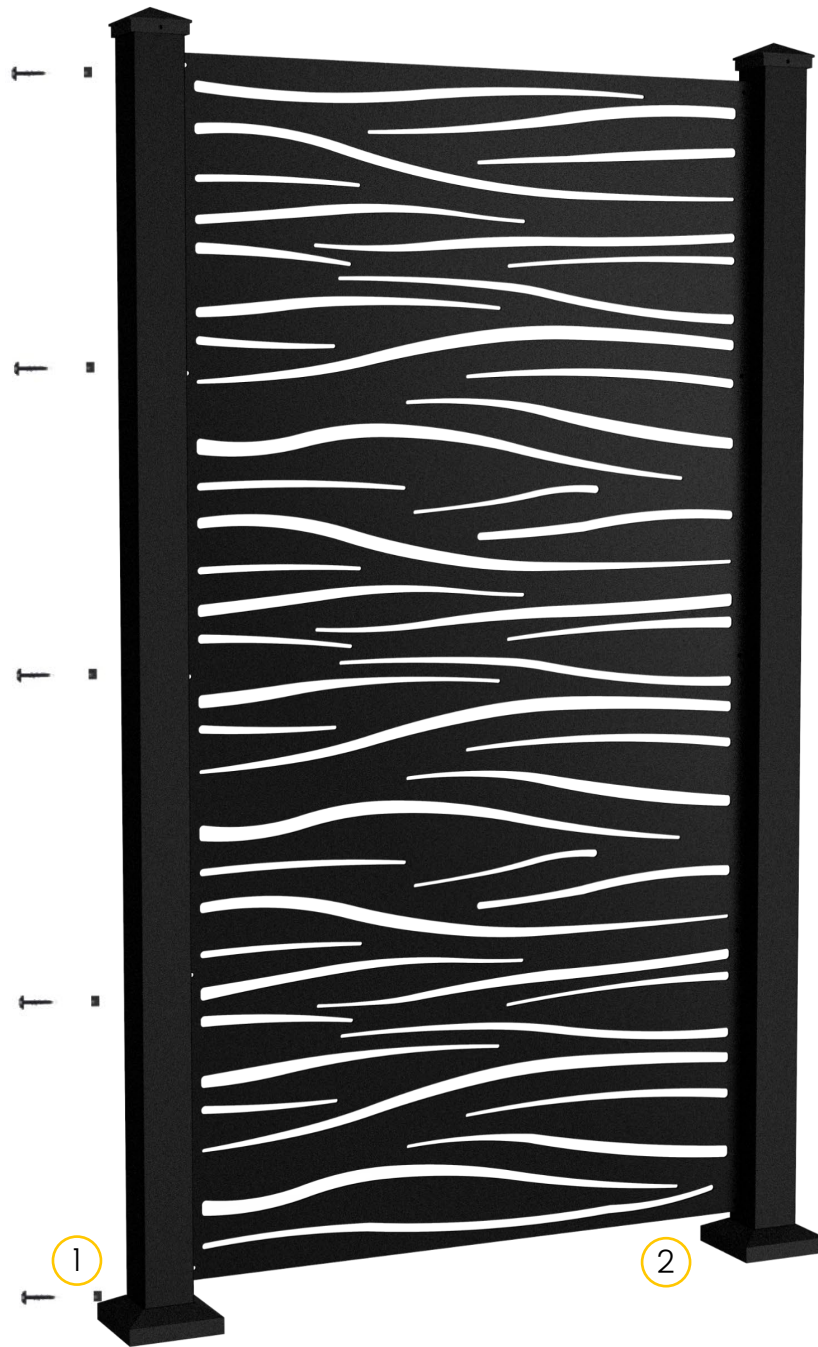

Place Screen against L Brackets ensuring all 5 holes line up.  
Place supplied (10) bolts through holes and place nut on  
backside. Tighten until firmly secure.

# STEP 6 – ENJOY

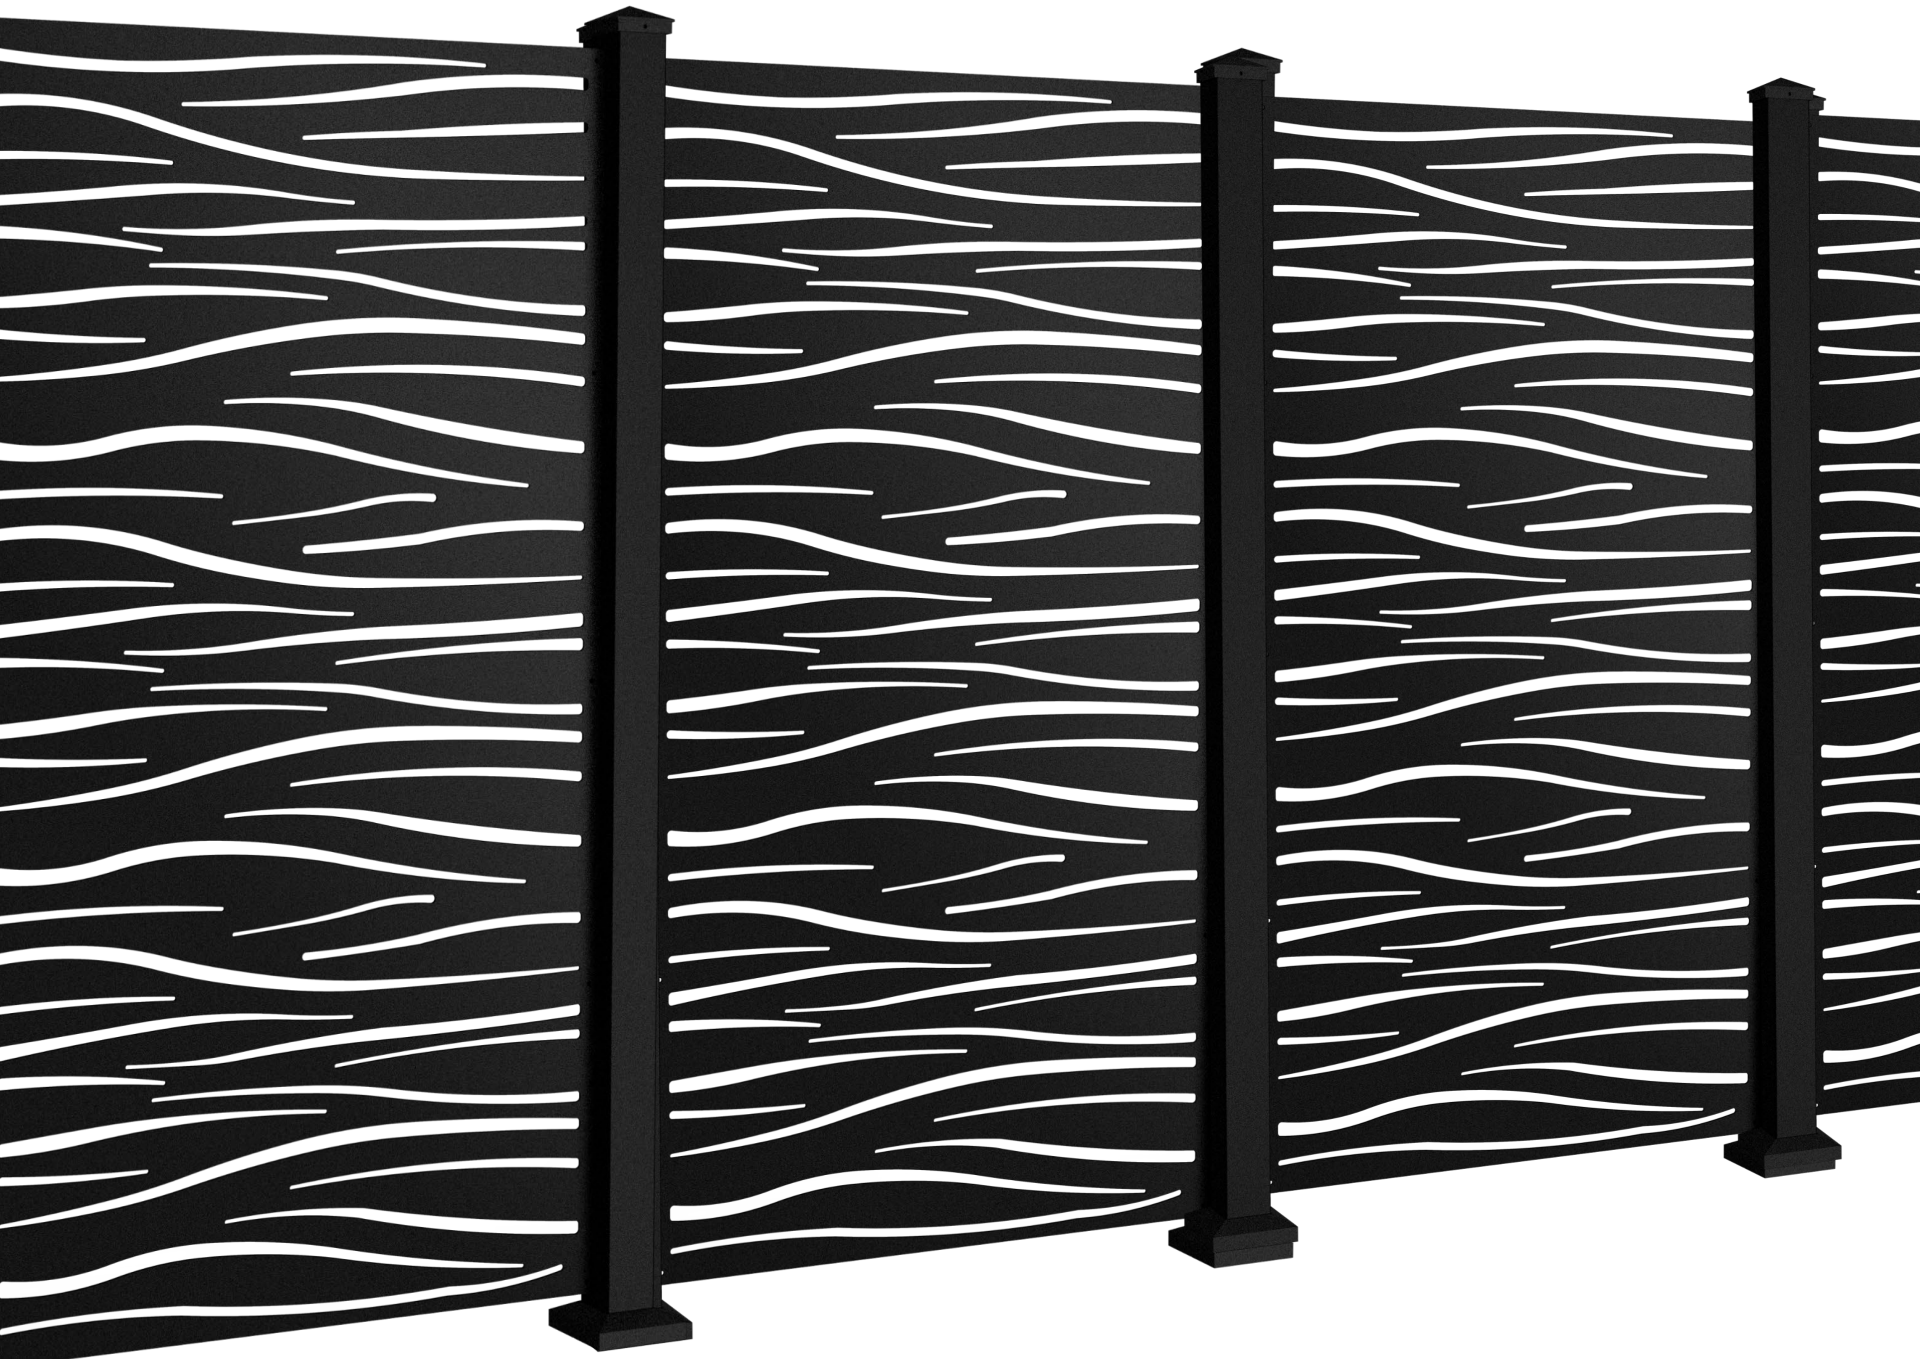

Congratulations, you are now ready to enjoy your Sunbelly Privacy Screen(s).