

# Quick Installation Setup Guide

## STEP 1

Cut a circular hole approximately 3.5" in diameter in the countertop for surface mount installation.

If installing a flush mounted trim, an additional counterbore cut is necessary: .09" deep with a 4" in diameter.

Surface Mount



Flush Mount



## STEP 2


Remove the base from the housing to expose screw terminals.



**CAUTION:** Before handling the cable, make sure the circuit is OFF.

## STEP 3

Feed cable through the lock nut under the countertop, as this will secure the device later.

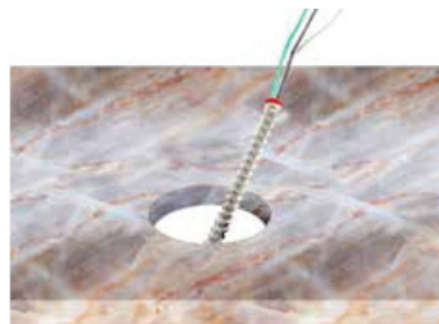

## STEP 4

Fasten the metal jacket to the device base. A fitting will be required (not included).



## STEP 5

Strip conductors to the correct length as shown on the device.

Ground the base by bonding the green or bare wire to the grounding screw on the base.

Terminate the green or bare wire to the green screw marked  $\perp$ . Terminate the white or gray wire to the white screw marked "WHITE" and black or red wire to the brass screw marked "HOT".



## STEP 6

Reattach the base to the housing and secure with screws.



## STEP 7

Insert the device into the countertop opening and hand tighten the lock nut to secure the device in place.



## STEP 8

Terminate the device to the power source. Press the cover to pop up the receptacle to use, press again to close.