

Quick Installation Setup Guide

Because Spills Happen


Hubbell Countertop Receptacles
are Spill Test Compliant



Ordering Information

Description	Finish	Color/Material	Surface Mount	Flush Mount
15A 125V Tamper-Resistant Pop Up Kitchen Counter Receptacle, Rated for 20A circuits	Powder Coated	Black	RCT200BK	RCT201BK
		White	RCT200W	RCT201W
	Brushed	Aluminum	RCT200ALU	RCT201ALU
		Brass	RCT200BR	RCT201BR
		Nickel	RCT200NI	RCT201NI
	Polished	Chrome	RCT200CH	RCT201CH
	Matte	Bronze	RCT200BZE	RCT201BZE

Dimensions Inches (mm)

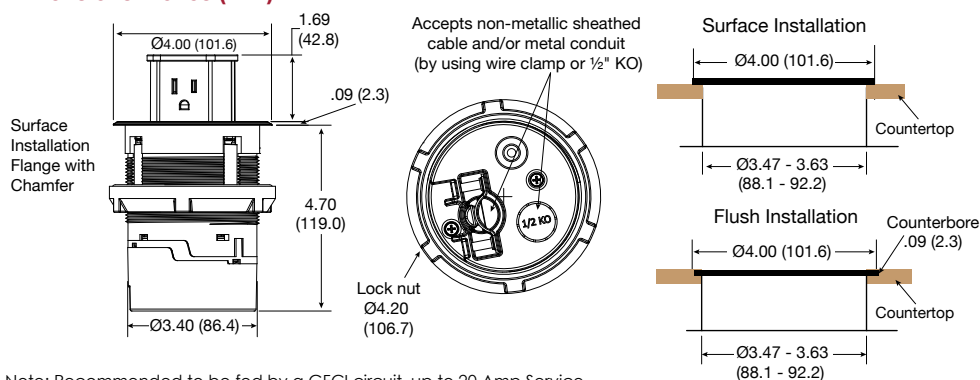


Note: Recommended to be fed by a GFCI circuit, up to 20 Amp Service.

Quick Installation Setup Guide

HUBBELL
Wiring Systems

Key Benefits

- Surface or flush mount options with seven different finishes
- Water and tamper-resistant face
- Compact shallow design minimizes space in cabinet
- Complies with UL 498 section 146 spill test
- Easy push down to pop up function is rated for a minimum of 10,000 cycles (OPEN/CLOSE)
- Permanent installation ready (suitable for MC cable or non-metallic sheath cable)

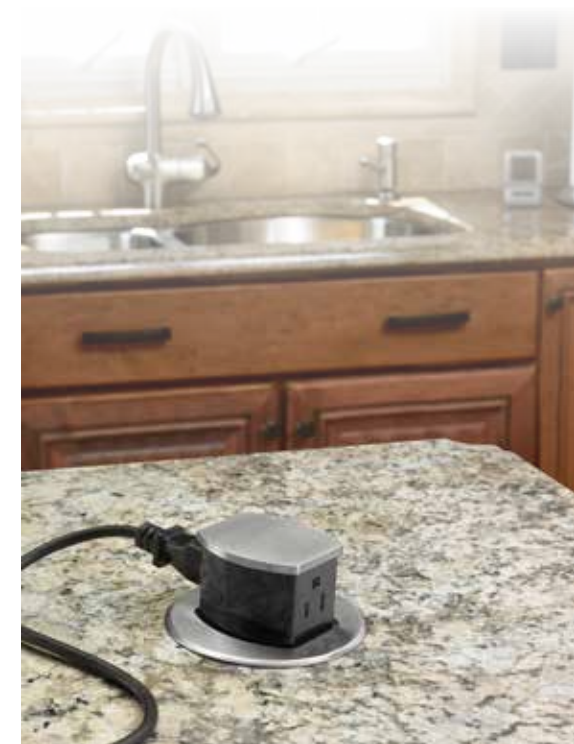

Installing the Countertop Receptacle

Before installing the Hubbell Countertop Receptacles.

Note: There are different components that will be used throughout the installation. This includes the housing, base, countertop flange, receptacle cover, locking nut and installation screws.



HUBBELL
Wiring Systems

www.hubbell-wiring.com



Hubbell Wiring Device-Kellems • Hubbell Incorporated (Delaware)
40 Waterview Drive • Shelton, CT 06484 • Phone (800) 288-6000 • FAX (800) 255-1031
Printed in U.S.A. Specifications subject to change without notice. © Registered trademark of Hubbell Incorporated.

WLFTS006 2/17
PD2808

Residential Solutions

www.hubbell-wiring.com



Quick Installation Setup Guide

STEP 1

Cut a circular hole approximately 3.5" in diameter in the countertop for surface mount installation.

If installing a flush mounted trim, an additional counterbore cut is necessary: .09" deep with a 4" in diameter.

Surface Mount



Flush Mount



STEP 2


Remove the base from the housing to expose screw terminals.



CAUTION: Before handling the cable, make sure the circuit is OFF.

STEP 3

Feed cable through the lock nut under the countertop, as this will secure the device later.

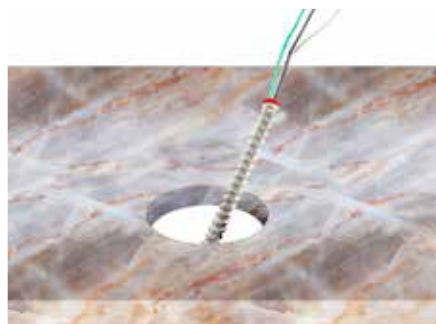

STEP 4

Fasten the metal jacket to the device base. A fitting will be required (not included).



STEP 5

Strip conductors to the correct length as shown on the device.

Ground the base by bonding the green or bare wire to the grounding screw on the base.

Terminate the green or bare wire to the green screw marked \perp .
Terminate the white or gray wire to the white screw marked "WHITE" and black or red wire to the brass screw marked "HOT".



STEP 6

Reattach the base to the housing and secure with screws.



STEP 7

Insert the device into the countertop opening and hand tighten the lock nut to secure the device in place.



STEP 8

Terminate the device to the power source. Press the cover to pop up the receptacle to use, press again to close.