


## HOOD OR HOOD MINI UFO INSTALLATION INSTRUCTIONS

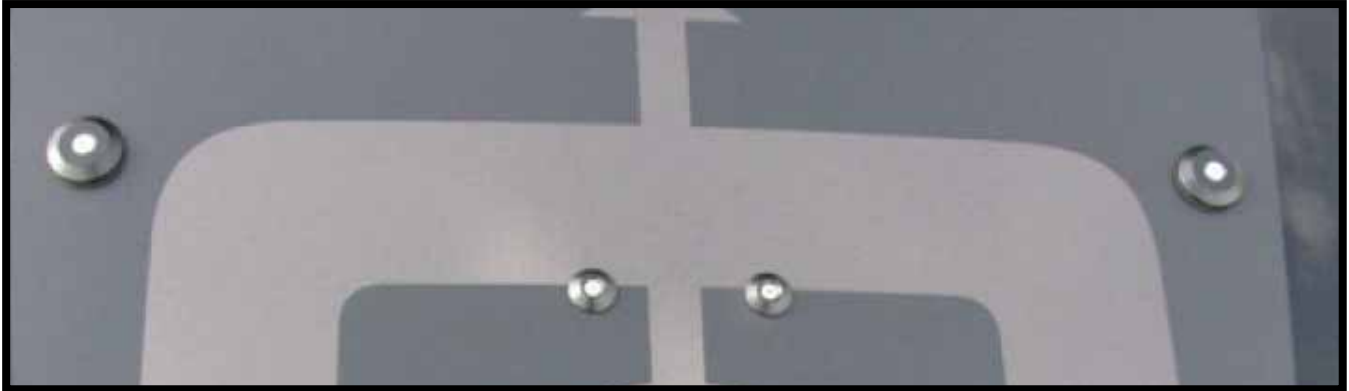

### PARTS LIST

### QTY

UFO, Billet Aluminum	2
Stainless Steel washer	2
SS 1/4" -20 Flat Head Socket Screw	2
SS 1/4" -20 Nylock Nut	2

### REQUIRED TOOLS

5/32" Hex L-Key  
7/16" Open End Wrench

### PLEASE READ BEFORE BEGINNING INSTALLATION

Prior to starting the installation of this product we suggest reading the entire instruction manual. Several of the steps involved in installation of this product are fairly complex and reading through ahead of time will help you with a pain free installation. An extra minute or two spent now will save a lot of headache down the road.

This product must be installed by someone with a certain amount of mechanical aptitude. Vector OffRoad can not be held liable for damage caused to your vehicle due to poor or incomplete installation of this product. If you have any questions, are missing parts or need help locating a skilled installation shop in your area please contact us.

UFO's are for added cosmetic appearance and do not add to the functionality of the vehicle.

1. Open the hood. If your vehicle is so equipped, you will need to remove the underhood insulation by pulling out the plastic push-in fasteners.

2. Remove the OEM rubber hood bumpers. Earlier JKs can be removed by pulling straight up while rolling and then twisting counter clockwise. Newer model JKs require pinching the release tabs on the under side while pulling them out. If you are installing mini UFOs remove the footmans loop as well. There are two nuts that need to be removed.



3. Install the UFOs. It is helpful to do this with two people., one to work on the top side of the hood and one to work on the underside of the hood simultaneously. The UFO and rubber pad if purchased will be placed on the top of the hood and the flat head screw will pass through them down through the existing holes in the hood.

4. Place the washer and the lock nut on the underside of the hood and snug them up. Be cautious not to drop the hardware during the installation.

5. Reinstall the hood insulation and the installation is complete.

**COMMENTS OR QUESTIONS  
PLEASE CONTACT:**

**VECTOR OFF ROAD**

PHONE: 801-372-7834 or 951-691-7604

EMAIL: [admin@vectoroffroad.com](mailto:admin@vectoroffroad.com)

WEBSITE: <http://www.vectoroffroad.com>