

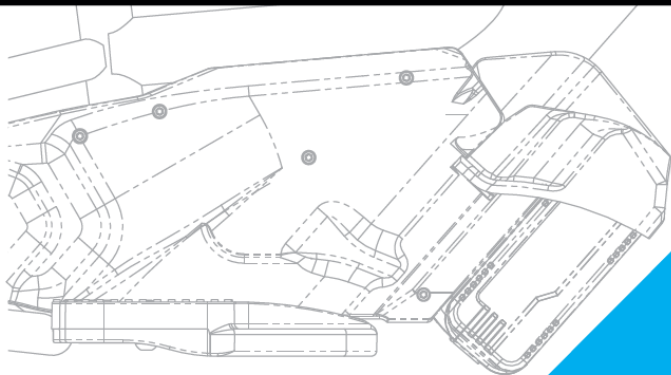


## QUICK START GUIDE

# STACYC

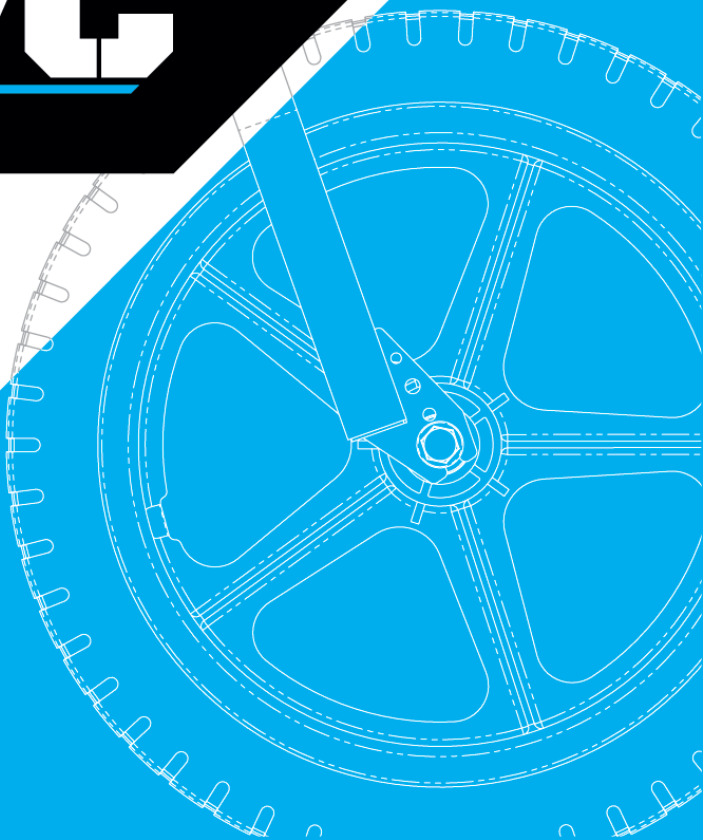

**Part No. 94000761**  
**Revision 2019-04**

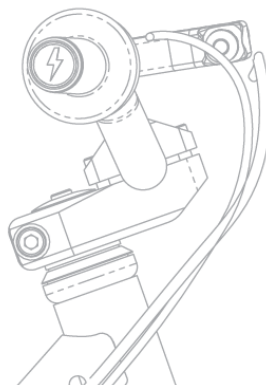

**PLUG IN CHARGER  
AND ATTACH BATTERY.**




## **TOOLS NEEDED:**

- **5MM ALLEN WRENCH**
- **6MM ALLEN WRENCH**
- **15MM BOX END WRENCH**



**VERIFY DIRECTION OF FRONT FORK PRIOR TO  
INSTALLATION OF HANDLEBAR ASSEMBLY.  
FRONT WHEEL AXLE MUST POINT FORWARD AND  
AHEAD OF THE FORKS CENTERLINE.**

**STEERING STEM BOLT: 5NM (45 IN-LBS)  
WHEEL AXLE NUTS: 17NM (12.5 FT-LBS)**

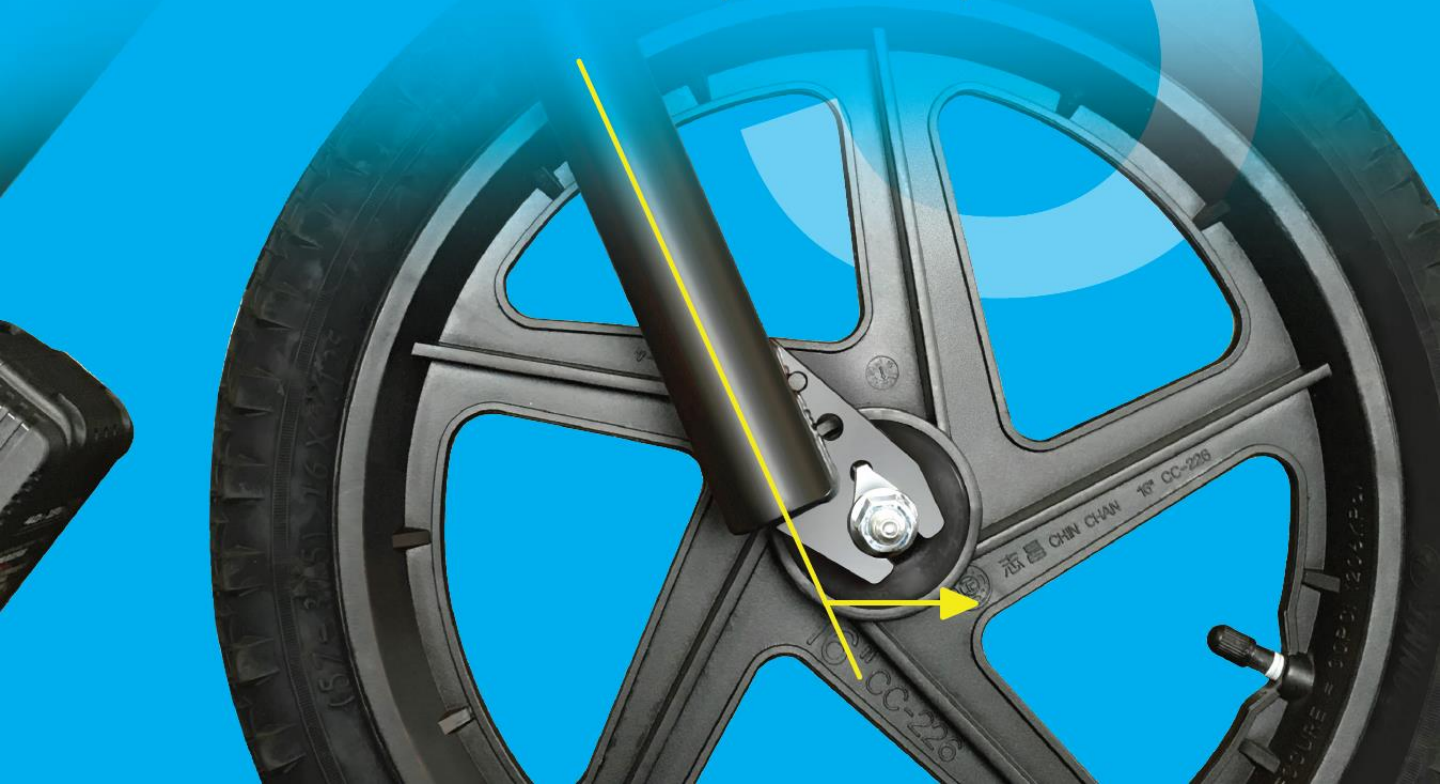



**TIGHTEN STEM/HANDLEBAR TOP BOLT WITH  
5MM ALLEN WRENCH TO 45 IN-LBS AND  
ALIGN TO FRONT WHEEL.  
DO NOT OVER-TIGHTEN**



**TIGHTEN STEM WITH 6MM ALLEN WRENCH  
(2 BOLTS) TO 45 IN-LBS (5NM).  
DO NOT OVER-TIGHTEN**



**ATTACH FRONT WHEEL WITH WASHER(X2)  
AND NUT(X2) WITH 15MM BOX END WRENCH.  
TIGHTEN TO 12.5 FT-LBS (17NM).  
\*NOTE ORIENTATION OF SPOKES.  
DO NOT OVER-TIGHTEN**



## READY FOR THE #⚡PROCESS⚡

- PARENTS! READ THE MANUAL
- ALWAYS WEAR A HELMET
- CHECK BRAKE FUNCTION

### 1. NON-POWERED MODE

- PUSH, COAST, BRAKE, REPEAT.

### 2. POWERED MODE

- ATTACH BATTERY WHEN CHARGED.  
TURN ON YOUR CYCLE.

- POWER MODE IS SET AT TRAINING  
MODE BY DEFAULT, LIGHT ON THROTTLE  
SHOULD BE RED. YOU ARE NOW READY FOR  
POWER RIDING.

FOR ADVANCED SETTINGS AND MORE INFORMATION, REVIEW  
YOUR MANUAL OR VISIT: [STACYC.COM](https://www.stacyc.com)

  **#RIDE***STACYC*