

# BTEXPERT














150 Gallon Deck Box

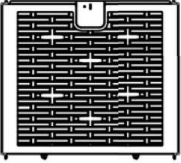

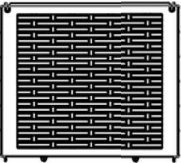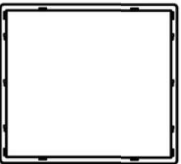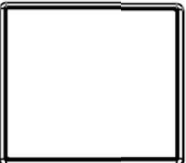
## Assembly Manual

**WARNING:**


Manufacturer and seller expressly disclaim any liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.

Letter	Reference Picture		Quantity	
<b>A</b>	 <p data-bbox="922 226 1187 275">Front Panel</p>		<b>1</b>	
<b>B</b>	 <p data-bbox="873 464 1230 512">Side Panel- Left</p>		<b>1</b>	
<b>C</b>	 <p data-bbox="857 699 1247 747">Side Panel- Right</p>		<b>1</b>	
<b>D</b>	 <p data-bbox="938 940 1187 989">Back Panel</p>		<b>1</b>	
<b>E</b>	 <p data-bbox="898 1199 1206 1247">Bottom Panel</p>		<b>1</b>	
<b>F</b>	 <p data-bbox="922 1423 1190 1472">Cover Panel</p>		<b>1</b>	
<b>1</b>		<b>1</b>	<b># 4</b>  M6 Bolt * 12	<b>7</b>
<b>2</b>		<b>1</b>	<b># 5</b>  M5 Screw, 3 * 14	<b>28</b>
<b>3</b>		<b>1</b>	<b># 6</b>  M6 Nut	<b>6</b>
			<b># 7</b>  M6 Nut With Cup	<b>1</b>


1. Insert the side panel into the bottom panel (Flat Side UP), push down and slide along to lock, Top Holes on Same Side and match with top holes of back panel.

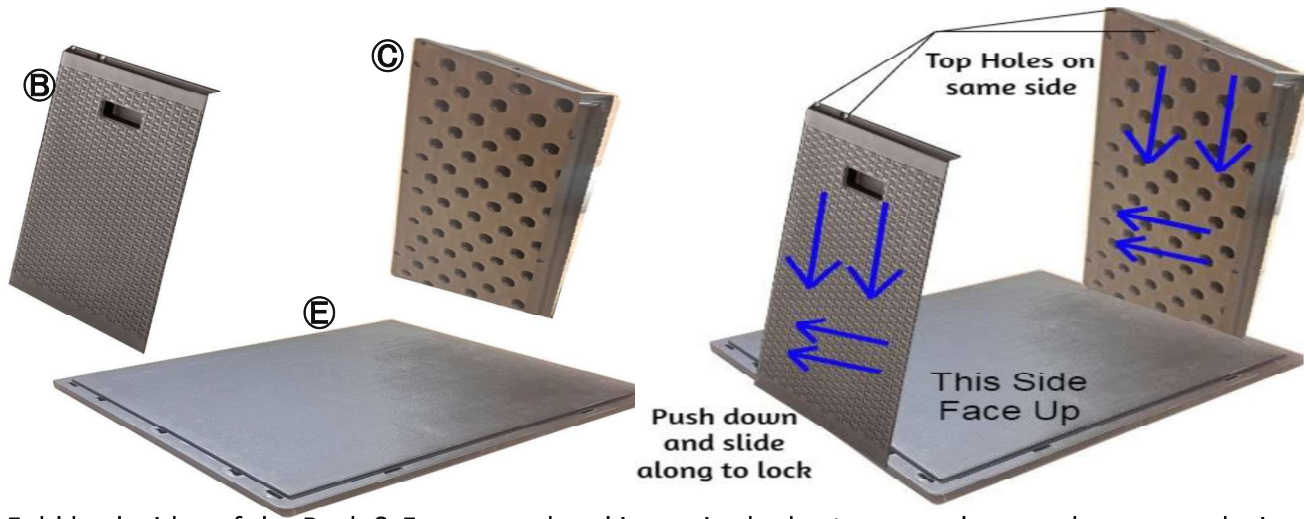

2. Fold both sides of the Back & Front panel and insert in the bottom panel, press down to make it align.

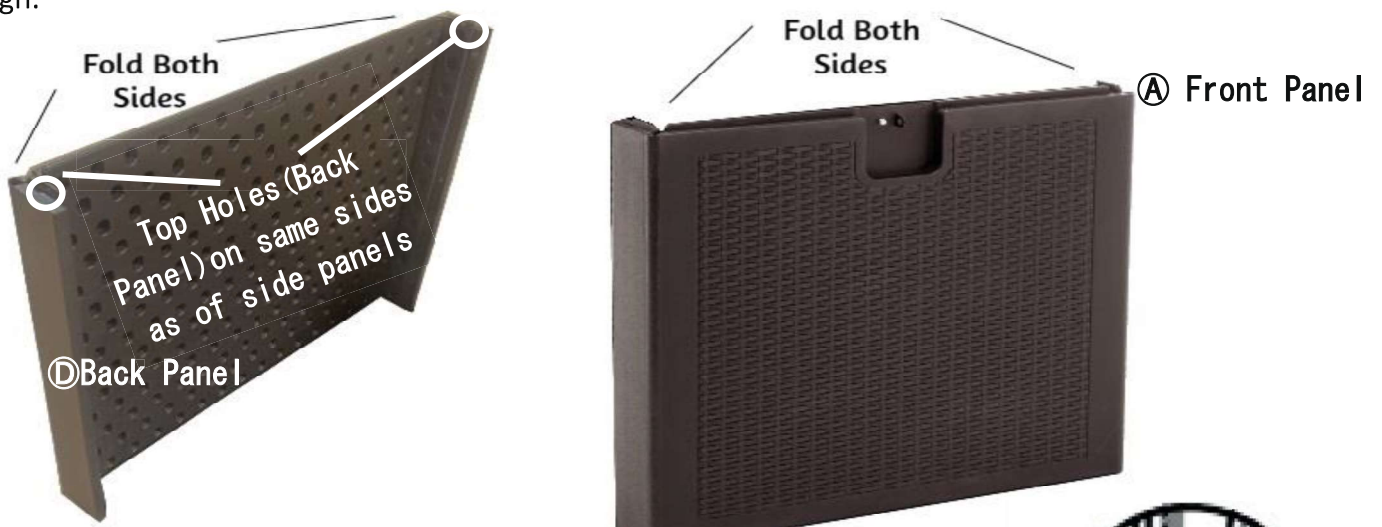

3. Insert three #5 screws to connect the side panels with front panel & Back Panel from inside, on each side.


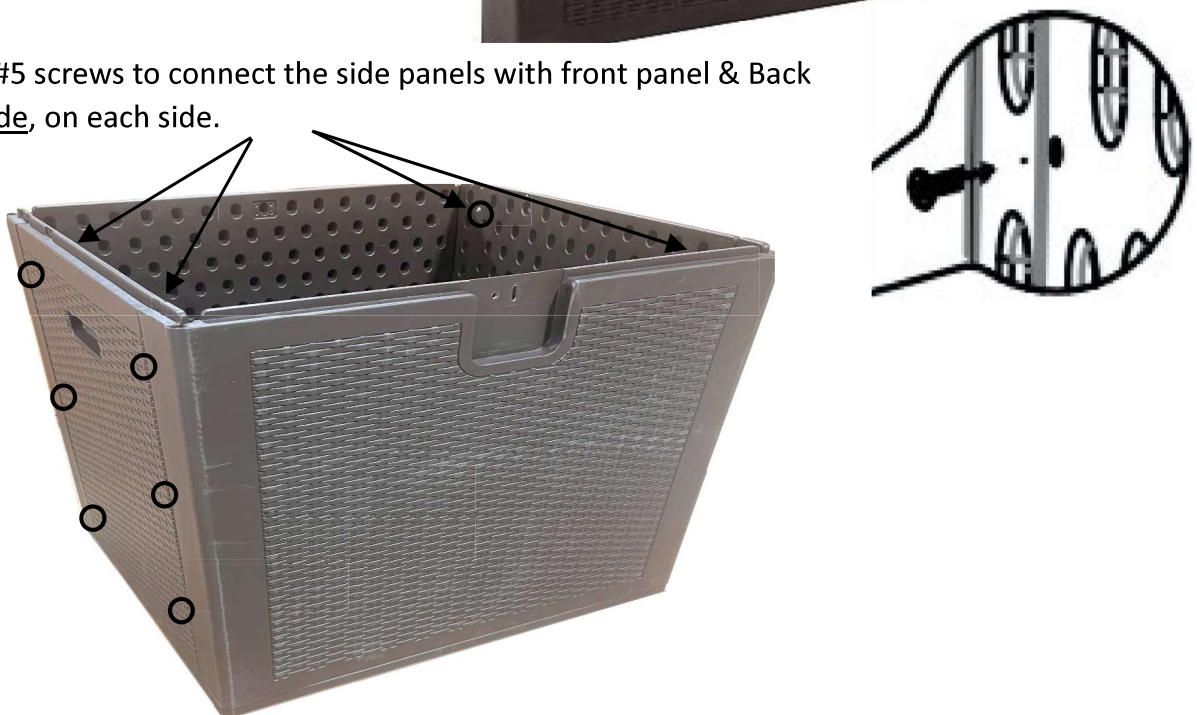




4. Install Gas lift on Both Sides and Top Panel using Two #5 Screws Each Sides on Top Panel and three #4 Bolts with three #6 Nuts on each Side Panels.

5. Attach the Locking Tab to the Front Panel using the #6 bolt and #7 nut with cap.

6. Turn the Product Upside Down and insert the #5 Screw on each bottom corners.

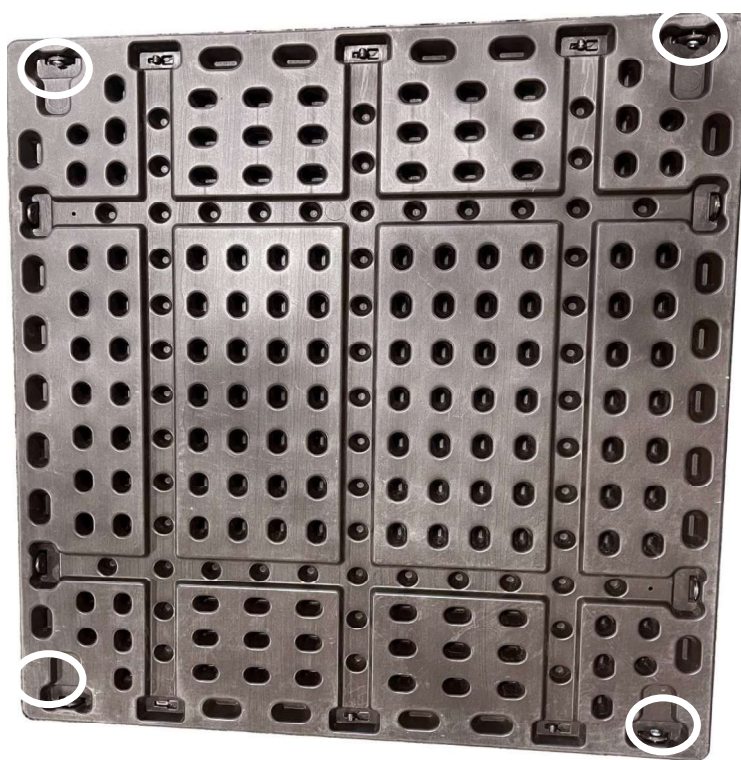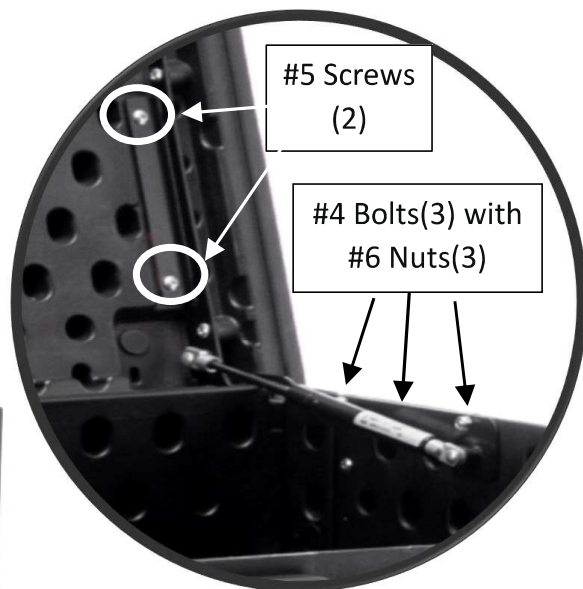

#5 Screws



**\*\* IMPORTANT \*\***

ASSEMBLY NOTE  
FOLD FRONT PANEL  
FOLD BACK PANEL  
DURING ASSEMBLY.

SCAN THE QR CODE  
FOR ASSEMBLY VIDEO

