
Faro Sun Lounger Charcoal

ASSEMBLY INSTRUCTION

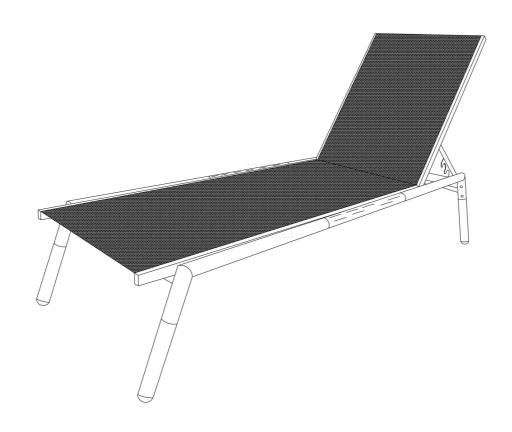

PART LIST


				_		
		(i) M6*15mm		(i) M6*40mm		
AX1PC	BX4PC	CX8PCS	DX1PC	C1X2PCS	EX1PC	FX2PC




ASSEMBLE STEPS

Lying in bed

STEP 1 Use a hex wrench D to install leg tube B

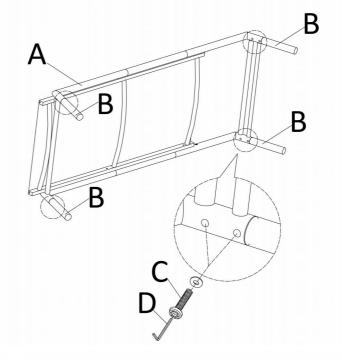

STEP 2 Use a hex wrench D to install back rest with C1 & F

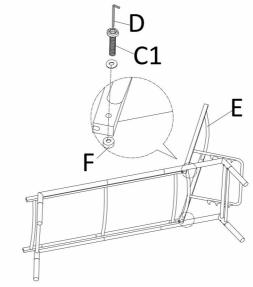

STEP 3
Ensure all screws are tighten and the assembly is compeleted

