


Innovative Material-Cart™

Assembly Instructions




Install Total-Lock Caster Wheels P/N 730-000 into Side Frame P/N 730-011.

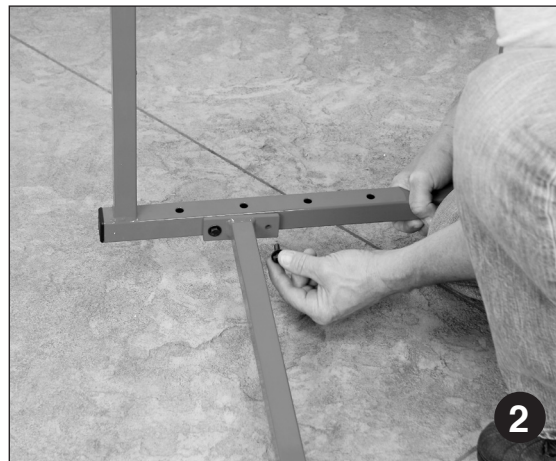


Bolt Crosstube P/N 730-012 to Side Frame using 1/4" x 3/4" bolts and washers. Repeat for other side. (Note: All hardware finger-tight until final step.)



Lay Material Cart flat with Crosstube on floor. Install top shelf using only 1/4" x 3/4" bolts and washers. (Note: smaller wire on top side of shelf.)

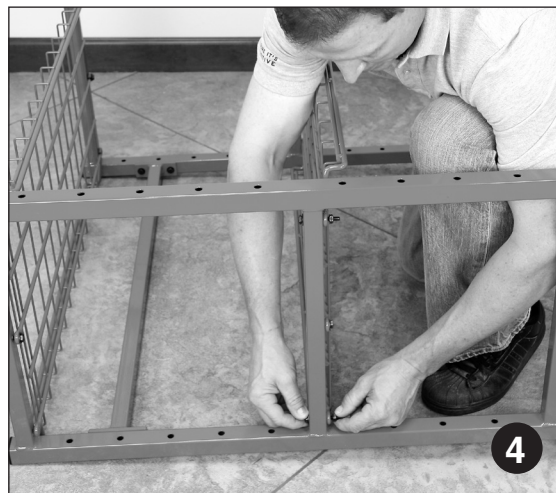

Repeat step #3 for middle and bottom shelf. Install 1/4" x 2" bolts with corresponding nuts/washers. (Note: middle shelf not included if Material Cart was ordered with Masker Option.)

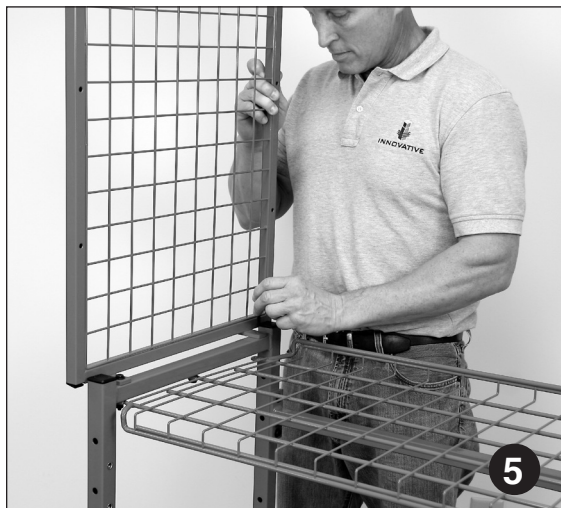


Install Upper Side Frame P/N 730-013 using 1/4" x 2" bolts with corresponding nuts/washers. Repeat for opposite side.




Install Upper Back Frame P/N 730-014 using 1/4" x 2" bolts with corresponding nuts/washers. **Tighten all hardware.**

Hex Head Bolt
 1/4" x 2"
 Qty: 18

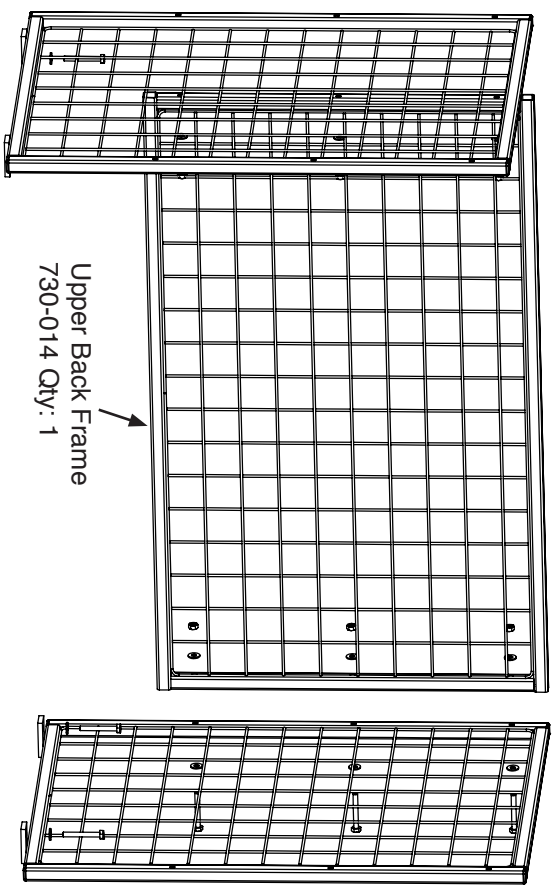


Upper Back Frame
 730-014 Qty: 1

Upper Side Frame
 730-013 Qty: 2

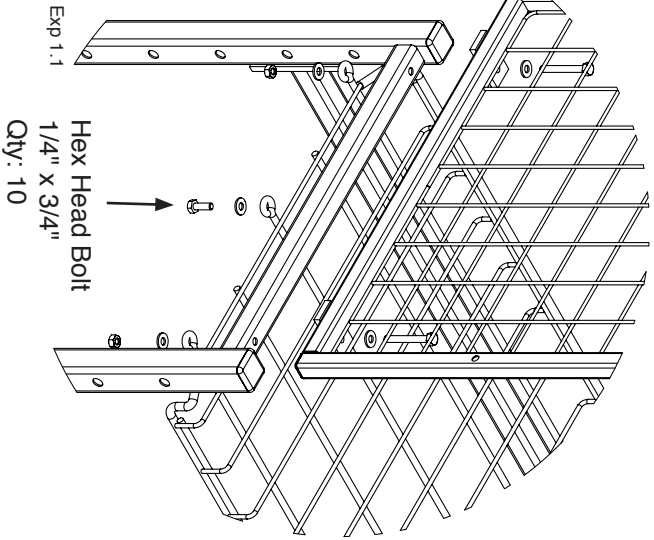

Hex Head Bolt
 1/4" x 3/4"
 Qty: 10

Exp 1:1


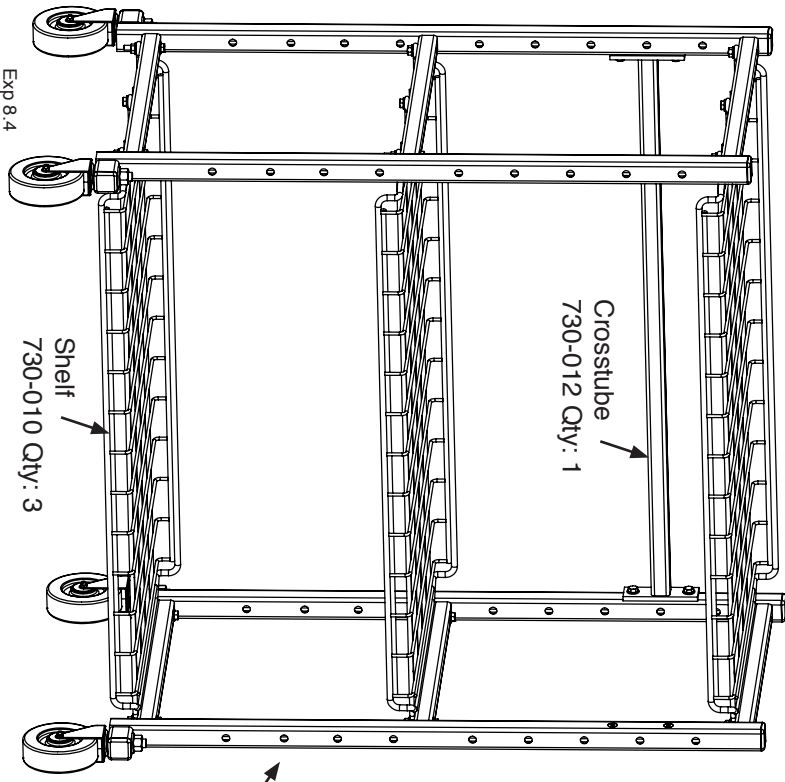


Crosstube
 730-012 Qty: 1

Shelf
 730-010 Qty: 3

Side Frame
 730-011 Qty: 2

Exp 8:4

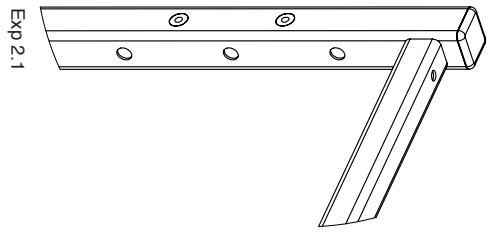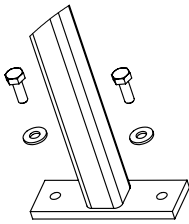

Exp 2:1