

- 1. Press in socket and tighten set screw with flat head screwdriver
- 2. Insert bulb and attach magnetic lamp shade to complete assembly

## HUMANHOME.CO


## WALL & CEILING MOUNT INSTALLATION INSTRUCTIONS

WWW.HUMANHOME.CO CUSTOMERCARE@HUMANHOME.CO R36


CAUTION: Before starting, turn off power at main circuit panel.

ADVERTENCIA: Antes de comenzar la instalacion, apague la corriente en el tablero principal.

ATTENTION: Coupez l'alimentation avant de proceder a l'installation.

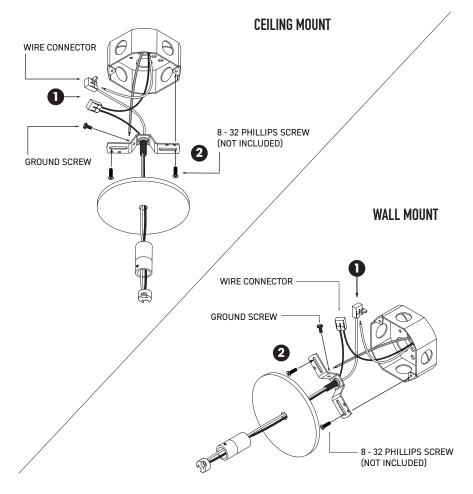

- 1. Connect wires together using included wire connectors
  - A. LIVE wire to BLACK wire
  - B. NEUTRAL wire to WHITE wire
  - C. GROUND wire to GREEN screw
- 2. Fasten crossbar to junction box

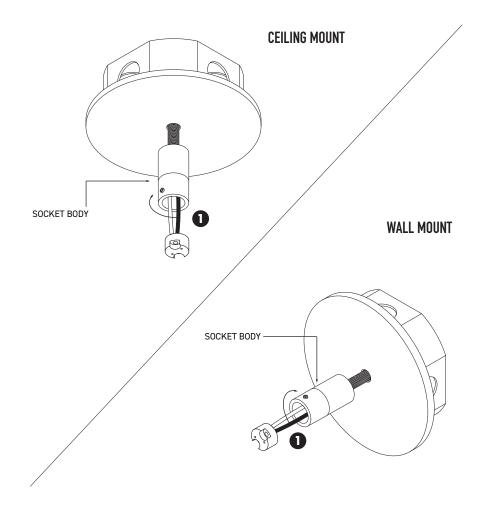

1. Align backplate and fasten socket body to crossbar