


# 851

07.5 - 2010 GM DURAMAX CAB & CHASSIS 6.6L  
4" DPF RACE KIT - REG CAB

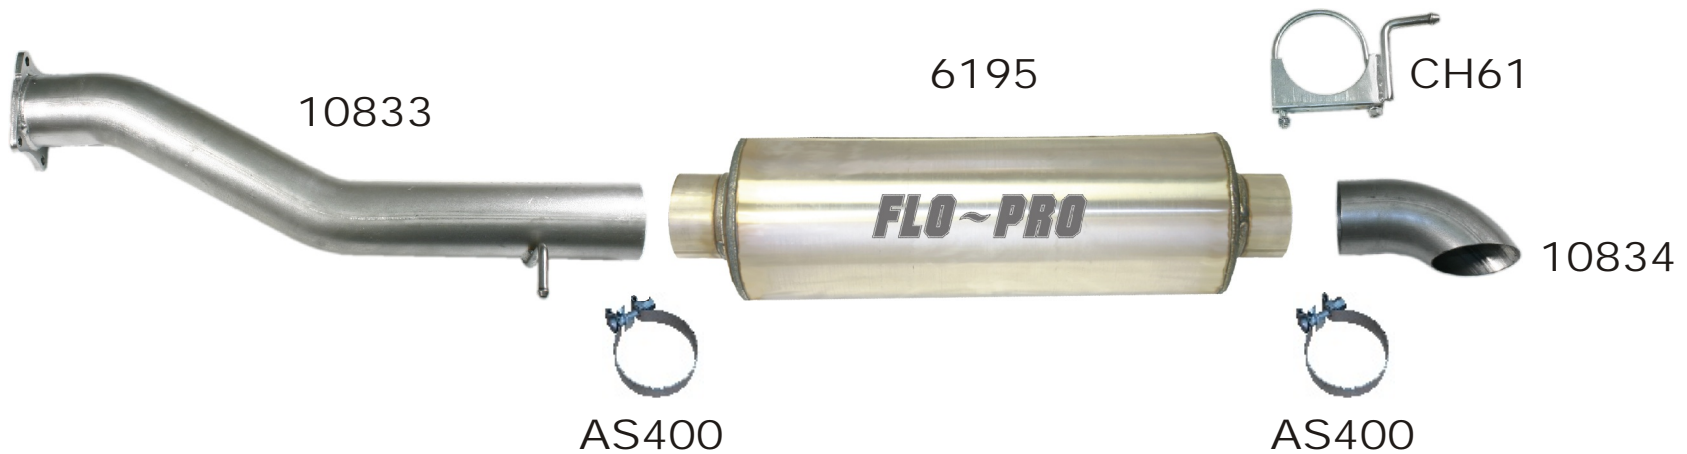

- 1-10833
- 1-6195
- 1-10834
- 1-CH61
- 2-AS400

**FLO~PRO**  
**PERFORMANCE EXHAUST**

PICKED BY: \_\_\_\_\_



**WARNING: BEFORE YOUR BEGIN, VERIFY  
THAT YOU RECEIVED THE RIGHT KIT &  
EACH PART LISTED ON THE REVERSE PAGE**



**KIT # 851  
07.5-2010 DURAMAX CAB & CHASSIS 6.6L  
4" DPF RACE KIT – REG CAB**

For race applications only.

**REMOVAL OF ORIGINAL SYSTEM**

1. Unbolt the flanges fastening the downpipe and the DPF/tailpipe assembly.
2. Remove all factory bungs and airlines on Diesel Particulate Filter, tie-strap them to the frame of the truck or take them off at the clip connection.
3. Spray the hangers with WD-40 and then pry hangers from the rubber and remove the DPF/tailpipe from truck.

**Notes:** - *Make sure to put clamps on connections before connecting pipes.*  
- *Snug the clamps down so they will hold the pipe but the pipe can still be moved with some effort.*

**INSTALLATION INSTRUCTIONS**

1. Install pipe #10833 by attaching the two flanges together using the OEM fasteners and inserting hanger into rubber insulator.
2. Install muffler, clamp hanger and elbow. Snug all the clamps down so they will hold the pipe but the pipe can still be moved with some effort.
3. With all the pipes mounted loosely, adjust the new FLO-PRO system for clearance and appearance. Evenly tighten all bolts and clamps working your way to the back of the truck.

**[www.flopro.com](http://www.flopro.com)**

**Technical Support: [1 800 762 4286](tel:18007624286) or email, [techsupport@flopro.com](mailto:techsupport@flopro.com)**