

LWN 2.8L DURAMAX EGR Blocker Upgrade Kit REV A




Please Check the Contents of Your Kit

Included:

- (2) x Aluminum Plates
- (2) x M6x14MM L STAINLESS STEEL SHCS
- (2) x M8 x 20MM L SHCS A2 SS

1. Remove the flex pipe going from the cold side of your EGR cooler to the intake just after the throttle body.

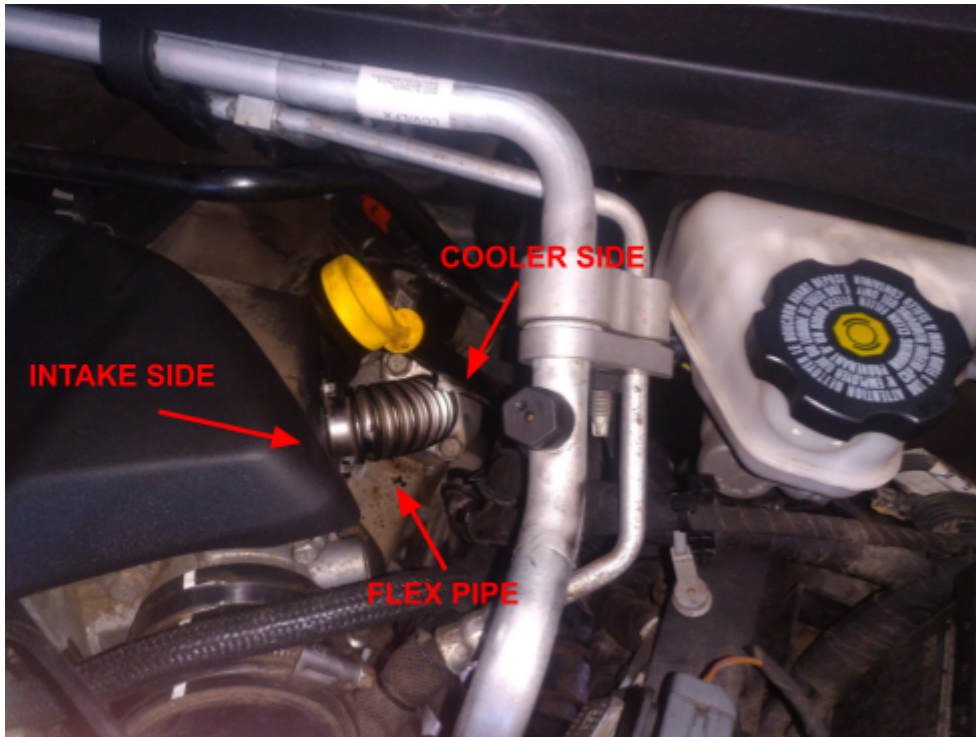

2. Install the asymmetric plate on the cooler using the two M8 x 20MM L cap screws reusing the OEM Gasket.

3. Install the symmetric plate on the intake using the two M6 x14MM L cap screws reusing the OEM gasket.

