





THE RETROFIT SOURCE
The Best Brands in Automotive Lighting

support@theretrofitsource.com
404.220.7940

INSTALLATION GUIDE:


COMMON CONNECTIONS

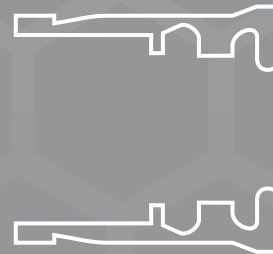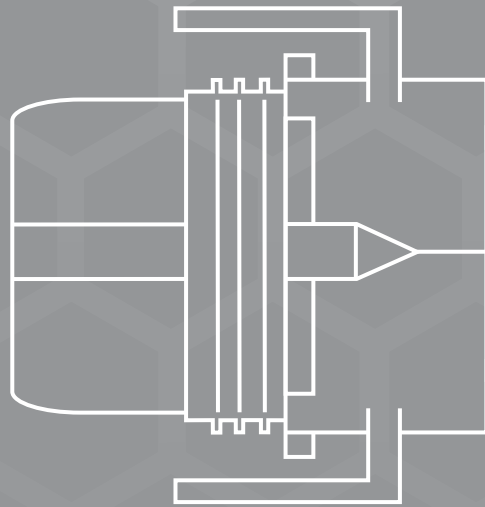




WARNING: By reading this document, I agree it is only to be used as an educational guide. The Retrofit Source makes no guarantee on any finished results, nor are they to be held responsible for any damage, misuse, or personal injuries. Use at your own risk. If you are unable to clearly understand and adapt the information below to your own application, professional installation is recommended.

H1 / H3
Male




H4
Male



H7
Male



H11
Male

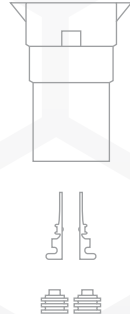


H13 / 9008
Male




9005 / 9006
Male




9007 / 9004
Male

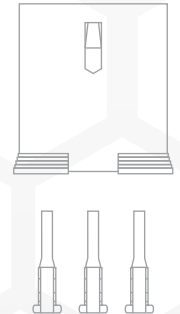

H1 / H3
Female




H4
Female



H7
Female




H11
Female

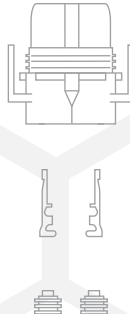


H13 / 9008
Female



9005
Female



9006
Female



9007 / 9004
Female

