




#### C18040 & C18041 Installation Procedure


- 1. Remove the center capscrew using a 3/16" Allen key.
- 2. Place one half of the switch bracket on each side of the transmission shifter
- 3. Loosely install the center capscrew.
- 4. Orientate the switch in the bracket for desired position (on/off) and adjust the height of the bracket for the drivers convenience.
- 5. Torque the capscrew to 50 in-lbs.

### Consult the diagrams below for the correct wiring connections:

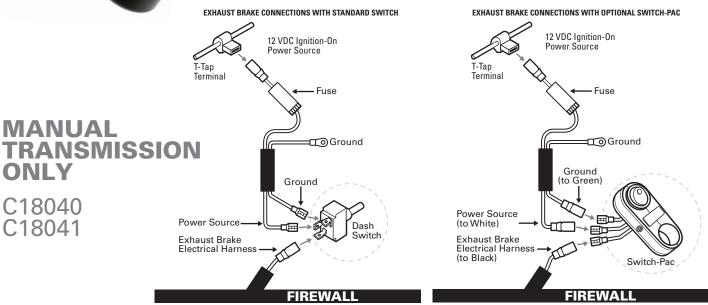

# **MANUAL** TRANSMISSION

C18042

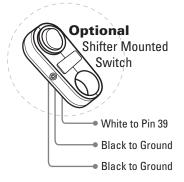

## **UNIVERSAL ACCESSORY**

