

# LML PCV REROUTE KIT INSTALLATION INSTRUCTIONS



## Tools & Supplies Required

- ❑ 10mm Socket and ratchet
- ❑ 8mm or 5/16 socket or flat blade screwdriver
- ❑ Side cutter or pliers

**Disclaimer:** This kit is designed for **OFFROAD RACE USE ONLY**. It is not intended, and should not be used for street-driven vehicles. Installing this kit **will** void your factory warranty and can potentially cause damage if installed incorrectly. Read these instructions!

We will not be held liable for any damage caused to your truck from the installation of this kit.

**Step 1:** Remove (x2) bolts on the PCV injection bung (A), located on the back side of the


turbo intake with a 10 mm socket.

**Step 2:** Remove the crimped hose from the PCV valve (B) on the drivers side valve cover using your pliers/side cutters.

**Step 3:** Slip the hose clamp onto one end of the new oil resistant breather hose and slide onto the valve cover PCV valve. Clamp it up with your 8mm, 5/16", or flathead.

**Step 4:** Use the supplied zip ties to hold the hose in a desired routing, down your engine, to a breather, or venting straight to atmosphere.

**You're done!**

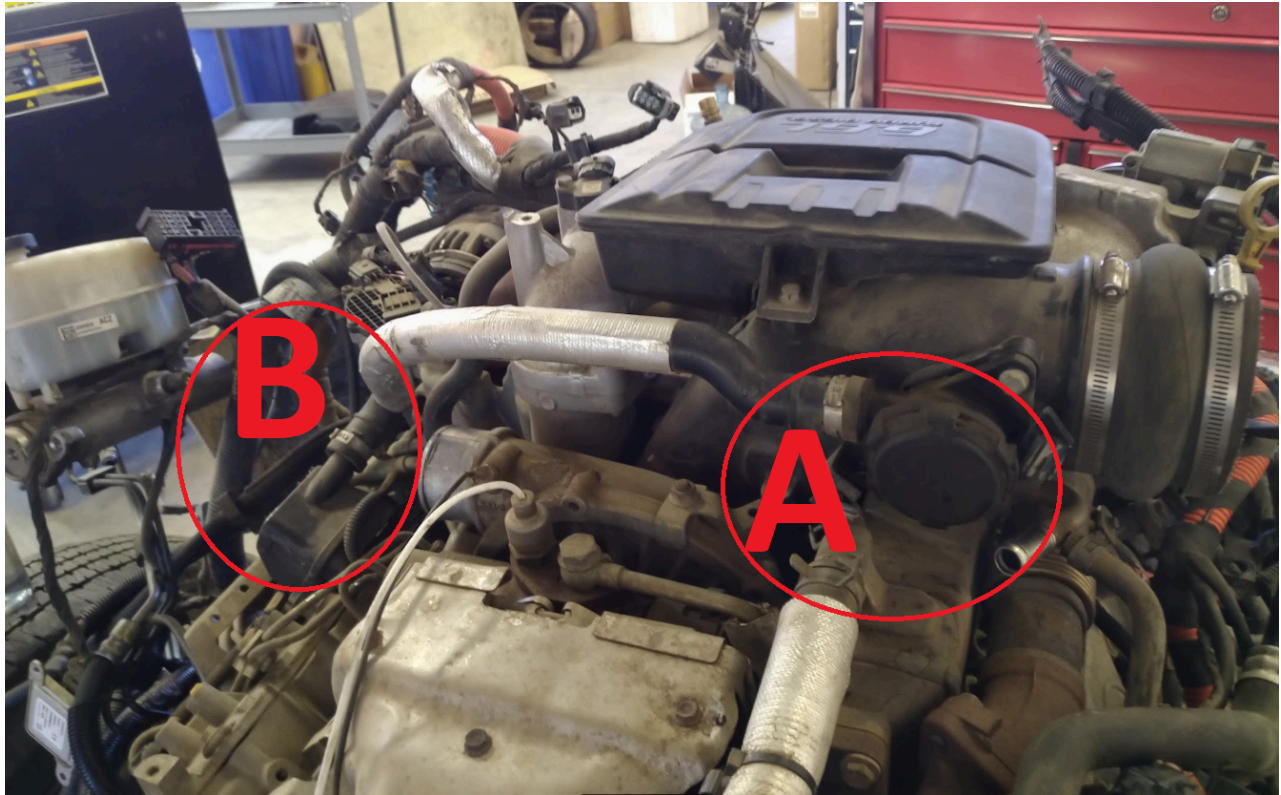

*Engine as viewed from behind, i.e. in the same direction as if you were sitting in the truck.*