



THE AUTOMOTIVE LIGHTING BENCHMARK

# X3B35 & X3B40 THIRD BRAKE LIGHT INSTALLATION GUIDE

**WARNING:** By reading this document, you agree it is only to be used as an educational guide. Morimoto Lighting nor its dealers make guarantees on any finished results, nor are they to be held responsible for any damage, misuse, or personal injuries. If you are unable to clearly understand and adapt the information below, professional installation is recommended.

## PACKAGE CONTENTS




X3B35 (W/ CAMERA)

OR



X3B40 (W/O CAMERA)

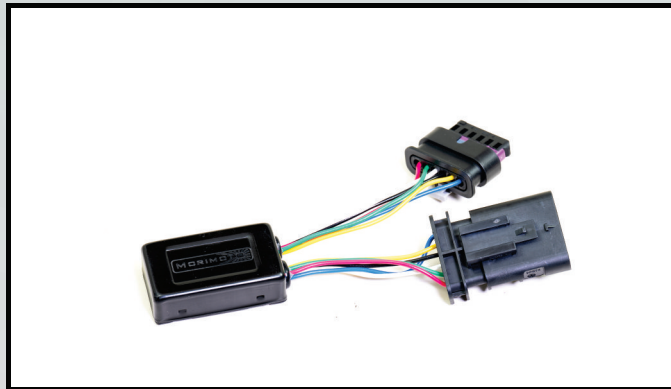

OPTIONAL X3B01 RAPID FLASH MODULE

## TOOLS REQUIRED


T20 TORX BIT OR DRIVER

# INSTALLATION PROCESS


1. Remove the 4x T20 Torx screws holding the brake light in place. Pull brake light away from vehicle.




2. Locate the plastic clip inside the truck cab and press down to release them.

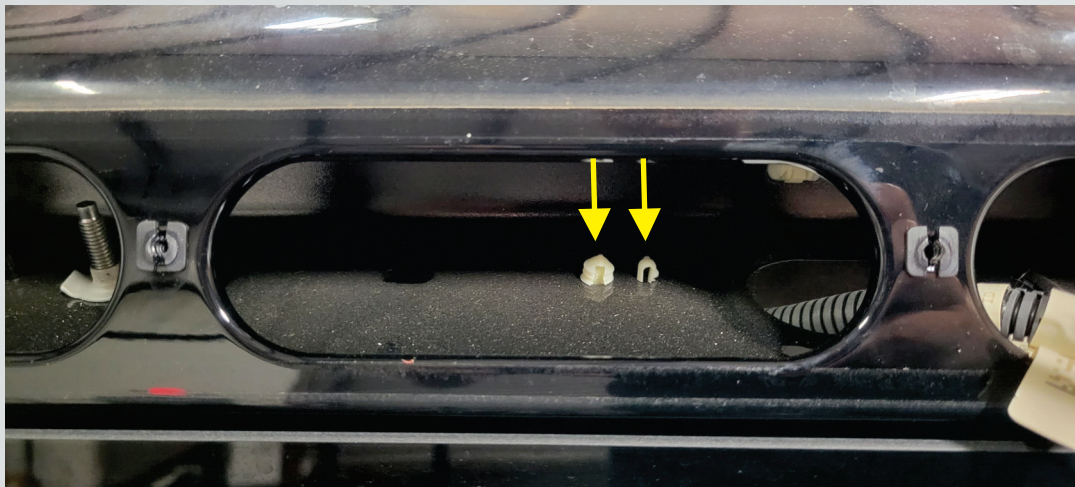

3. Slide the connector wiring over to the right and through the opening in the cab. Disconnect connection and remove the third brake light. Set aside.

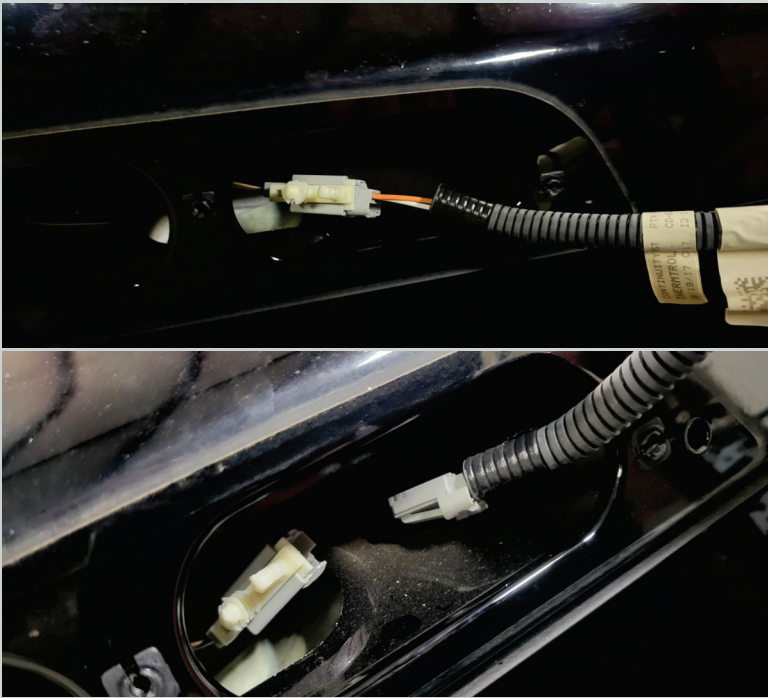

4. Remove the two plastic clips from the cab opening. Set aside.

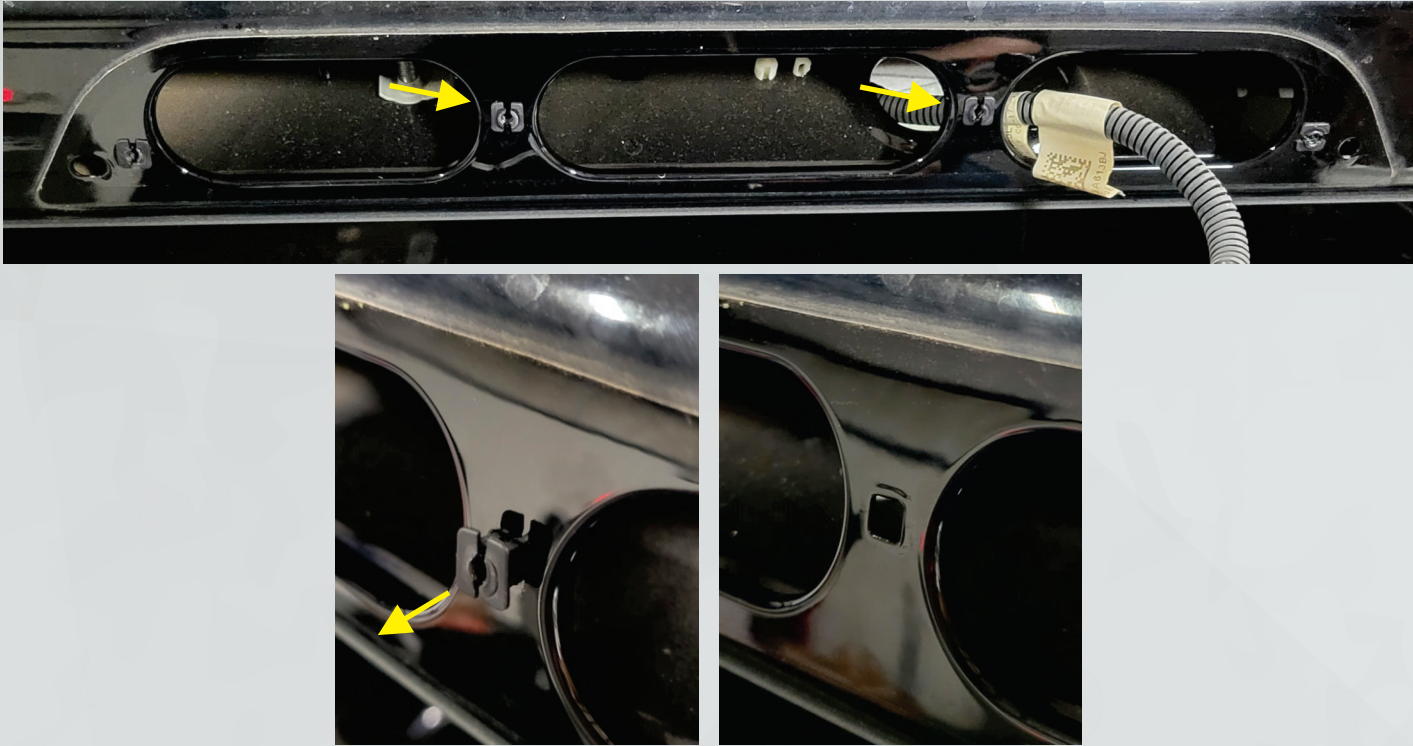

5. Find replacement center plastic clips in hardware bag and insert into X3B Brake Light as shown.




**TRUCKS W/O CAMERA: SKIP TO STEP 9**



6. (Trucks w/ Camera): Unplug the camera connector from the back of the factory third brake light. Remove 2 (two) screws from the camera bracket and remove the bracket.



7. (Trucks w/ Camera): Remove camera from stock brake light. Install in X3B Brake Light.

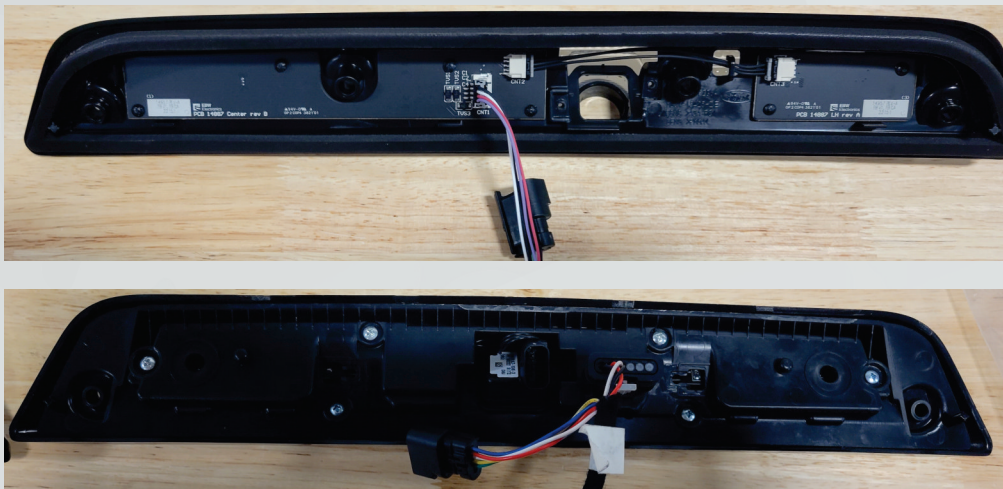

8. Install camera cover, screws, and connector on to new X3B Brake Light.

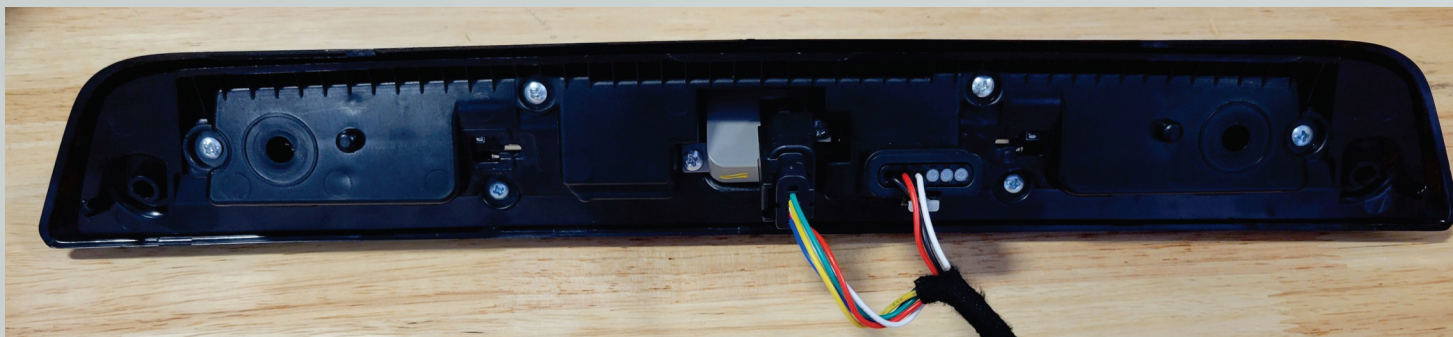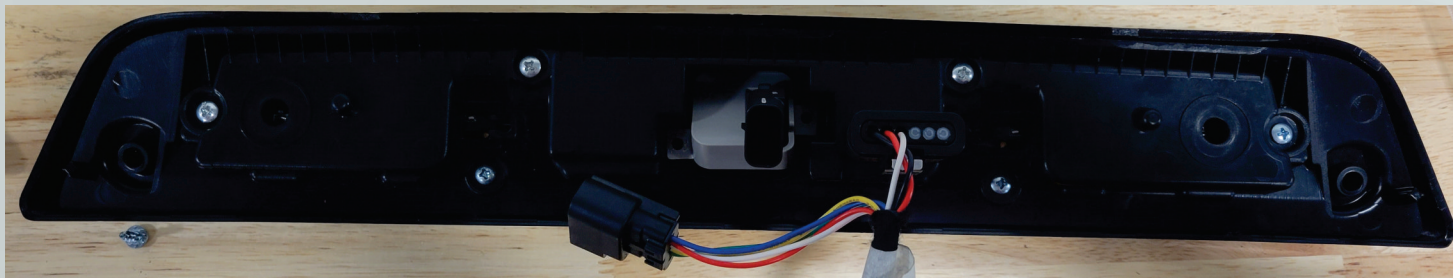

9. For steps on installing the Rapid Flash Module (SKU X3B01), see Page 6.

10. Installation is reverse of removal.

11. Turn on the truck and go through all modes to ensure proper functionality.

-END-

## RAPID FLASH MODULE INSTALLATION

1. Unclip the wiring harness from the back of the X3B Brake Light (Image 1)
2. Plug the female connector into the X3B Brake Light (Image 2)
3. Plug X3B Brake Light harness into male connector of the flasher module.
4. Peel back wrapper from double-sided tape on the flasher module. Stick and secure module onto either the back of the X3B Brake Light or the inside of the light cavity.
5. Turn on the truck and go through all modes to ensure proper functionality.
6. Enjoy your new X3B Brake Light with Rapid Flash!

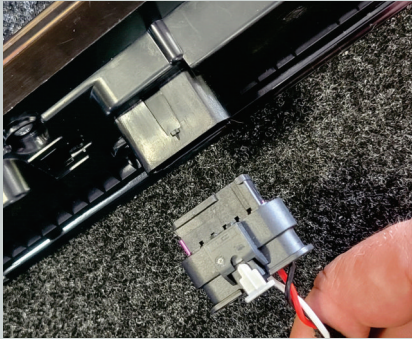


Image 1

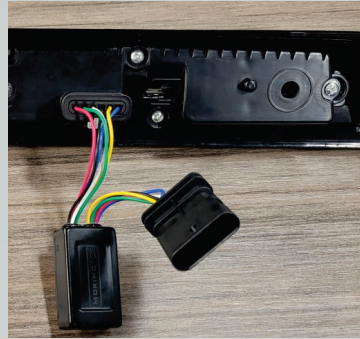


Image 2

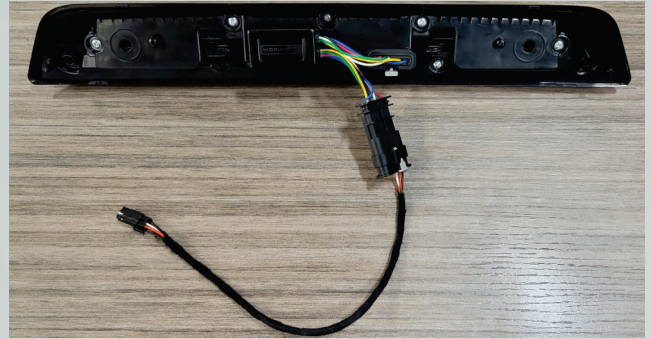


Image 3

-END-