



3 CUBBY STORAGE UNIT

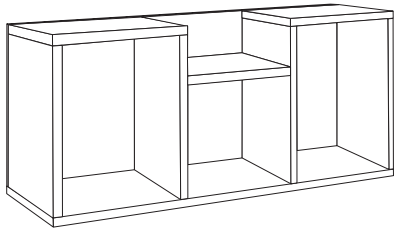


Included

28 Pins

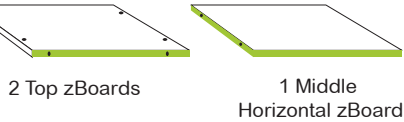


2 Top zBoards

1 Middle Horizontal zBoard

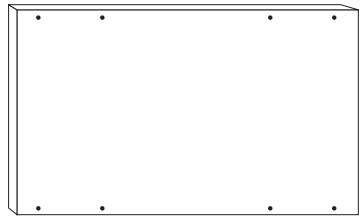

1 Back zBoard

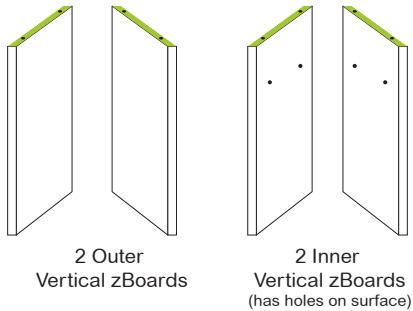

2 Outer Vertical zBoards

2 Inner Vertical zBoards (has holes on surface)




1 Bottom zBoard



- Assemble your unit on a flat even surface
- Make sure zBoard surfaces are clean and dry

- When moving your Way Basics unit, lift from the bottom
- Use indoors and in dry areas only. Do not use in the bathroom

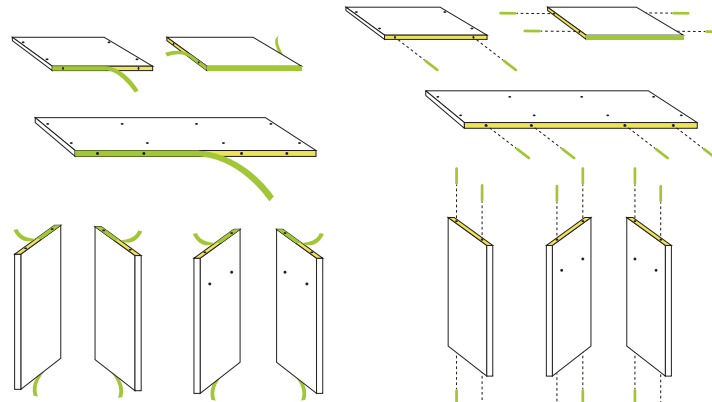


1 Carefully remove the protective layer on the zBoards (making sure not to remove the 3M adhesive).
Tip: Peel protective layer from side.

2 Insert pins as shown.

3 Align Middle Horizontal zBoard to holes in Inner Vertical zBoards.



4 Align Bottom zBoard as shown and press firmly to secure unit together.

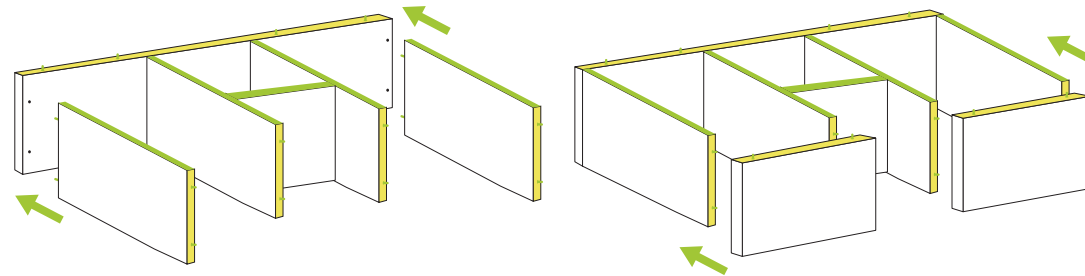

5 Align Outer Vertical zBoards to holes in Bottom zBoard.

6 Align Top zBoards to Vertical zBoards.

7 Align Back zBoard and press firmly to secure unit together. Flip right side up as shown.

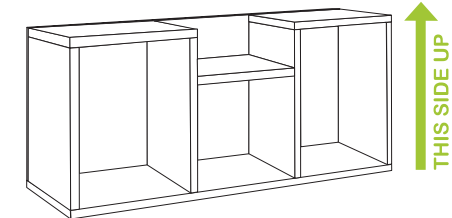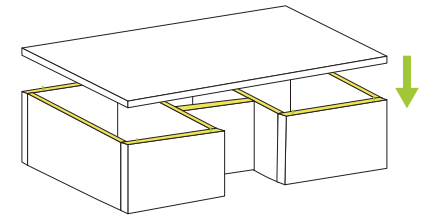

WARNING: CHOKING HAZARD
Small parts NOT for children under 3 years